

BASE STATION

SERVICE NEWS 034

Software upgrade of basestations

Caused by confusion about software upgrade of basestations from CCFP Adm. Program ver. 5 or newer (Ref. Service News 28 - 32) this is the step by step procedure to follow.

1. Download the necessary software from here
Ref. Service News 28 - 32.
2. If the CCFP containing hardware PCS 6 or newer start up
CCFP Adm. Program ver. 5 or newer and go to step 6.
3. For CCFPs contains hardware PCS 5 or older, start up CCFP Adm. Program ver. 5 or newer.
 - o Click Menu Options then Preferences, use Advanced Options.
 - o Click Transfer Flash Code to CCFP and load the Flash file named f1____rl.KTB into the CCFP (it will take 3-4 min.).
 - o After CCFP restart, the program will terminate, Click OK.

4. Start up CCFP Adm. Program ver. 5 or newer.
5. The program will start in Menu Debug, Click RFP Load Flash
and go to step 7.
6. Click Options, Click Debug, Click RFP Load Flash
7. Choose that or those Basestations you will upgrade by Click 's in the square. Click Load Code.
8. The window Open Bsmon pops up. Open the file Bsmon.ktb
9. The window Open RFP code file pops up. Open the file rf03A_00.ktb
10. The window Transferring data pops up.
 - o **Warning!!** Time for download of RFP software = Number of RFPs x 4 minutes.
 - o During download of RFP software - **Do not** operate the PC for other purposes.

11. If the CCFP contains hardware PCS 5 or older go to step 14.
12. Check RFP software PCS by Menu Debug - View RFP Data.
13. If the CCFP contains hardware PCS 6 or newer the upgrade is finished.
14. After the download is completed the program will terminate.
15. Start up CCFP Adm. Program ver. 5 or newer.
16. Check RFP software PCS by Menu Debug - View RFP Data.
17. Click RFP Load Flash - Transfer Flash Code to CCFP.
18. The window Open pops up. Open the file F4d__00.ktb.
19. After the download is completed the program will terminate.
And the upgrade is finish.
20. End.