



Polycom[®] RMX[®] 1500/2000/4000 Getting Started Guide

Trademark Information

Polycom®, the Polycom “Triangles” logo, and the names and marks associated with Polycom’s products are trademarks and/or service marks of Polycom, Inc., and are registered and/or common-law marks in the United States and various other countries.

All other trademarks are the property of their respective owners.

Patent Information

The accompanying product is protected by one or more U.S. and foreign patents and/or pending patent applications held by Polycom, Inc.

© 2012 Polycom, Inc. All rights reserved.

Polycom, Inc.
4750 Willow Road
Pleasanton, CA 94588-2708
USA

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Polycom, Inc. Under the law, reproducing includes translating into another language or format.

As between the parties, Polycom, Inc., retains title to and ownership of all proprietary rights with respect to the software contained within its products. The software is protected by United States copyright laws and international treaty provision. Therefore, you must treat the software like any other copyrighted material (e.g., a book or sound recording).

Every effort has been made to ensure that the information in this manual is accurate. Polycom, Inc., is not responsible for printing or clerical errors. Information in this document is subject to change without notice.

Table of Contents

System Overview	1-1
RMX 1500/2000/4000	1-2
RMX Main Features	1-3
Conferencing Modes	1-3
Dynamic Continuous Presence	1-3
Video Switching	1-5
Operator Conference	1-5
Video Resolutions	1-5
Resolution Configuration for CP	1-5
Video Switching	1-5
H.239 / People+Content	1-6
Video Clarity™	1-6
IVR-Enabled Conferencing	1-6
PCM	1-6
Entry Queue	1-7
Conferencing Capabilities and Options	1-7
On Demand Conferencing	1-7
Permanent Conference	1-7
Scheduled Conferencing / Reservations	1-7
Polycom Conferencing for Microsoft Outlook®	1-7
Connection Methods	1-8
Cascading Conferences	1-8
Gateway	1-8
Security	1-8
LAN Redundancy	1-9
Conference Management and Monitoring Features	1-9
Card Configuration Modes	1-10
Prerequisites	1-10
Workstation Requirements	1-11
Windows 7™ Security Settings	1-11
Internet Explorer 8 Configuration	1-13
First Time Installation and Configuration	2-1
Preparations	2-2
Gather Network Equipment and Address Information	2-2
IP Services	2-2
Management Network	2-2
Default IP Service (Conferencing Service)	2-2
IP Network Services Required Information	2-2
ISDN/PSTN Services	2-4
Unpacking the RMX	2-4
Unpacking the RMX 1500	2-4
Unpacking the RMX 2000	2-4
Unpacking the RMX 4000	2-5

Modifying the Factory Default Management Network Settings on the USB Key	2-7
Hardware Installation and Setup	2-9
Installing the Telescopic Rail Runners on the Rack	2-9
Telescopic Rail Runners Accessory Kit	2-9
Telescopic Rail Runner Assembly	2-10
Installing the RMX 1500	2-13
Optional. Installing the RTM ISDN 1500 Card on the RMX 1500	2-13
Mounting the RMX 1500 in a Rack	2-14
Connecting Cables to the RMX 1500	2-16
Installing the RMX 2000	2-17
Optional. Installing the RTM ISDN Card on the RMX 2000	2-17
Mounting the RMX 2000 in a Rack	2-18
Connecting Cables to the RMX 2000	2-19
Installing the RMX 4000	2-20
Optional. Installing the RTM ISDN Card on the RMX 4000	2-20
Mounting the RMX 4000 in a Rack	2-21
Connecting the RMX 4000 to the Power Sources	2-22
Connecting Cables to the RMX 4000	2-24
First Entry Power-up and Configuration	2-25
Procedure 1: First-time Power-up	2-25
Procedure 2: Product Registration	2-26
Obtaining the Activation Key	2-26
Procedure 3: Connection to MCU	2-26
Procedure 4: Modifying the Default IP Service and ISDN/PSTN Network Service Settings	2-28
Fast Configuration Wizard	2-29
Selecting the RMX Web Client Languages	2-43
RMX's Default Conferencing Settings	2-44
Customizing the RMX's Default Conferencing Settings	2-46
Basic Operation	3-1
Starting the RMX Web Client	3-1
RMX Web Client Screen Components	3-2
Viewing and System Functionality Permissions	3-3
Conferences List	3-4
List Pane	3-5
RMX Management	3-5
Status Bar	3-5
System Alerts	3-5
Participant Alerts	3-6
Port Usage Gauges	3-6
MCU State	3-7
Address Book	3-7
Displaying and Hiding the Address Book	3-8
Conference Templates	3-8
Displaying and Hiding Conference Templates	3-8
Customizing the Main Screen	3-9

Increasing and Decreasing the Text Size	3-10
Customizing the RMX Management Pane	3-10
Starting a Conference	3-12
Starting a Conference from the Conferences Pane	3-13
General Tab	3-14
Participants Tab	3-17
Information Tab	3-20
Starting a Reservation	3-22
Starting an Ongoing Conference From a Template	3-23
Starting a Meeting from Microsoft Outlook using the Polycom Conferencing Add-in to Microsoft Outlook	3-24
Starting an Audio Meeting from a Microsoft Outlook Polycom Meeting Invitation	3-24
Click-to-Conference	3-24
Connecting to a Conference	3-25
Direct Dial-in	3-25
H.323 Participants	3-25
SIP Participants	3-26
ISDN/PSTN Participants	3-26
Entry Queue Access	3-27
H.323 Participants	3-27
SIP Participants	3-28
ISDN and PSTN Participants	3-28
Connecting to a Polycom Conference from an Outlook Meeting Invitation	3-29
Dial-out Participants	3-29
Automatic Dial Out	3-29
Manual Dial Out	3-29
Gathering Phase	3-30
Gathering Phase Guidelines	3-31
Text Indication in the Video Layout	3-32
Site Names	3-32
Displaying and Hiding Site Names	3-33
Transparent Site Names	3-34
Permanent Display of Site Names	3-34
Location of Site Names	3-34
Text Indication	3-35
Closed Caption	3-35
Message Overlay for Text Messaging	3-36
Monitoring Ongoing Conferences	3-37
General Monitoring	3-37
Multi Selection	3-38
Using the Chairperson Password for Filtering	3-38
Conference Level Monitoring	3-39
Roll Call/ Audible Tones During an Ongoing Conference	3-41
Audio Only Message	3-41
Secured Conference Monitoring	3-41
Monitoring Ongoing Gateway Sessions	3-41
Participant Level Monitoring	3-42

Participant Connection Monitoring	3-42
Video Preview	3-45
Operations Performed During On Going Conferences	3-47
Conference Level operations	3-47
Changing the Duration of a Conference	3-47
Adding Participants from the Address Book	3-48
Moving Participants	3-48
Saving an Ongoing Conference as a Template	3-50
Copy and Paste Conference	3-50
Copy Conference	3-50
Paste Conference	3-51
Paste Conference As	3-51
Changing the Video Layout of a Conference	3-52
Video Forcing	3-54
Enabling and Disabling Video Clarity™	3-55
Sending Messages to All Conference Participants Using Message Overlay	3-55
Auto Scan	3-56
Customized Polling	3-56
Sending Text Messages to All Participants Using Message Overlay	3-58
Participant Level Operations	3-60
Copy Cut and Paste Participant	3-62
Copy Participant	3-62
Cut Participant	3-62
Paste Participant	3-63
Paste Participant As	3-64
Sending Messages to Selected Participants Using Message Overlay	3-65
Personal Layout Control with the RMX Web Client	3-66
Personal Layout Selection with Click&View	3-68
Personal Layout Control via Polycom Touch Control	3-70
Conference Control Using DTMF Codes	3-70
Requesting Help	3-72
Request to Speak	3-72
Invite Participant	3-73
Personal Conference Manager (PCM)	3-75
Guidelines	3-75
System Flag	3-76
PCM Interface	3-77
Initiating PCM	3-77
Remote Control Device Keys	3-78
Menu Navigation - Arrow and Zoom Keys	3-78
PCM Main Menu - Level 1	3-80
Click&View	3-80
Invite Participant	3-80
Participants Mute/Status	3-81
Camera Control	3-83
Video Force	3-84
Recording	3-84
PCM Main Menu - Level 2	3-85

Drop Participant	3-85
Terminate Conference	3-86
.....	3-86
Appendix A - Glossary	A-1
Appendix B - Troubleshooting	B-1
RMX Web Client Installation - Troubleshooting Instructions	B-1
Procedure 1: Ending all Internet Explorer Sessions	B-1
Procedure 2: Deleting the Temporary Internet Files, RMX Cookie and RMX Object	B-2
Procedure 3: Managing Add-ons Collisions	B-6

System Overview

This Getting Started Guide provides information on the installation and basic operation of your RMX system.



Chairpersons and Operators (users who start and manage conferences for other users) please read:

- *Chapter 1 – System Overview*
- *Chapter 3 – Basic Operation*

System Administrators please read:

- *Chapter 1 – System Overview*
- *Chapter 2 – First Time Installation and Configuration*
- *Chapter 3 – Basic Operation*

For more information on configuring and managing the system, refer to the *RMX 1500/2000/4000 Administrator's Guide* included with the system.



Unless specified differently, all screen captures, Diagrams and Figures included in this guide apply to RMX 1500, RMX 2000 and RMX 4000.

RMX 1500/2000/4000

The Polycom RMX 1500/2000/4000 Multipoint Control Unit (MCU) is a high performance, scalable, IP-network (H.323 and SIP) and ISDN/PSTN solution that provides the user with feature-rich and easy-to-use multipoint voice and video conferencing.

The RMX MCU meets International Telecommunication Union - Telecommunication Standardization Sector, (ITU-T, formerly CCITT) standards for multipoint multimedia bridging devices, and meets ETSI standards for telecommunication products.

The RMX unit has, in addition, been designed in compliance with IETF (Internet Engineering Task Force) – a large open international community of network designers, operators, vendors, and researchers concerned with the evolution of the Internet architecture and the smooth operation of the Internet.

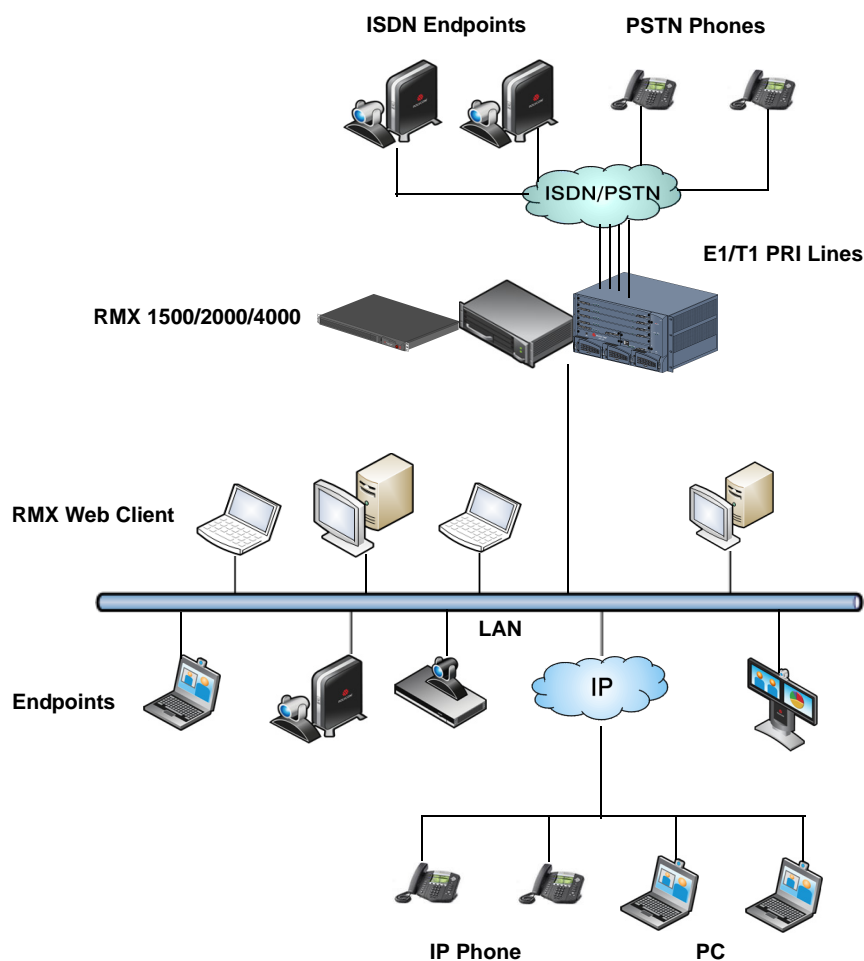


Figure 1-1 Multipoint Video Conferencing using a Polycom RMX 1500/2000/4000

The Polycom RMX 1500/2000/4000 unit can be controlled via the LAN, by the *RMX Web Client* application, using Internet Explorer® installed on the user's workstation or the RMX Manager application. The RMX Manager can control several RMX units (RMX 1500, RMX 2000 and RMX 4000). For more information about the RMX Manager, see "RMX Manager Application" on page 19-1.

In the RMX 1500/2000, RMX management and IP conferencing are performed via a single LAN port. The networks can be separated in Maximum Security Environments.

In the RMX 4000, RMX management and IP conferencing are performed via two different LAN ports. The networks can be separated in Maximum Security Environments.

RMX 1500 supports one ISDN card with up to 4 E1/T1 PRI lines.

RMX 2000 and RMX 4000 support a maximum of two RTM ISDN cards, each providing connection for up to either 7 E1 or 9 T1 PRI lines.

On RMX 1500/2000/4000, E1 and T1 connections cannot be used simultaneously.

RMX Main Features

Conferencing Modes

Dynamic Continuous Presence

The dynamic Continuous Presence (CP) capability of the RMX system enables viewing flexibility by offering multiple viewing options and window layouts for video conferencing. By default every conference, Entry Queue and Meeting Room has the ability to declare the maximum CP resolution as defined for the system. This includes conferences launched by the *RMX Web Client* and conferences started via the API.

CP mode conferencing is defined by:

- Conference profile settings:
 - Conference Line Rate.
 - Video Quality selection – Motion or Sharpness.
- Endpoint Capabilities – Participants can connect at differing line rates using endpoints with differing capabilities.

Video Layouts in CP

Thirty-five layouts are available to accommodate different numbers of participants and conference settings. The VUI annex to the H.264 protocol for endpoints that transmit wide video format instead of 4CIF resolution is also supported.

Table 1-1 Continuous Presence – Video Layouts













			
			
			

Table 1-1 Continuous Presence – Video Layouts (Continued)

Telepresence Mode

TPX (Telepresence) and RPX (Realpresence) room systems are configured with high definition cameras and displays that are set up to ensure that all participants share a sense of being in the same room.

The RMX enables *Telepresence Rooms* to connect to conferences where point-to-point connections cannot be used.

Additional video layouts have been created to give *Telepresence* operators more video layout options when configuring TPX room systems. These additional video layout options are available for selection when *Telepresence* is selected in the conference profile.

Multiple Switching Modes

If the number of participants is higher than the number of video windows in the selected layout, switching between video participants can be performed in one of these modes:

- Voice activation
- RMX user forces participants to selected video window
- *Lecture Mode* - The lecturer is viewed in full screen by all conference participants, while the audience is “time-switched” in the speaker’s view
- *Presentation Mode* - When the speaker’s presentation extends beyond a predefined time, he/she becomes the current lecturer and the conference switches to Lecture Mode

Video Switching

In Video Switching (VSW) mode all participants see the same video picture (full screen). Only one CIF video resource is used for each connection.

VSW mode conferencing is defined by:

- Conference *Line Rate* setting in the conference profile
 - All endpoints must connect to the conference at the same *Line Rate*. Line rates range from 192Kbps to 6Mb. The RMX will always connect participants at the highest possible video quality that is supported by the conference *Line Rate*.
- Conference *Video protocol and Resolution* setting in the conference profile
 - All endpoints must connect to the conference at the same resolution. Video Protocol and Resolution ranges from H.261 CIF to H.264 1080p 30.
- Endpoint capabilities
 - Compliant endpoints must connect to conferences at the conference line rate and resolutions.

Operator Conference

In Continuous Presence conferencing license, a special conference that enables the RMX user, acting as an operator, to assist participants without disturbing ongoing conferences and without being heard by other conference participants. The operator can move a participant from an Entry Queue or ongoing conference to a private, one-on-one conversation in the Operator conference.

Video Resolutions

Resolution Configuration for CP

The *Resolution Configuration* dialog box enables the RMX administrators to modify the video resolution decision matrix, effectively creating their own decision matrix. The minimum threshold line rates at which endpoints are connected at the various video resolutions can be optimized by adjusting the resolution sliders.

For more information see the *RMX 1500/2000/4000 Administrator's Guide "Video Resolutions in CP Conferencing"* on page [2-1](#).

Video Switching

In Video Switching (VSW) conferences, participants must connect at the conference line rate, video protocol and resolution. Endpoints that cannot connect using these settings will be connected using Audio only and their status will appear as *Secondary* (no video).

The video quality for the conference is determined by the conference video protocol and resolution and it should be set based on the endpoint with the lowest capabilities that will be connected to the conference.

- Available resolutions in Video Switching mode are: H.261 CIF, H.263 CIF, H.264 CIF, H.264 SD 30, H.264 720p 30, H.264 720p 60 and H.264 1080p 30.

H.239 / People+Content

The *H.239* protocol allows compliant endpoints to share content. By default, all *Conferences*, *Entry Queues*, and *Meeting Rooms* launched on the RMX have *H.239* capability. This protocol is also supported in *MIH Cascading* conferences.

Conferences can include a mix of endpoints that support *H.239* or *People+Content*. *People+Content* is *Polycom's* proprietary equivalent of *H.239*.

Video Clarity™

The *Video Clarity* feature applies video enhancing algorithms to incoming video streams of resolutions up to and including SD. Clearer images with sharper edges and higher contrast are sent back to all endpoints at the highest possible resolution supported by each endpoint. All layouts, including 1x1, are supported.

Video Clarity can only be enabled for *Continuous Presence* conferences in *MPM+* and *MPMx Modes*.

IVR-Enabled Conferencing

Interactive Voice Response (IVR) is a software module that automates the connection process and lets participants perform various operations during ongoing conferences. The participants use their endpoints' keypads, remote controls and touch control devices to interact with the conference's menu-driven scripts using DTMF codes.

Operations that can be performed by participants or chairpersons during a conference include:

- Initiate **Polycom's Click&View™** application to change the local screen layout.
- Mute or unmute the participant's audio channel.
- Adjust the participant's broadcasting and listening audio volume.
- Play the Help menu.
- Mute or unmute undefined dial-in participants upon their connection to the conference.
- Request a Roll Call and stop the Roll Call names review
- Secure and unsecure a conference.
- Request individual and conference assistance.
- Manually terminate the conference.

PCM

The *Personal Conference Manager (PCM)* interface enables the conference chairperson to control various conference features using his/her endpoint's remote control device.

The following conference operations can be performed:

- Initiate **Polycom's Click&View™** application to change the local screen layout.
- Invite participants to connect to the conference.
- View and control the audio and video of each connected endpoint.
- Camera Control - control the camera of a remote endpoint using (*FECC*).

- Control the camera of a connected endpoint.
- Video Force a specific participant to a specific window of the video layout.
- Initiate and control recording of the conference.
- Disconnect a participant.
- Terminate the conference.

Entry Queue

An Entry Queue is a special routing lobby for video and audio participants. After dialing the Entry Queue ID or dial-in number (ISDN/PSTN), voice prompts from an IVR service are used to connect the participants to the appropriate conference.

This service can also be used (if required) to verify the participant's right to start an Ad Hoc conference or to join an ongoing conference.

Conferencing Capabilities and Options

On Demand Conferencing

The following options are available to set up conferences:

- *New Conference* – set up once, use once.
The conference is deleted from the MCU after it ends.
- *Meeting Rooms* – set up once, use many times.
Meeting Rooms are saved in memory (using no resources) and can be activated as many times as needed.
- *Ad Hoc Entry Queue* – no setup, a new conference can be created when a user dials in and enters a conference ID that is not being used by an existing conference or Meeting Room.
- *Gateway calls* – from IP endpoints to other participants, using the direct dialing method, with up to 10 destination numbers contained in a single dial string.

Permanent Conference

A *Permanent Conference* is an ongoing conference with no predetermined *End Time*, continuing until it is terminated by an administrator, operator or chairperson.

Scheduled Conferencing / Reservations

Reservations provide calendar-based scheduling of single or recurring conferences. These conferences can be launched immediately or become ongoing, at a specified time on a specified date.

Polycom Conferencing for Microsoft Outlook®

Polycom Conferencing for Microsoft Outlook is implemented by installing the *Polycom Conferencing Add-in for Microsoft Outlook* on *Microsoft Outlook* -mail clients. It enables meetings to be scheduled with video endpoints from within *Outlook*. The add-in also adds a *Polycom Conference* button in the *Meeting* tab of the *Microsoft Outlook* e-mail client ribbon.

Connection Methods

IPv4, IPv6, ISDN and PSTN communication protocols are supported for connection to the conference.

- Dial-out: automatically, to pre-defined participants (line rate detection is automatic)
- Dial-in:
 - for participants defined in advance
 - for undefined participants connecting directly to a conference (IP and ISDN/PSTN)
 - for undefined participants via a single dial Entry Queue (IP and ISDN/PSTN)

Cascading Conferences

Cascading enables administrators to connect one conference directly to one or several conferences usually running on different MCUs, depending on the topology, creating one large conference. Supported topologies are:

- Basic Cascading of two MCUs.
- Star Topology.
- Multi Hierarchy Cascading (MIH).

Gateway

Using a special Gateway Profile, the RMX can be used as a gateway that provides connectivity across different physical networks such as H.323, SIP, ISDN and PSTN. The Gateway also provides connectivity between the ISDN/PSTN endpoints and the DMA.

Security

- Media Encryption, available at conference and participant levels, based on AES 128 Media Encryption and DH 1024 Key Exchange standards.
- Secured Communication Mode (SSL/TLS).
- Secured conferences via DTMF codes and limited monitoring of secured conferences.
- Auditor to analyze configuration changes and unusual or malicious activities in the RMX system.
- Network security can be enhanced by separation of the Signaling and Management Networks.
- RMX Users can be disabled by the administrator, or automatically when inactive. Disabled Users can be enabled by the administrator.
- Support for *SNMP* versions 1, 2 and 3.
- In Maximum Security Environments *Ultra Secure Mode* can be implemented. In such an environment, the following attributes are implemented:
 - Password management:
 - Strong Passwords and password re-use / history rules,
 - password aging rules, password change frequency and forcing password change
 - Conference and Chairman Passwords
 - Locking out Users
 - Displaying the User Login record

- Controlling the User Sessions includes:
 - Limiting the maximum number of concurrent user sessions
 - Connection Timeout
 - User session timeout
 - Limiting the maximum number of users that can connect to the system
 - Multiple Network Services

LAN Redundancy

Enables the redundant *LAN* port connection to automatically replace the failed LAN port by using another physical connection and *NIC (Network Interface Card)* should a *LAN* port fail.

Conference Management and Monitoring Features

The Polycom RMX 1500/2000/4000 Web Client and RMX Manager application provide capabilities for management and monitoring of participants and conferences, including the following:

- *Lecture Mode* or *Presentation Mode* in Continuous Presence conferences.
- *Far End Camera Control (FECC/LSD)* in video conferences.
- Automatic termination of idle (no participants) conferences.
- Automatic extension of conference *Duration*.
- Control of listening and broadcasting audio volume for individual participants.
- *Auto Gain Control (AGC)* noise and audio volume regulation for individual participants.
- Conference control via *DTMF* codes from participant's endpoint or telephone.
- Entry, exit and end-of-conference indications.
- *Media Encryption*.
- Active display of all conferences and participants with option to limit display in secured conferences.
- Real-time monitoring of each participant's connection status and properties.
- Multiple drag & drop of participants.
- Easily accessed *Call Detail Records (CDR)* for administrator.
- Active display of all system resources.
- *Closed Caption* provides real-time text transcriptions or language translations of the video conference.
- *Message Overlay* allows messages to be sent to all or specific participants in an ongoing conference.
- *PCM* enables the conference chairperson to control various conference features using his/her endpoint's remote control device.
- *Video Preview* allows RMX users to preview video sent from the participants to the conference and from the conference to the participants.
- *Auto Redial when Endpoint Drops* instructs the RMX to automatically redial *IP* and *SIP* participants that have been abnormally disconnected from the conference.
- *Operator Assistance & Participant Move* for conferences in *CP* mode.
- *Hot Backup* implements a high availability and rapid recovery solution.

Card Configuration Modes

Three *Card Configuration Modes* are supported:

- **MPM Mode** – Supported with *MPM cards* in all RMX 2000 versions prior to Version 7.1.



From *Version 7.1*, *MPM media cards* are not supported.

- **MPM+ Mode** – Supported from Version 4.0, with *MPM+ cards* installed in the RMX 2000 and RMX 4000. It offers:
 - Two *Video/Voice Resource Capacity* resource allocation modes for increased control over system resource allocation.
 - Enhanced *Resource Report* for more accurate system management.
 - Additional video resolutions and video quality.
- **MPMx Mode** – Supported from Version 7.0, with *MPMx cards* installed in the RMX 1500, RMX 2000 and RMX 4000. Over and above *MPM+* it offers:
 - Increased resource capacity.
 - Additional symmetric *HD* resolutions.
 - H.264 High Profile.
 - Additional line rates.
 - Content at 1080p
 - Support of RTV Video protocol
 - Siren LPR
 - Support of Cisco CTS telepresence endpoints

Prerequisites

This manual assumes the user has the following knowledge:

- Familiarity with Windows® XP or Vista® operating systems and interface.
- Familiarity with Microsoft® Internet Explorer® Version 6 or higher.
- Basic knowledge of video conferencing concepts and terminology.

Workstation Requirements

The *RMX Web Client* and *RMX Manager* applications can be installed in an environment that meets the following requirements:

- **Minimum Hardware** – Intel® Pentium® III, 1 GHz or higher, 1024 MB RAM, 500 MB free disk space.
- **Workstation Operating System** – Microsoft® Windows® XP, Vista®, Windows® 7.
- **Network Card** – 10/100 Mbps.
- **Web Browser** – Microsoft® Internet Explorer® Version 6 or higher.
- RMX Web client and RMX Manager are optimized for display at a resolution of 1280 x 800 pixels and a magnification of 100%.



.Net Framework 2.0 is required and installed automatically.

If ActiveX installation is blocked please see the *RMX 1500/2000/4000 Administrator's Guide*, "ActiveX Bypass" on page [20-66](#).



RMX Web Client does not support larger Windows text or font sizes. It is recommended to set the text size to 100% (default) or Normal in the Display settings in Windows Control Panel on all workstations. Otherwise, some dialog boxes might not appear properly aligned. To change the text size, select **Control Panel>Display**. For Windows XP, click the **Appearance** tab, select **Normal** for the Font size and click **OK**. For Windows 7, click the **Smaller - 100%** option and click **OK**.



When installing the *RMX Web Client*, Windows Explorer >Internet Options> Security Settings must be set to *Medium* or less.



It is not recommended to run RMX Web Client and Polycom CMAD applications simultaneously on the same workstation.


Windows 7™ Security Settings

If *Windows 7* is installed on the workstation, *Protected Mode* must be disabled before downloading the Version 7.6.x software to the workstation.

To disable Protected Mode:


- 1 In the *Internet Options* dialog box, click the **Security** tab.

The **Security** tab is displayed.

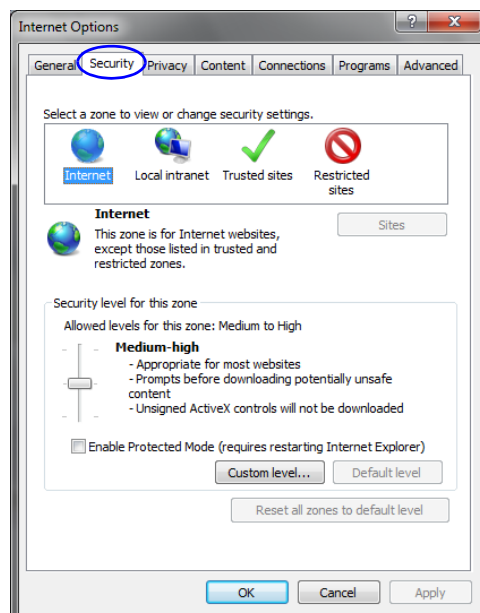

2 Clear the *Enable Protected Mode* check box for each of the following tabs:

- *Internet*
- *Local intranet*
- *Trusted sites*

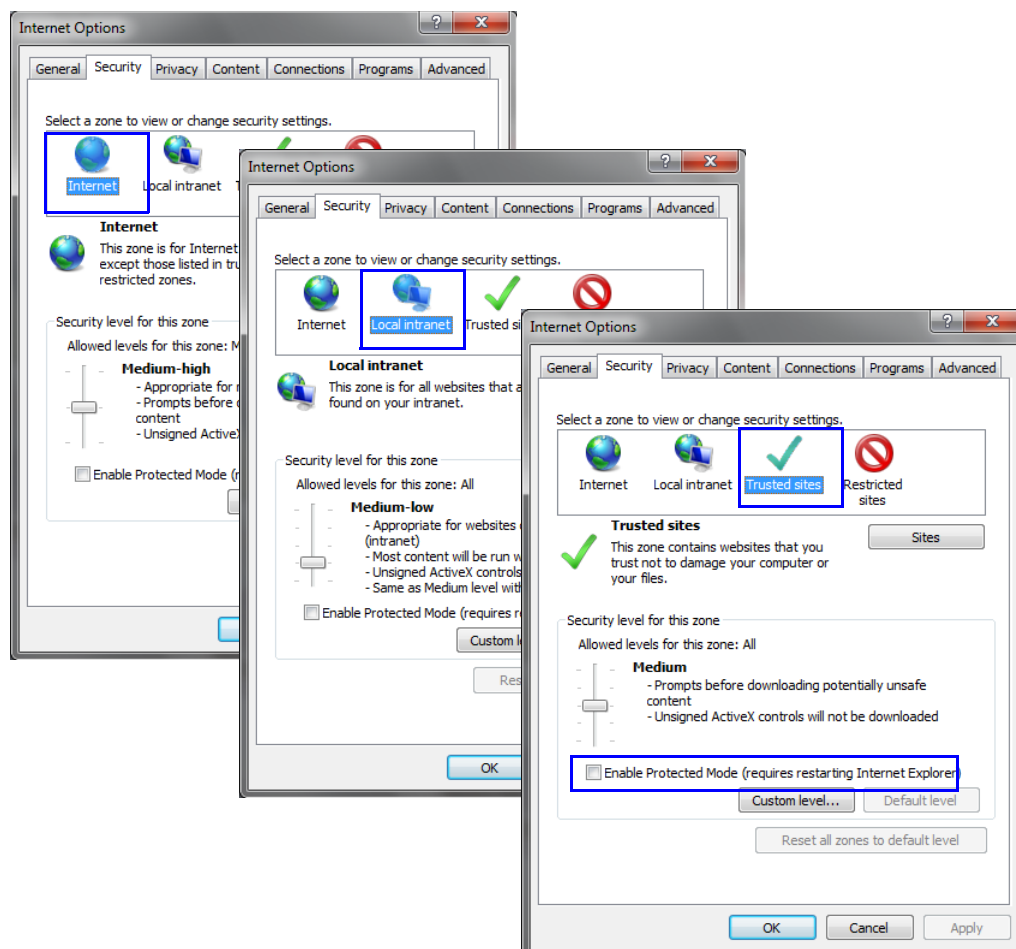

3 After successful connection to RMX, the *Enable Protected Mode* check boxes can be selected to enable *Protected Mode* for the following tabs:

- *Internet*
- *Local intranet*


Internet Explorer 8 Configuration

When using *Internet Explorer 8* to run the *RMX Web Client* or *RMX Manager* applications, it is important to configure the browser according to the following procedure.


To configure Internet Explorer 8:

- 1 Close **all** browsers running on the workstation.
- 2 Use the *Windows Task Manager* to verify that no *iexplore.exe* processes are running on the workstation. If any processes are found, use the **End Task** button to end them.
- 3 Open *Internet Explorer* but do **not** connect to the RMX.

- 4 In the *Internet Explorer* menu bar select **Tools >> Internet Options**.
The *Internet Options* dialog box is displayed with *General* tab open.

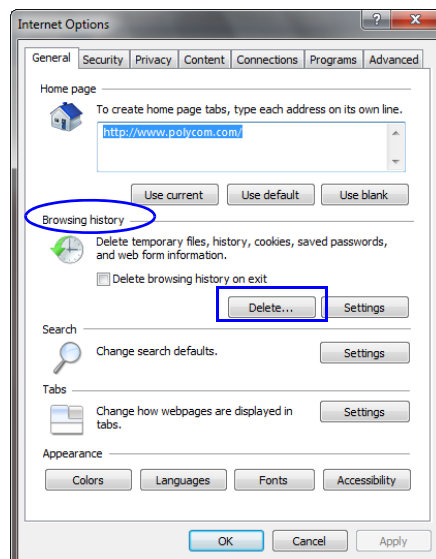


- 5 In the *Browsing history* section, click the **Delete** button.
The *Delete Browsing History* dialog box is displayed.

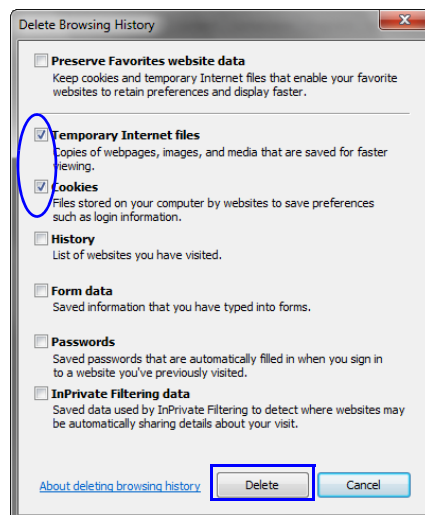


- 6 Select the **Temporary Internet files** and **Cookies** check boxes.
7 Click the **Delete** button.
8 The *Delete Browsing History* dialog box closes and the files are deleted.
9 In the *Internet Options* dialog box, click the **Settings** button.

The *Temporary Internet Files and History Settings* dialog box is displayed.

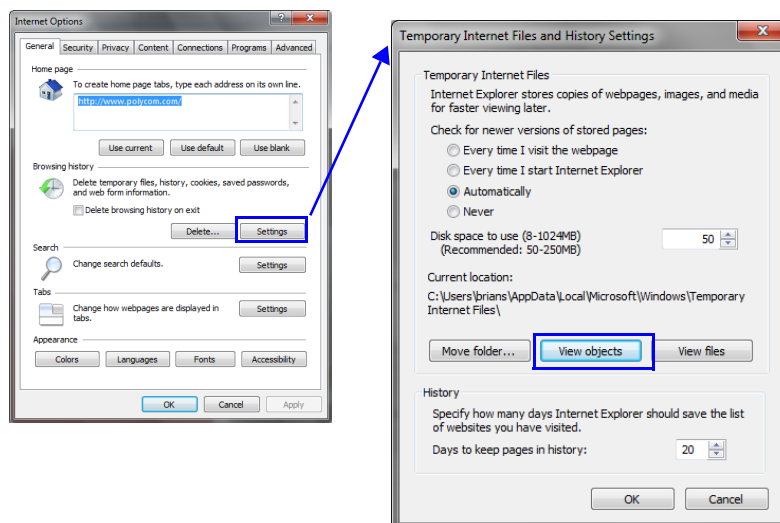


10 Click the **View objects** button.

The *Downloaded Program Files* folder containing the installed *Program Files* is displayed.

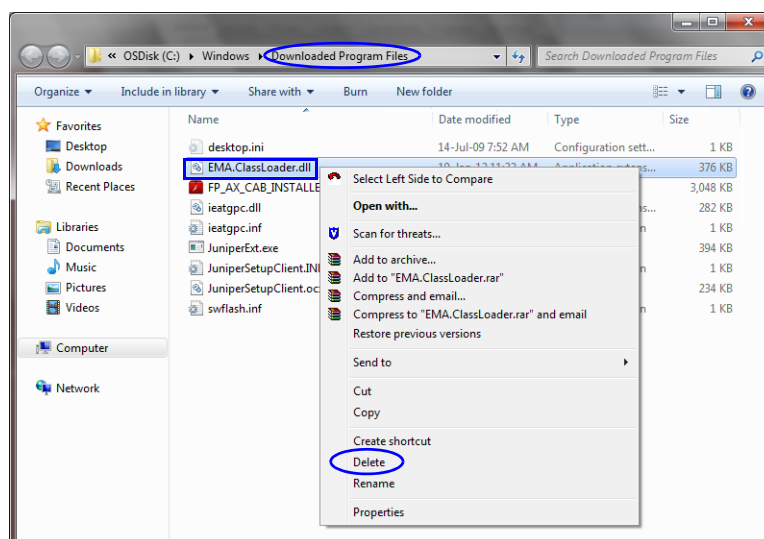

- 11** Select the **EMAClassLoader.dll** file and press the **Delete** key on the workstation or right-click the *EMA.ClassLoader.dll* file and then click **Delete**.
- 12** Close the *Downloaded Program Files* folder and the *Temporary Internet Files and History Settings* dialog box.
- 13** In the *Internet Options* dialog box, click the **OK** button to save the changes and close the dialog box.

First Time Installation and Configuration

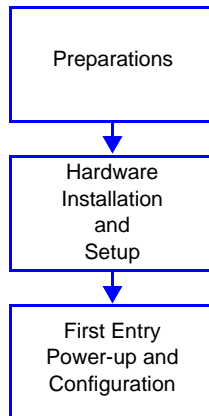

First Time Installation and Configuration of the Polycom RMX 1500/2000/4000 consists of the following procedures:

1 Preparations:

- Gather Network Equipment and Address Information - get the information needed for integrating the RMX into the local network.
- Unpack the RMX.
- Modify the *Management Network parameters* on the USB Key.

2 Hardware Installation and Setup


- Mount the RMX in a rack.
- Connect the necessary cables.

3 First Entry Power-up and Configuration

- Power up the RMX.
- Register the RMX.
- Connect to the RMX
- Configure the *Default IP Network Service*.
- Configure the *ISDN/PSTN Network Service*.

Preparations

Gather Network Equipment and Address Information

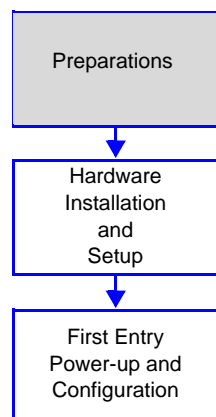

IP Services

The IP addresses and network parameters which enable communication between the RMX, its management application and the conferencing devices are organized in two IP services:

- **Management Network (Control Unit)**
- **Default IP Service (Conferencing Service)**

During the *First Entry Configuration*, the parameters of these two network services are modified to comply with your local network settings.

Management Network

The *Management Network* enables communication between the RMX *Control Unit* and the RMX *Web Client* and is used to manage the RMX.

The RMX is shipped with default IP addresses as listed in Table 2-1.

Management Network Definition

The definition of the Management Network can be done by two methods:

- **USB key (recommended method)** – The system is shipped with a *USB key* containing the default IP addresses for the control unit and the shelf management. These defaults are first modified in the PC and then uploaded to the RMX.
- **Direct connection** – Creating a private network between the RMX and the computer and modifying the management network parameters using *Fast Configuration Wizard* in the RMX *Web Client*.

For more information, see the RMX 1500/2000/4000 *Administrator's Guide*, "Configuring Direct Connections to RMX" on page G-1.

Default IP Service (Conferencing Service)

The *Default IP Service (Conferencing Service)* is used to configure and manage communications between the RMX and conferencing devices.

IP Network Services Required Information

When installing an RMX unit, these default IP addresses must be modified to your local network settings. Therefore it is important that before powering the RMX unit up for the first time, that you obtain the information needed to complete the **Local Network Settings** section of the table from your network administrator.



Media, signaling and Management networks can be physically separated on the RMX system to provide enhanced security. Up to eight media and signaling networks can be defined for RMX 4000, or four for RMX 2000 and two for RMX 1500. For more information see "Multiple Networks" in the RMX 1500/2000/4000 *Administrator's Guide*.

For each RMX, an IP address must be allocated in the local network for the:

- *Control Unit*
- *Signaling Host*
- *Shelf Management* (optional for RMX 1500)

An additional IP address is also required for each *MPM* card installed in the *RMX*.

Examples:

- **RMX 1500** - the network administrator should allocate:
 - **Three** IP addresses in the local network for an *MCU*.
 - **Four** IP addresses in the local network for an *MCU*, if a separate *Shelf Management IP Address* is required.
- **RMX 2000** - the network administrator should allocate:
 - **four** IP addresses in the local network for an *MCU* with one *MPM/MPM+/MPMx* card.
 - **five** IP addresses for an *MCU* with two *MPM/MPM+/MPMx* cards.
- **RMX 4000** - the network administrator should allocate:
 - **four** IP addresses in the local network for an *MCU* with one *MPM+/MPMx* card.
 - **up to seven** IP addresses for an *MCU* with up to four *MPM+/MPMx* cards.



From *Version 7.1*, *MPM* media cards are not supported.

Table 2-1 Network Equipment and Address Information

Parameter	Factory Default	Local Network Settings
<i>Control Unit IP Address</i>	192.168.1.254	
<i>Control Unit Subnet Mask</i>	255.255.255.0	
<i>Default Router IP Address</i>	192.168.1.1	
<i>Shelf Management IP Address</i>	192.168.1.252	
<i>Signaling Host IP address</i>	—	
<i>Media Card 1 IP Address</i>	—	
<i>Media Card 2 IP Address</i> RMX 2000/4000 only	—	
<i>Media Card 3 IP Address</i> RMX 4000 only	—	
<i>Media Card 4 IP Address</i> RMX 4000 only	—	
<i>Gatekeeper IP address (optional)</i>	—	
<i>DNS IP address (optional)</i>	—	
<i>SIP Server IP address (optional)</i>	—	

ISDN/PSTN Services

The ISDN/PSTN Network Service is used to define the properties of the ISDN/PSTN switch and the ISDN lines running from the ISDN/PSTN switch to the ISDN card installed in the RMX.

Before configuring the ISDN/PSTN Network Service, obtain the following information from your ISDN/PSTN Service Provider:

- Switch Type
- Line Coding and Framing
- Numbering Plan
- Numbering Type
- Dial-in number range



If the RMX is connected to the public ISDN Network, an external CSU or similar equipment is needed.

Unpacking the RMX

Unpacking the RMX 1500

To unpack and lift the RMX 1500:

- 1 When you receive the RMX 1500 packing case, inspect the equipment for damage and verify that the components match the packing slip.
- 2 Open the top cover of the packing case.
Boxes are placed on the top Stratocell® and contain the following:
 - *Installation Accessories.* This kit contains the power cables, 3 ethernet cables, USB key and documentation.
 - *Rack Installation Accessories.* This kit contains the accessories for the 19" rack. For more details, see "Telescopic Rail Runners Accessory Kit" on page [2-9](#).
 - *Optional - ISDN Package.* Contains the ISDN card and *ISDN Software License for ISDN/PSTN*.



Write down the RMX's serial number that is on a sticker on the back of the unit. It will be needed for product registration later in the process.

Make sure that boxes contain all the required parts.

Unpacking the RMX 2000

To unpack and lift the RMX 2000:

- 1 When you receive the RMX 2000 packing case, inspect the equipment for damage and verify that the components match the packing slip.
- 2 Open the top cover of the packing case.
Boxes are placed on the top Stratocell® and contain the following:
 - *Installation Accessories.* This kit contains the power cables, 1 ethernet cable, USB key and documentation.
 - *Rack Installation Accessories.* This kit contains the accessories for the 19" rack. For more details, see "Telescopic Rail Runners Accessory Kit" on page [2-9](#).

- *Optional - ISDN Package.* Contains the ISDN card and *ISDN Software License for ISDN/PSTN.*



Write down the RMX's serial number that is on a sticker on the back of the unit. It will be needed for product registration later in the process.

Make sure that boxes contain all the required parts.

Unpacking the RMX 4000

To unpack and lift the RMX 4000:

- 1 When you receive the RMX 4000 packing case, inspect the equipment for damage and verify that the components match the packing slip.
- 2 The RMX 4000 is shipped in a packing case with Stratocell® packaging, and the top cover must be unlocked and lifted.

Boxes are placed on the top Stratocell® and contain the following:


- *Installation Accessories.* This kit contains the power cables, 4 ethernet cables, USB key and documentation.
- *Rack Installation Accessories.* This kit contains the accessories for the 19" rack. For more details, see "*Telescopic Rail Runners Accessory Kit*" on page [2-9](#).
- *Optional - ISDN Package.* Contains the ISDN card and *ISDN Software License.*



Write down the RMX's serial number that is on a sticker on the back of the unit. It will be needed for product registration later in the process.

Make sure that boxes contain all the required parts.

- 3 Remove the boxes and top Stratocell® and open the anti-static plastic bag wrapping the RMX.

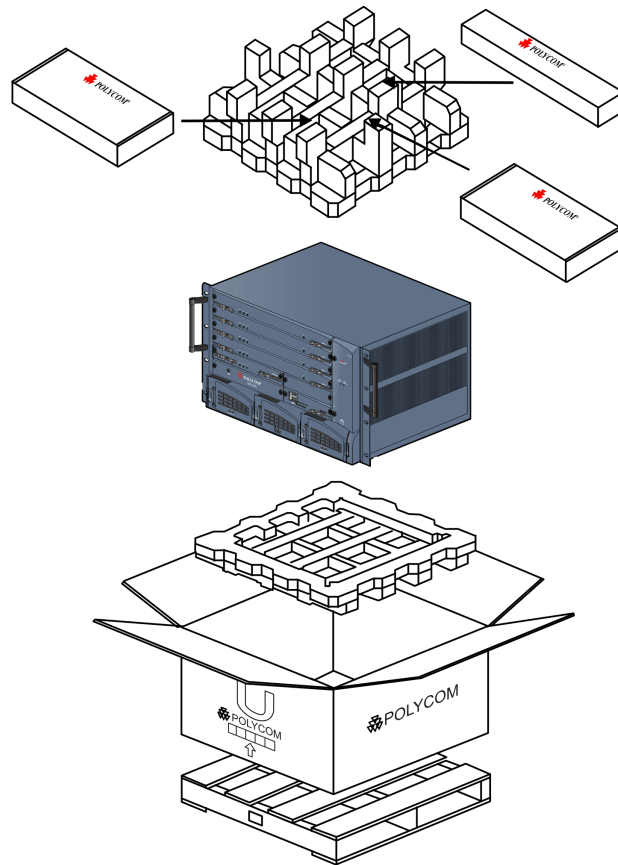

- 4 Holding the handle on each side, lift the RMX 4000 from the box, and place it on a flat surface or in a rack. Remove any packaging material prior to positioning the RMX 4000.



Attention:

Two people are required to lift the MCU out of the box and when installing it in a rack.



Write down the serial number of the RMX, located on a sticker on the back of the unit. It will be needed for product registration later in the process.

Modifying the Factory Default Management Network Settings on the USB Key

The *USB key* contains a text file, *lan.cfg*, which holds the factory default IP address parameters. These parameters must be modified to your local network settings using the *LAN Configuration Utility*, also on the *USB key*.

To modify the USB key settings:

- 1 Take the *USB Key* from the *Installation Accessories* kit and insert it into the PC workstation.

The *Polycom Documentation* window opens.


In Windows XP:

- a The **Polycom Documentation** option is automatically selected. Click **OK**.

In Windows 7:


- a Select **Open Folder to view files using Windows Explorer**.
- b Double-click the **index.hta** file.

The *Language Menu* opens, offering a choice of several languages.

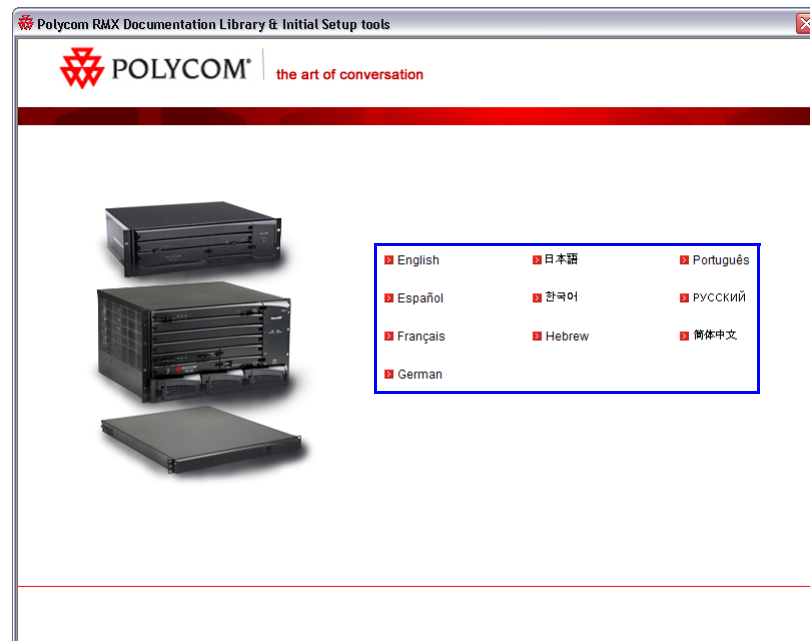


- 2 Click the documentation language of your choice.
An *End-User Licence Agreement for Polycom Software* is displayed.
- 3 Read the agreement and click the **Accept Agreement** button.

- 4 In the *Initial Setup Utility* screen, click the **RMX LAN Configuration Utility** link.

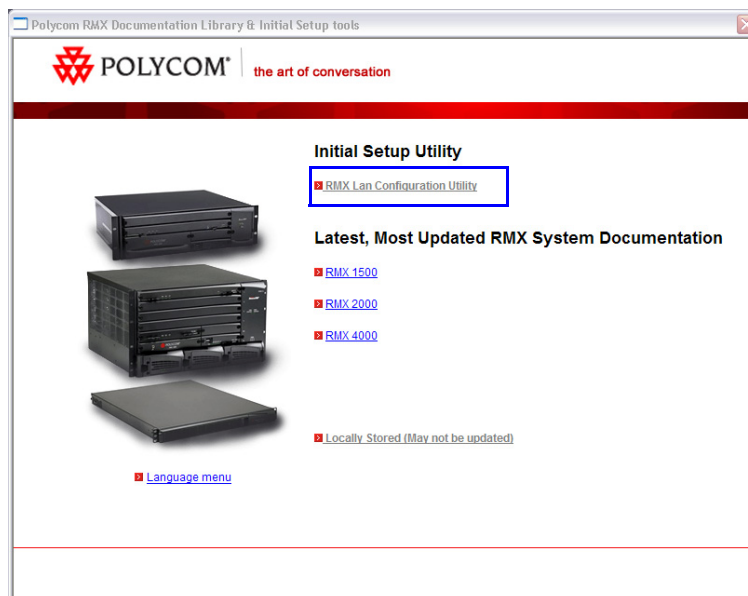

The *LAN Configuration Utility* dialog box opens.

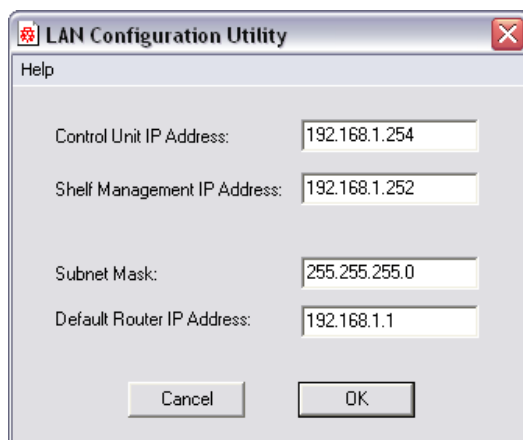

- 5 Modify the following parameters in the utility's dialog box using the information supplied by your network administrator.
- *Control Unit IP Address*
 - *Shelf Management IP Address*
 - *Subnet Mask*
 - *Default Router IP Address*
- 6 Click **OK**.
- 7 Remove the *USB Key* from the PC workstation.
The *USB key* is required for *First Entry Power-up and Configuration* of the RMX.

Hardware Installation and Setup

In a well ventilated area, mount the RMX 1500/RMX 2000/RMX4000 unit in a 19" rack. It is important to adhere to the *Site Requirements* as described in the *RMX 1500/2000/4000 Hardware Guides*, "Site Requirements" on page 1-3.



To maximize conferencing performance, especially in high bit rate call environments, a 1Gb connection is recommended for all RMX types.

The following procedures have to be performed to install the *RMX System* in your site:

- Installing the *RMX* in a rack or as a standalone. When installing the *RMX* unit on a rack, this process is done in two stages:
 - Installing the telescopic rail runners on the rack. This stage is identical to all *RMX* system types.
 - Mounting the *RMX* on the rack using the previously installed rail runners
- Connecting the *RMX* to the power source
- Connecting the network (*LAN* and *ISDN*) cables to the *RMX*.

Installing the Telescopic Rail Runners on the Rack

Telescopic Rail Runners Accessory Kit

Before installing the telescopic rail runners in the rack, make sure that the kit has the following parts:

Table 2-2 Rail Runners Kit Contents








Part/Kit no.	Item	Item no.	Item Sample	Item Quantity
ASY2716A-L0				
<i>Rail runner</i>	Left rail runner	1	See Figure 2-1	1
	Right rail runner	2	See Figure 2-1	1
<i>Rack spacer assembly kit</i>	Rack spacer	3	Front & Rear 	4
	Flat head screw - M5*10mm	4		8

Table 2-2 Rail Runners Kit Contents

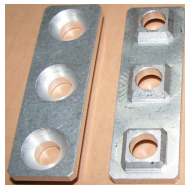Part/Kit no.	Item	Item no.	Item Sample	Item Quantity
<i>Rail runner assembly kit</i>	Flat head screw - M3*8mm	5		4
	Flat washer M3	6		4
	Nut spring M3	7		4
<i>RMX chassis assembly kit</i>	Pan head screw - M5*12mm	8		2
	Flat washer M5	9		2

Telescopic Rail Runner Assembly



Rack Rail Runners require a minimum of 48cm and a maximum of 80cm within the rack for installation

- 1 Determine the location of the RMX on the rack:
 - Allow for a 1U gap above and below the system for ventilation.

- Use the *Rack Spacer* (item no. 3) to predetermine its position on the rack post, making sure that square studs of the spacer fit into the rack post's square/rounded mounting holes. Mark the spacer's location on the rack post. Repeat this process for the 3 remaining vertical posts ensuring that the system can be horizontally seated.

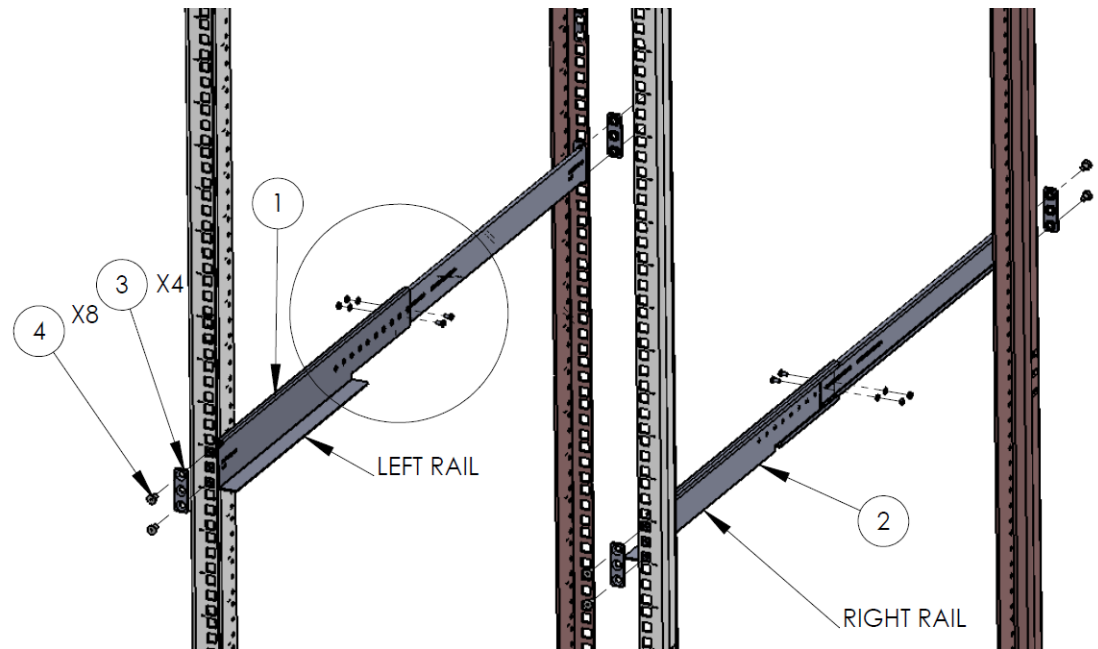


Figure 2-1 Front view of RMX Rail Runner Assembly

- 2 Position the *Rack Spacer* (item no. 3) onto the marked rack post together with left rack rail runner (item no. 1 which is labeled LEFT) and fasten the flat head screws 3*10mm



(item no. 4) as shown in Figure 2-2.

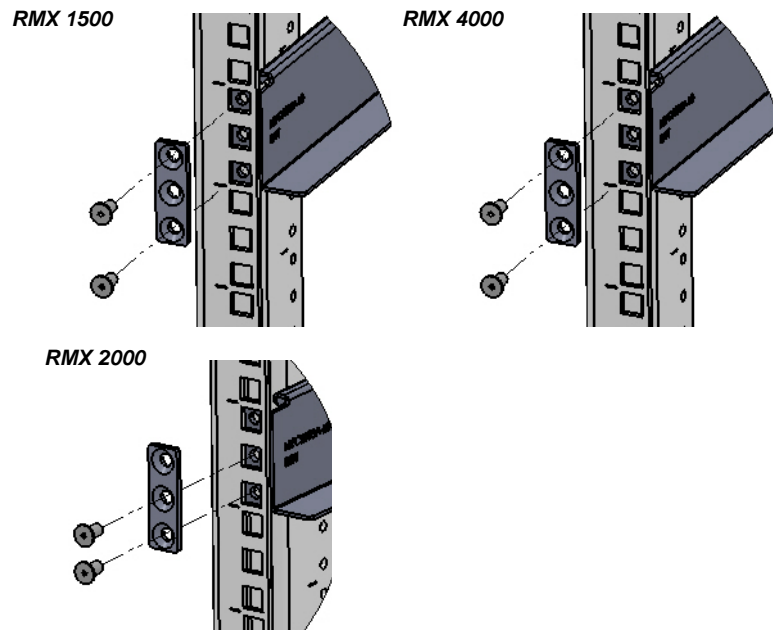


Figure 2-2 Detail of Front Rack Spacer Assembly for the RMX



- On the RMX 1500/4000 the center hole on the *Rack Spacer* must be left clear as it is required for fixing the RMX to the rack post. See Figure 2-2.
- On the RMX 2000 the top hole on the *Rack Spacer* must be left clear as it is required for fixing the RMX to the rack post. See Figure 2-2.

- 3 Adjust the telescopic rack rail runner to the rack opening and mount it onto the marked position of the rear post as described in step 2.

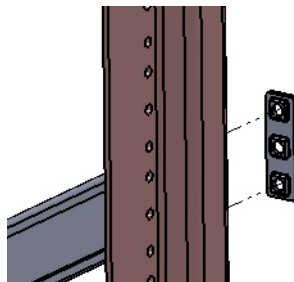





Figure 2-3 Detail of Rear RMX 1500/2000/4000 Rack Spacer Assembly

- 4 Repeat steps 2 and 3 for the right rack rail runner.
- 5 Install the flat head screw  (item 5), flat washer  (item 6) and nut spring  (item 7) in the middle of the telescopic rack rail runner for added stability as shown in Figure 2-4.

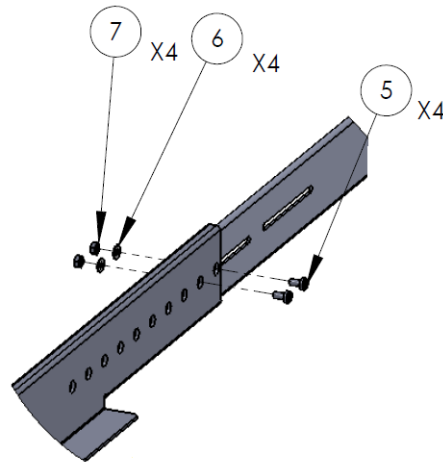


Figure 2-4 Detail of Left Rail Runner (front internal view)



The number of screws to install depends on the rack width.

- 6 Repeat step 5 for the right rack rail runner.

Installing the RMX 1500



For detailed instructions, precautions and requirements for installing the *RMX 1500* refer to the *Polycom RMX 1500 Hardware Guide*.

The following procedures have to be performed to install the *RMX 1500* in your site:

- **Optional.** Installing the RTM ISDN card on the RMX (Optional)
- Installing the RMX in a rack or as a standalone
- Connecting the RMX to the power source
- Connecting the network (*LAN*, *IP* and *ISDN*) cables to the RMX.

Optional. Installing the RTM ISDN 1500 Card on the RMX 1500

If the ISDN option was purchased with your RMX, the ISDN card is shipped separately and must be manually installed into the rear of the RMX 1500. It is recommended to install the ISDN card before the RMX 1500 is placed in a rack.


Removing the blank cover from the rear of the RMX 1500

- 1 Ensure that the power switch on the RMX is turned OFF (O).
- 2 Remove the cover by unscrewing the captive screws that fasten the card to the MCU.

- 3 Slide out the cover.

Installing the RTM ISDN 1500 Card

- 1 Slide in the RTM ISDN 1500 card.

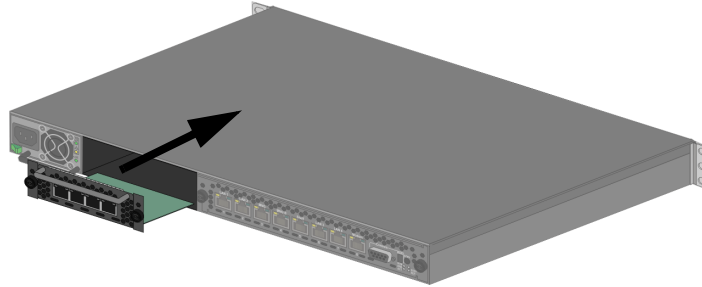

- 2 Insert the card into the slot and tighten the captive screws on each side of the rear panel of the card, securing the RTM ISDN card to RMX.






A Software License is included with the ISDN card. This license must be registered as part of the *Product Registration* and *Product Activation* process.

Mounting the RMX 1500 in a Rack

There are two methods for installing the RMX in a 19" rack:


- **Using the rack rail runners on the RMX 1500**
 - Install the telescopic rail runners, as described in "*Installing the Telescopic Rail Runners on the Rack*" on page [2-9](#).
 - Mount the RMX 1500 on top of the rail runners.

- Fasten the *RMX* to the rack spacers using the flat head screw  (item 8) with flat washer  (item 9) through the two holes in the *RMX*'s front mounting brackets.

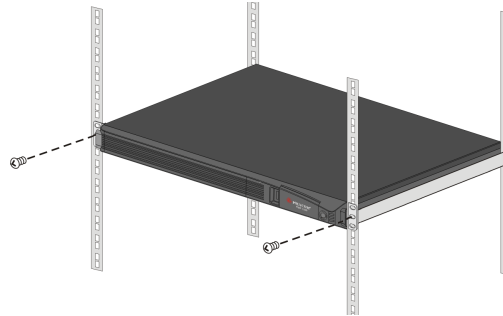

Refer to Figure 2-2, "Detail of Front Rack Spacer Assembly for the *RMX*" on page 2-12 for installation instructions.


- **Using a shelf**
 - Install the shelf, supplied by the rack manufacturer, in the rack.
 - Mount the *RMX* unit on the shelf.
 - Fasten the *RMX* unit to the rack with screws through the four holes in the *RMX*'s front mounting brackets.

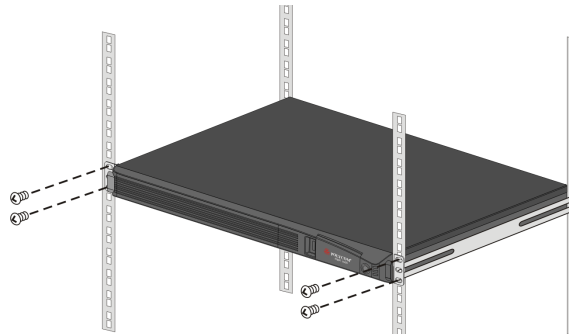

Connecting Cables to the RMX 1500

To connect the cables:

- Connect the Media cable to **LAN 2** port.
 - **Optional.** If LAN Redundancy or Multiple Networks options are used, connect the LAN cable to **LAN 1**. For more information, see *RMX 1500/2000/4000 Administrator's Guide*, "LAN Redundancy" on page [15-30](#).
- Connect the Network cables to:
 - the **MNG** (*Signaling*) port
 - the **MNG B** (*Management Network*) port.
- **Optional.** Connect the *Shelf Management* cable to the **Shelf** port.
- **Optional.** For ISDN/PSTN connections, connect the E1/T1 cables to their **PRI (1-4)** ports.

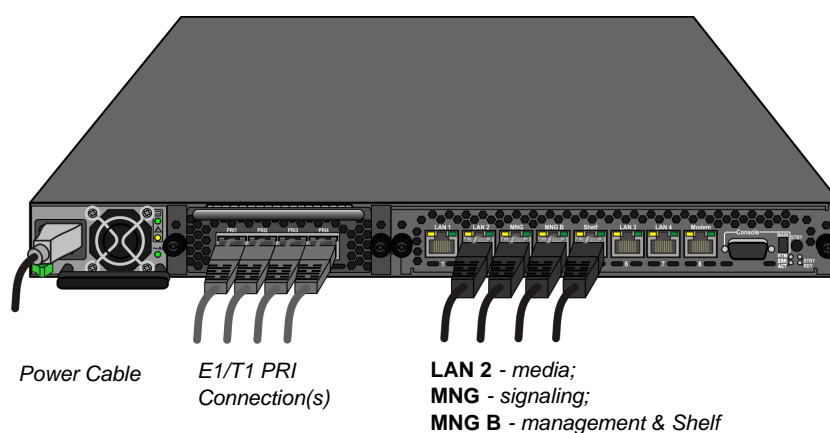

The LAN 1*, LAN3, LAN4 and Modem ports are not be used and the plastic caps covering those ports should not be removed.

* With Multiple network and LAN redundancy configurations, LAN 1 port is used. For more information, see the *RMX 1500/2000/4000 Administrators Guide*, *Multiple Services* and *LAN Redundancy*.

Installing the RMX 2000



For detailed instructions, precautions and requirements for installing the RMX 2000 refer to the *Polycom RMX 2000 Hardware Guide*.

The following procedures have to be performed to install the RMX 2000 in your site:

- **Optional.** Installing the RTM ISDN card on the RMX (Optional)
- Installing the RMX in a rack or as a standalone
- Connecting the RMX to the power source
- Connecting the network (LAN and ISDN) cables to the RMX


Optional. Installing the RTM ISDN Card on the RMX 2000

If the ISDN option was purchased with your RMX, the ISDN card is shipped separately and must be manually installed into the rear of the RMX 2000. It is recommended to install the ISDN card before the RMX 2000 is placed in a rack.

Removing the blank cover from the rear of the RMX 2000

Use the following procedure to remove the blank cover:

- 1 Ensure that the power switch/circuit switch on the RMX is turned OFF (O).
- 2 Unscrew the captive screws on the rear panel of the RMX that secure the blank panel.
- 3 Use the metal ejector levers to pull the blank panel.

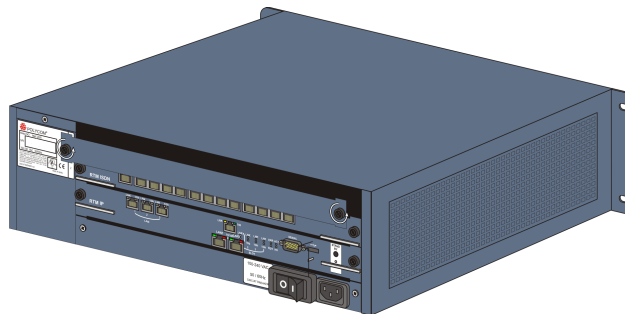


Installing the RTM ISDN 2000 Card

- 1 On the new RTM ISDN card move the ejector levers to their fully open position.
- 2 Slide in the RTM ISDN card in the RMX slot.



An RTM ISDN card must connect directly to an MPM/MPM+/MPMx card in the opposite facing front slot.

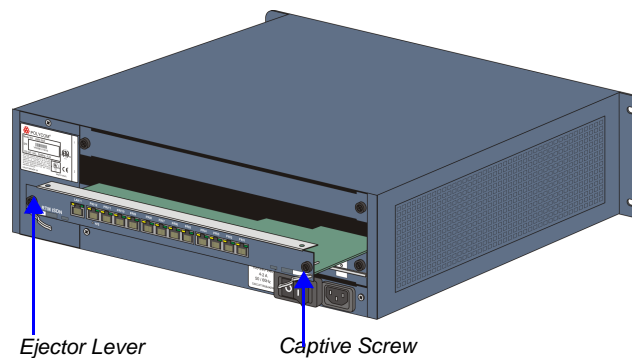




- 3 Push the card into the slot until the ejector levers touch the front edge of the card cage.
- 4 Push the ejector levers to their fully closed position.
- 5 Tighten the captive screws on each side of the rear panel of the card, securing the RTM ISDN card to RMX

A Software License is included with the ISDN card. This license must be registered as part of the *Product Registration* and *Product Activation* process.

Mounting the RMX 2000 in a Rack


There are two methods for installing the RMX in a 19" rack:

- **Using rack rail runners on the RMX 2000:**
 - Install the telescopic rail runners, as described in "*Installing the Telescopic Rail Runners on the Rack*" on page 2-9.
 - Mount the RMX 2000 on top of the rail runners.
 - Fasten the RMX to the rack spacers using the flat head screw  (item 8) with flat washer  (item 9) through the two holes in the RMX's front mounting brackets.

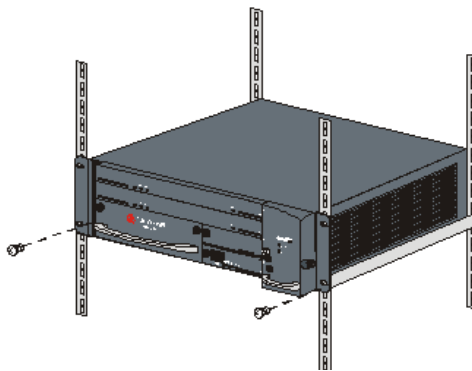

Refer to Figure 2-2, "*Detail of Front Rack Spacer Assembly for the RMX*" on page 2-12 for installation instructions.

- **Using a shelf:**
 - Install the shelf, supplied by the rack manufacturer, in the rack.
 - Mount the RMX on the shelf.
 - Fasten the RMX to the rack with screws through the four holes in the RMX's front mounting brackets.

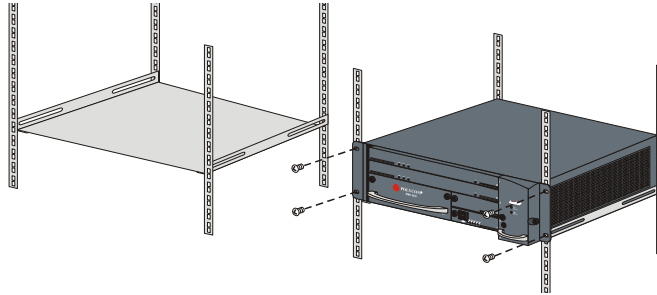


Connecting Cables to the RMX 2000



Do not remove the protective caps from LAN1, LAN3 and ShMG ports.

Connect the following cables to the back panel:

- Power cable
- On the RTM IP card connect the LAN cable to **LAN 2** Port.
- On the RTM LAN card connect the LAN cable to **LAN 2**.
 - **Optional.** Connect the LAN cable to **LAN 1**.
With *Multiple Networks* and *LAN Redundancy* configurations, **LAN 1** port is used. For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "LAN Redundancy" on page [15-30](#) and "Multiple Network Services" on page [15-45](#).
- **Optional.** On the RTM ISDN card connect the E1/T1 Cables to **PRI** Ports.

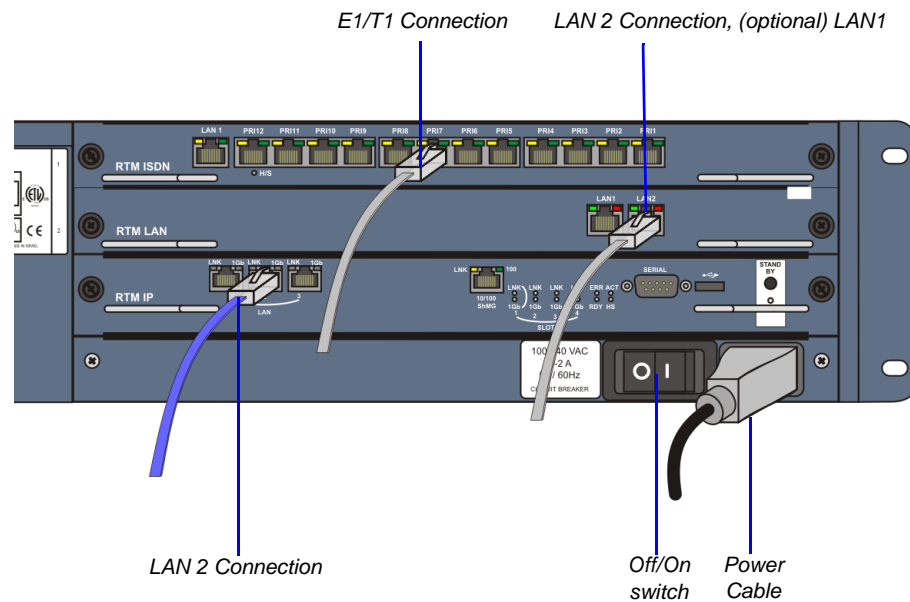

Installing the RMX 4000

The following procedures have to be performed to install the RMX 4000 at your site:

- **Optional.** Installing the RTM ISDN card on the RMX
- Mounting the RMX in a rack
- Connecting the RMX to the power source
- Connecting the network (LAN and ISDN) cables to the RMX

Optional. Installing the RTM ISDN Card on the RMX 4000

If the ISDN option was purchased with your RMX, the ISDN card is shipped separately and must be manually installed into the rear of the RMX 2000. It is recommended to install the ISDN card before the RMX 2000 is placed in a rack.

Removing the RTM LAN Card or the blank cover from the rear of the RMX 4000


- 1 Ensure that the power switch on the RMX 2000/4000 is turned OFF (O).
- 2 Remove the RTM LAN or blank cover by unscrewing the captive screws that fasten the card or the cover to the RMX. When removing a card, use the metal ejector levers to pull the RTM LAN card out of its slot from the backplane.
- 3 Slide out the RTM LAN or RTM ISDN card.

Installing the RTM ISDN 4000 Card

- 1 On the RTM ISDN card move the ejector levers to their fully open position.
- 2 Slide the new RTM ISDN card into its slot.



An RTM ISDN card must connect directly to an MPM+/MPMx card in the opposite facing front slot.

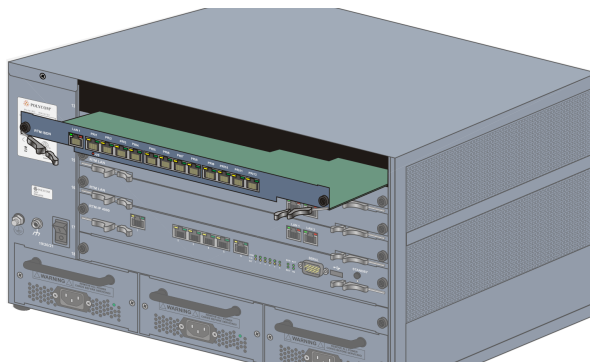

- 3 Push the card into the slot until the ejector levers touch the front edge of the card cage. Push the ejector levers to their fully closed position.
- 4 Tighten the captive screws on each side of the rear panel of the card, securing the RTM ISDN card to RMX.

A Software License is included with the ISDN card. This license must be registered as part of the *Product Registration* and *Product Activation* process.



Mounting the RMX 4000 in a Rack


Either place the RMX 4000 on a hard, flat surface such as a desktop or mount it on a 19" rack.



For a detailed description of the safety requirements and precautions and the installation of the RMX 4000 as a standalone, or reverse mounting the RMX 4000 on a 19" rack, see the *RMX 4000 Hardware Guide*.

To install the RMX 4000 in a 19" rack:


- **Using rack rail runners on the RMX 4000**
 - Install the telescopic rail runners, as described in "Installing the Telescopic Rail Runners on the Rack" on page 2-9.
 - Mount the RMX 2000 on top of the rail runners.
 - Fasten the RMX to the rack spacers using the flat head screw  (item 8) with flat washer  (item 9) through the two holes in the RMX's front mounting brackets.

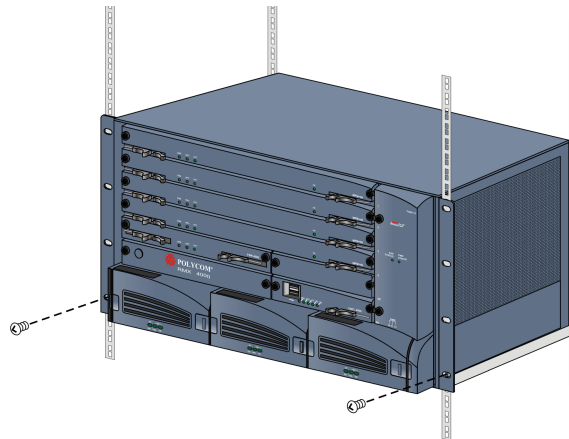

Refer to Figure 2-2, "Detail of Front Rack Spacer Assembly for the RMX" on page 2-12 for installation instructions.

- **Using a shelf**
 - Install the shelf, supplied by the rack manufacturer, in the rack.
 - Mount the RMX on the shelf.

- Fasten the RMX to the rack with screws through the eight holes in the RMX's front mounting brackets.

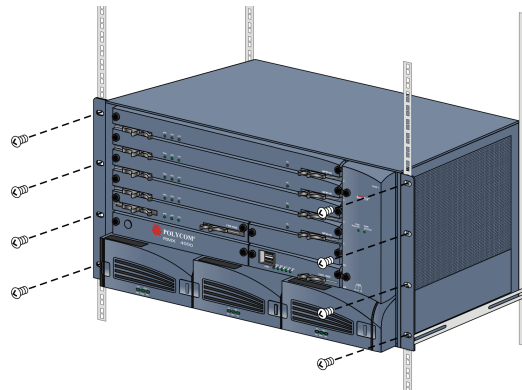

Connecting the RMX 4000 to the Power Sources




The size of the protective earthing conductor & cable should be a minimum of 10AWG.

Connect the following power cables to the RMX 4000 back panel:

AC Power Supply connections:

- 1 Insert power cables to each of the three AC Power Entry Modules (PEMs).

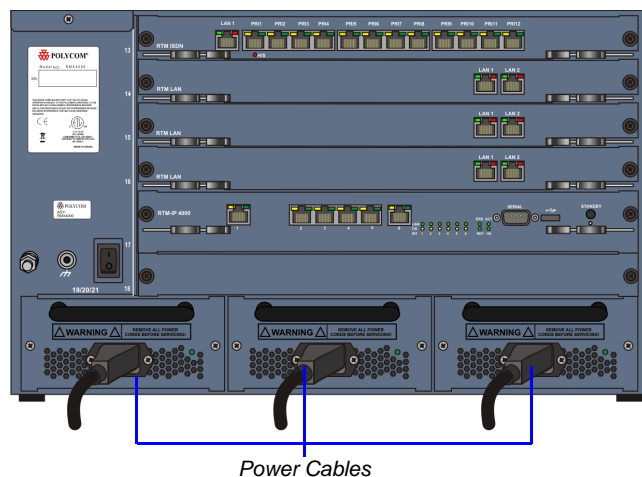

DC Power Supply connections:

- 1 On the DC Power Rail Modules set the two circuit breakers to OFF.




Two types of circuit breakers can be installed on the DC Power Rail Module (PRM). For more information, see the *RMX 4000 Hardware Guide*.

- 2 Ensure that the cables from the Main that supplies electricity to the DC power units are OFF or disconnected.
- 3 Remove the transparent plastic caps on the terminal block.

- 4 Using the two wires of a 10 AWG cable running from the DC power distribution unit, connect the black wire into the -48VDC terminal block and the red wire to the RTN terminal block.



- A 10 AWG cable must be used to connect the mains with the RMX 4000 DC Power Rail Model.
- The supply wires for DC version must be terminated using quick connectors.
- Extension cords may not be used.

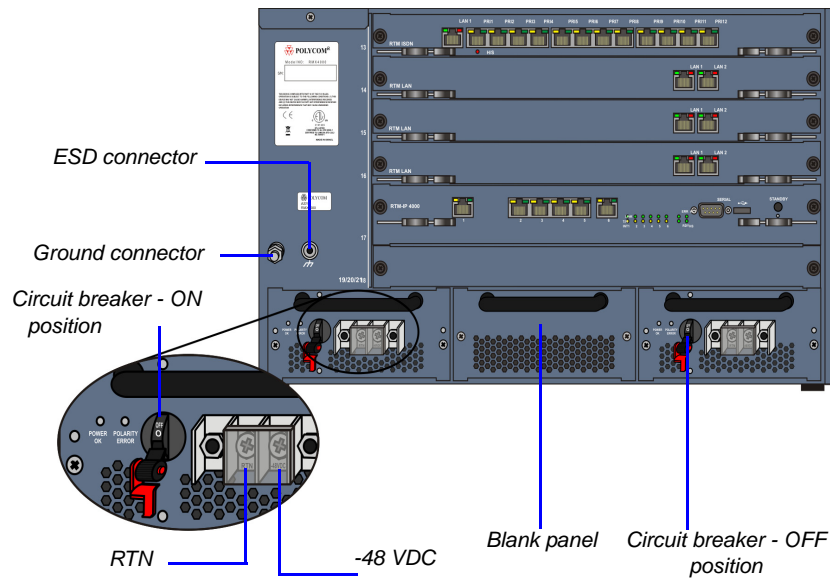

The center PRM slot/module is fitted with a blank panel and the slot cannot be used on a system with DC Voltage.

- 5 Connect the green or green-yellow wire to the system single-point M6x15 "Ground" bolt.



The rating of the protective earthing conductor should be a minimum of 10AWG.

If the unit is rack mounted, the single-point ground on the MCU must be connected to the rack with a single conductor and fixed as to prevent loosening. When using bare conductors, they must be coated with an appropriate antioxidant compound before crimp connections are made. Tinned, solder-plated or silver plated connectors do not have to be prepared in this manner.

- 6 Replace the transparent plastic caps on the terminal block.
- 7 Turn ON the Main that supplies power to the RMX.
- 8 Turn ON the circuit breaker on each of the DC Power Rail Modules.

Connecting Cables to the RMX 4000

To connect the cables (AC and DC systems):

- **RTM-IP 4000:**
 - Connect the Management Network cable to **LAN 2**.
 - Connect the Signaling cable to **LAN 3**.
 - Connect the Shelf Management cable to **LAN 6**.
- For each installed **RTM LAN** - Connect the LAN cable to **LAN 2**.
 - **Optional.** Connect the LAN cable to **LAN 1**. With Multiple networks and LAN redundancy configurations, LAN 1 port is used. For more information, see *RMX 1500/2000/4000 Administrator's Guide*, "LAN Redundancy" on page 15-30 and "Multiple Network Services" on page 15-45.
- **Optional.** If RTM ISDN is installed, for each installed **RTM ISDN**:
 - Connect the E1/T1 cables to their **PRI** Ports.
 - Connect the LAN cable to **LAN 1**.


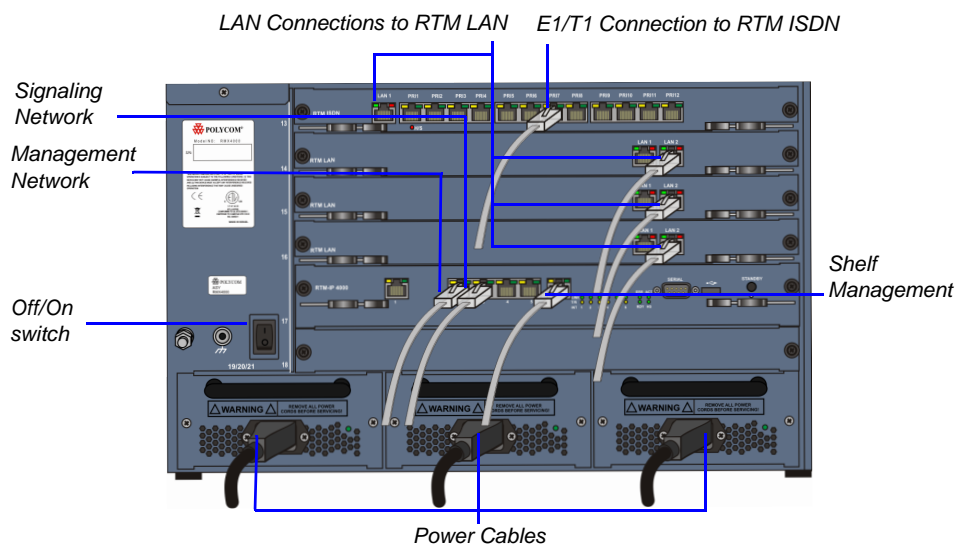


Figure 2-5 RMX 4000 Rear Panel View with AC Power and Communication Cables

First Entry Power-up and Configuration

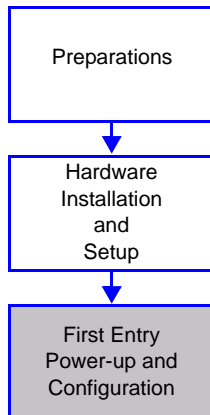


There are four procedures necessary for setup of the new RMX. It is important that they are performed in the following sequence:

- 1 First-time Power-up
- 2 Product Registration.
- 3 Connection to MCU.
- 4 Modifying the Default IP and ISDN/PSTN Service Settings (*Fast Configuration Wizard*).

Procedure 1: First-time Power-up

To power-up for the first time using the USB key:

- 1 Insert the *USB key* containing the modified IP addresses in USB port on the RMX 1500 front panel and RMX 2000/4000 back panel.

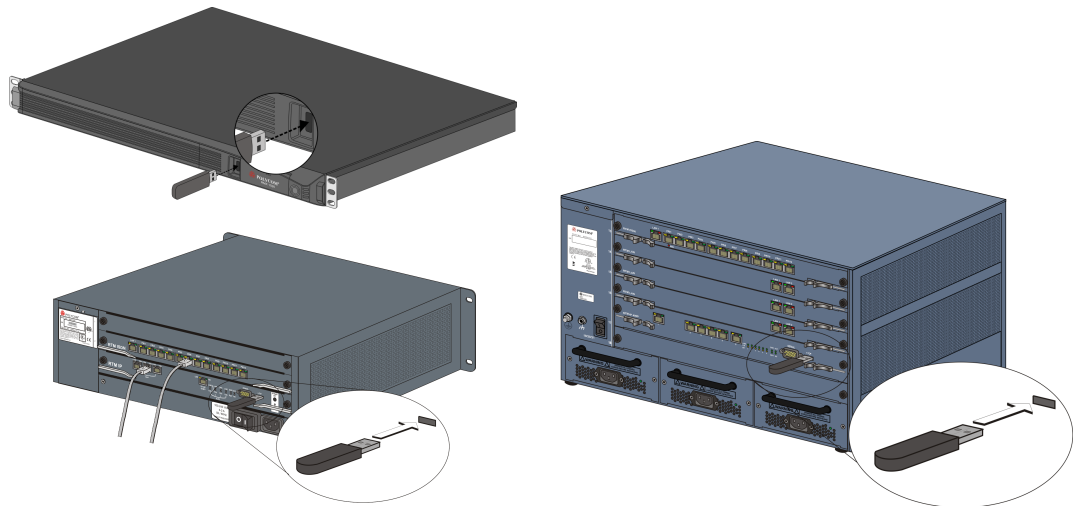

- 2 Power the RMX On.

- **AC System** - Turn ON the power by pressing on the power switch located on the rear panel of the RMX 1500/2000/4000.
 - On the RMX 1500, the ON/OFF button is lit (ON).
 - On the RMX 2000/4000, the FAN STATUS and PWR STATUS LEDs turn ON.
- **DC System (RMX 4000)** - Turn ON the Main that supplies power to the RMX and then turn ON each of the DC power rail modules.

System power-up sequence may take approximately 10 minutes.

During this time, the parameters in the **lan.cfg** file are uploaded from the USB key to the RMX's memory and applied during the power-up sequence.

Wait for the upload process to complete. Initially all the READY/IN USE/ERROR LEDs on the RMX 1500 or ERR/RDY/ACT LEDs on the RMX 2000/4000 flicker and flash. Upload is completed when all the LEDs turn off and only the red ERROR/ERR

LED (on the CTNL unit of the RMX 2000/4000) remains ON.

It remains ON until the *Default IP Network Service* is configured. For more details, see "*Fast Configuration Wizard*" on page 2-29.

Do not remove the USB key from the RMX until the connection with the RMX is established and the *Login* screen is displayed. For more details, see "*Procedure 3: Connection to MCU*" on page 2-26.

Procedure 2: Product Registration

Before the RMX can be used, it is necessary to register the product and the various software licenses and obtain an *Activation Key*.

During first-time power-up, the *Product Activation* dialog box is displayed, requesting you to enter an *Activation Key*.

Obtaining the Activation Key

- 1 Access the *Service & Support* page of the Polycom website at:
<http://support.polycom.com>
- 2 Login with your *Email Address* and *Password* or register as a new user.
- 3 Select **Product Registration**.
- 4 Follow the on-screen instructions for *Product Registration* and *Product Activation*. (The RMX's serial number is on a sticker on the back of the unit). For more information, refer to the *RMX Software Licence* document you received with your shipment.



Register all *Polycom Software Licences* that you have purchased when obtaining the *Activation Key*. For example, ISDN, Encryption and Multiple Networks each have different *Polycom Software Licences*.

- 5 When the *Product Activation Key* is displayed, write it down or **copy** it for later pasting into the *Activation Key* field of the *Product Activation* dialog box.


Procedure 3: Connection to MCU



If Windows 7™ is installed on the workstation, **Protected Mode** must be disabled before connecting to the MCU running Version 7.0 software. For more information see "*Windows 7™ Security Settings*" on page 1-11.

- 1 Start the *RMX Web Client* application on the workstation.
 - a In the browser's address line, enter the IP address of the *Control Unit* in the format:
http://<Control Unit IP Address>, as defined in the USB key.
 - b Click **Enter**.


The RMX Web Client Login screen is displayed.

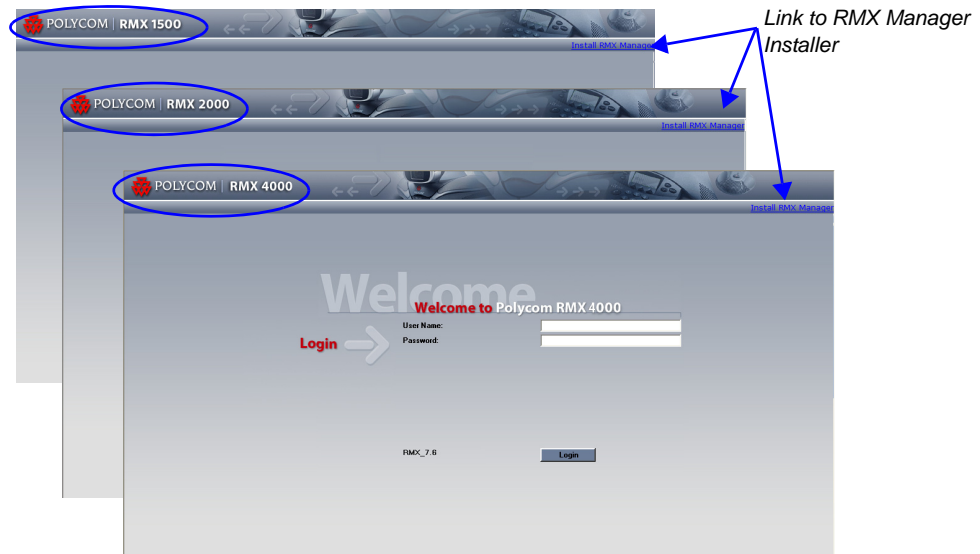

Once the connection with the RMX is established, you can remove the USB key from the RMX. If the error “Browser environment error. Please close all the browser sessions” appears, close all the browser sessions, and reconnect to the RMX. If the error message appears again, either run the automatic troubleshooter utility or manually perform the suggested troubleshooting procedures. For more details, see Appendix B, “Installation Troubleshooting Procedures”.

- 2 In the RMX Web Client Login screen, enter the default *Username* (**POLYCOM**) and *Password* (**POLYCOM**) and click **Login**.

The RMX Web Client opens and the *Product Activation* dialog box appears with the serial number filled in:

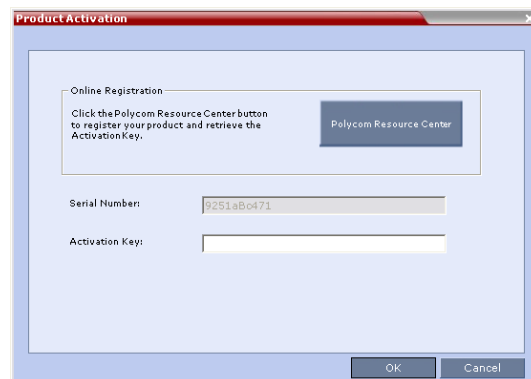

- 3 In the *Activation Key* field, enter or **paste** the *Product Activation Key* obtained earlier. If you do not have an *Activation Key*, click the **Polycom Resource Center** button to access the *Service & Support* page of the Polycom Support website.
- 4 Click **OK**.
A message indicating that the *Product Activation Key* was loaded successfully appears. If the *Product Activation Key* failed to load, please contact your vendor.
- 5 Click **OK**.
On the MPM+/MPMx card of the RMX 2000/4000, initially the ERR/RDY/ACT LEDs all flicker and flash, until only the RDY LED turns ON on the media card, while the ERR

LED on the CTNL unit is still ON.

As no *Default IP Network Service* is defined, the system automatically starts the *Fast Configuration Wizard*.

Procedure 4: Modifying the Default IP Service and ISDN/PSTN Network Service Settings

The *Fast Configuration Wizard* is automatically started when no *Default IP Network Service* is defined and it assists you in configuring the *Default IP Network Service*. This happens during *First Time Power-up*, before the service has been defined or if the *Signaling Service* has been deleted, followed by an RMX restart.

The *IP Management Service* tab in the *Fast Configuration Wizard* is enabled only if the factory default Management IP addresses were not modified.



On the *RMX 1500/ 2000/ 4000*, IPv4 is the default protocol for setting the Network Service in the *Fast Configuration Wizard*.

If IPv6 addressing is required, complete the *Fast Configuration Wizard* for IPv4 and then:

- 1** Modify the *Management Network* to use IPv6 addressing or IPv4 and IPv6 addressing.
- 2** Restart the RMX.
- 3** Modify the properties of the *Default IP Network Service*, which will now include IPv6 addressing or IPv4 & IPv6 addressing options to configure the Network Service.

For detailed description of the IP Network Services, see the *RMX 1500/2000/4000 Administrator's Guide*, "Network Services" on page [15-1](#).

Fast Configuration Wizard

- 1 Enter the required IP information in the dialog box.

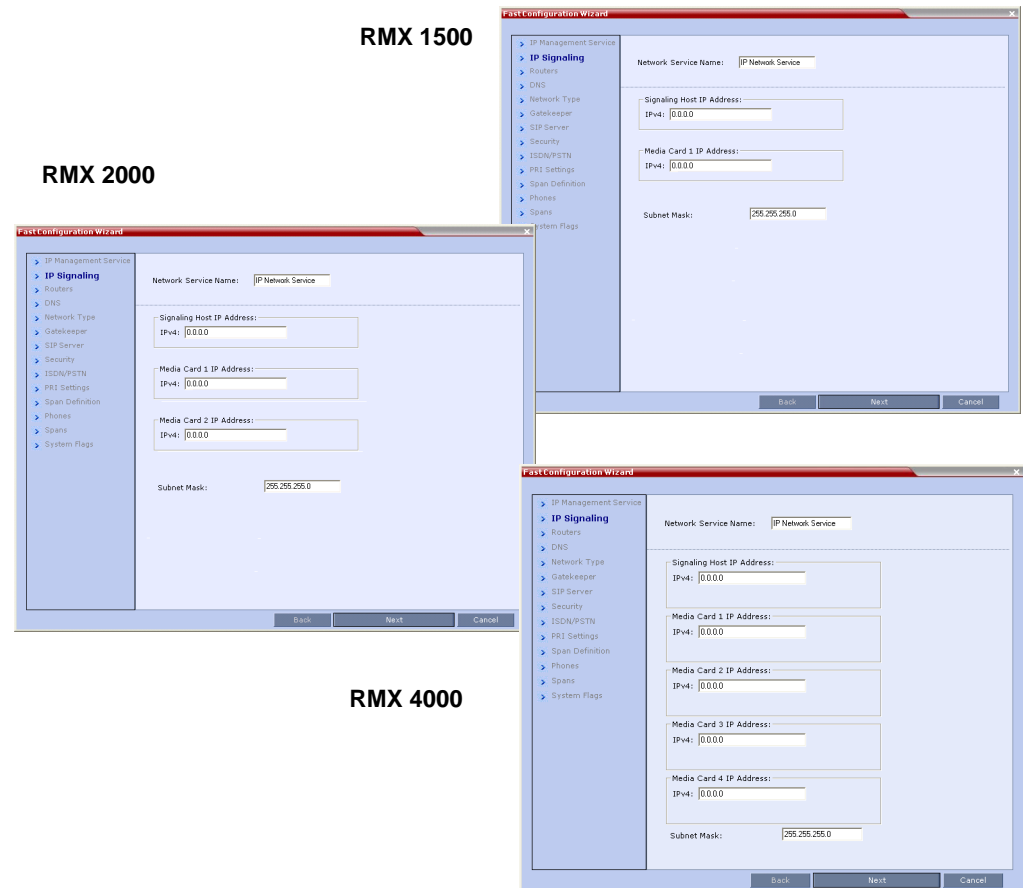


Table 2-3 Fast Configuration Wizard – IP Signaling

Field	Description
<i>Network Service Name</i>	The name <i>Default IP Service</i> is assigned to the IP Network Service by the Fast Configuration Wizard. This name can be changed. Note: This field is displayed in all IP Signaling dialog boxes and can contain character sets that use Unicode encoding.
<i>Signaling Host IP Address</i>	Enter the address to be used by IP endpoints when dialing into the MCU. Dial out calls from the RMX are initiated from this address. This address is used to register the RMX with a Gatekeeper or a SIP Proxy server.
<i>Media Card 1-4 IP Addresses</i>	Enter the IP address(es) of the media card (s) (MPM/MPM+/MPMx 1 and MPM/MPM+/MPMx 2-4 (if installed)) as provided by the network administrator. Endpoints connect to conferences and transmit call media (video, voice and content) via these addresses.

Table 2-3 Fast Configuration Wizard – IP Signaling (Continued)

Field	Description
<i>Subnet Mask</i>	Enter the subnet mask of the MCU. Default value: 255.255.255.0.



- To set the RMX to *Secured Communication*, first complete the *Fast Configuration Wizard* and reset the RMX. After Login, install the *Certificate* and then enable *Secured Communication Mode*.
- The *IP Network Service* configured using the *Fast Configuration Wizard* will be saved only if Media cards are installed in the RMX.

- 2 Click **Next**.
- 3 Enter the required **Routers** information in the dialog box.

Table 2-4 Fast Configuration Wizard – Routers

Field	Description
<i>Default Router IP Address</i>	Enter the IP address of the default router.

- 4 Click **Next**.

5 Enter the required **DNS** information in the dialog box.

Fast Configuration Wizard

- > IP Management Service
- > IP Signaling
- > Routers
- > **DNS**
- > Network Type
- > Gatekeeper
- > SIP Server
- > Security
- > ISDN/PSTN
- > PRI Settings
- > Span Definition
- > Phones
- > Spans
- > System Flags

Network Service Name: Default IP Service

MCU Host Name: PolycomMCU

DNS: Off

☐ Register Host Names Automatically to DNS Server

Local Domain Name:

Primary DNS Server IP Address: 0.0.0.0

Back Next Cancel

Table 2-5 Fast Configuration Wizard – DNS

Field	Description
<i>MCU Host Name</i>	Enter the name of the MCU on the network. Default name is RMX.
<i>DNS</i>	Select: <ul style="list-style-type: none"> Off – if DNS servers are not used in the network. Specify – to enter the IP addresses of the DNS servers. Note: The IP address fields are enabled only if Specify is selected.
<i>Register Host Names Automatically to DNS Server</i>	Select this option to automatically register the MCU Signaling Host and Shelf Management with the DNS server.
<i>Local Domain Name</i>	Enter the name of the domain where the MCU is installed.
<i>Primary DNS Server IP Address</i>	The static IP address of the primary DNS server.

6 Click **Next**.

- 7 Select the *IP Network Type*: **H.323**, **SIP** or **H.323 & SIP**.

The screenshot shows the 'Fast Configuration Wizard' window. On the left is a tree view with the following items: IP Management Service, IP Signaling, Routers, DNS, **Network Type**, Gatekeeper, SIP Server, Security, ISDN/PSTN, PRI Settings, Span Definition, Phones, Spans, and System Flags. The 'Network Type' item is selected. The main area on the right contains the following fields:

- Network Service Name: Default IP Service
- IP Network Type: A dropdown menu with three options: H.323 & SIP (selected), H.323, and SIP.

At the bottom are three buttons: Back, Next, and Cancel.

- 8 Click **Next**.

- 9 If you selected **SIP** only, go to **Step 13**.

- 10 Enter the required **Gatekeeper** information in the dialog box.

The screenshot shows the 'Fast Configuration Wizard' window with the 'Gatekeeper' item selected in the left tree view. The main area on the right contains the following fields:

- Network Service Name: Default IP Service
- Gatekeeper: A dropdown menu with 'Off' selected.
- Primary Gatekeeper: A section containing:
 - IP Address or Name: A text input field.
 - MCU Prefix in Gatekeeper: A text input field.
 - Aliases: A table with two columns, 'Alias' and 'Type'. It contains five rows, each with 'None' in the 'Type' column.

At the bottom are three buttons: Back, Next, and Cancel.

Table 2-6 Fast Configuration Wizard – Gatekeeper

Field	Description
<i>Gatekeeper</i>	Select Specify to enable configuration of the gatekeeper IP address. When Off is selected, all gatekeeper options are disabled.
Primary Gatekeeper	
<i>IP Address or Name</i>	Enter either the gatekeeper's host name (if a DNS Server is used) or IP address.

Table 2-6 Fast Configuration Wizard – Gatekeeper (Continued)

Field	Description
<i>MCU Prefix in Gatekeeper</i>	Enter the string with which the MCU registers itself with the gatekeeper. The gatekeeper uses this string to identify the MCU when forwarding calls to it. H.323 endpoints use this number as the first part of their dial-in string when dialing the MCU.
Aliases	
<i>Alias</i>	The alias that identifies the RMX's Signaling Host within the network. Up to five aliases can be defined for each RMX. Note: When a gatekeeper is specified, at least one alias must be entered in the table. Additional aliases or prefixes may also be entered.
<i>Type</i>	The type defines the format in which the card's alias is sent to the gatekeeper. Each alias can be of a different type: <ul style="list-style-type: none"> • H.323 ID (alphanumeric ID) • E.164 (digits 0-9, * and #) • Email ID (email address format, e.g. abc@example.com) • Participant Number (digits 0-9, * and #) Note: Although all types are supported, the type of alias to be used depends on the gatekeeper's capabilities.

- 11 Click **Next**.
- 12 If you selected **H.323** only, go to **Step 15**.
- 13 Enter the required **SIP Server** information in the dialog box.

The screenshot shows the 'Fast Configuration Wizard' window with the 'SIP Server' option selected in the left-hand navigation pane. The main configuration area contains the following fields and controls:

- Network Service Name:** A text box containing 'Default IP Service'.
- SIP Server:** A dropdown menu currently set to 'Off'.
- Server IP Address or Name:** A text box containing '0.0.0.0'.
- Server Domain Name:** A text box containing 'DomainName'.
- Transport Type:** A dropdown menu currently set to 'TCP'.

At the bottom of the window, there are three buttons: 'Back', 'Save & Conti', and 'Cancel'.

Table 2-7 Fast Configuration Wizard – SIP Server

Field	Description
<i>SIP Server</i>	Select: <ul style="list-style-type: none"> • Specify – to manually configure SIP servers. • Off – if SIP servers are not present in the network.
<i>SIP Server IP Address</i>	Enter either the IP address of the preferred SIP server or its host name (if a DNS server is used).
<i>Transport Type</i>	Select the transport type and protocol that is used for signaling between the MCU and the SIP Server or the endpoints according to the protocol supported by the SIP Server: <ul style="list-style-type: none"> • UDP – Select this option to use UDP for signaling. • TCP – Select this option to use TCP for signaling. • TLS – The <i>Signaling Host</i> listens on secured port 5061 only and all outgoing connections are established on secured connections. Calls from SIP clients or servers to non secured ports are rejected. <p>The following protocols are supported:</p> <ul style="list-style-type: none"> • TLS 1.0 • SSL 2.0 • SSL 3.0.

14 Click **Next**.

Enter the required **Security** information in the dialog box.


The screenshot shows the 'Fast Configuration Wizard' window. On the left is a tree view with the following items: IP Management Service, IP Signaling, Routers, DNS, Network Type, Gatekeeper, SIP Server, **Security** (highlighted), ISDN/PSTN, PRI Settings, Span Definition, Phones, Spans, and System Flags. The main area of the wizard is titled 'Network Service Name: Default IP Service'. Below this, there are two input fields: 'Authentication User Name:' and 'Authentication Password:'. At the bottom of the window are three buttons: 'Back', 'Next', and 'Cancel'.

Table 2-8 *Fast Configuration Wizard – Security*

Field	Description
<i>Authentication User Name</i>	Enter the conference, Entry Queue or Meeting Room name as registered with the proxy. This field can contain up to 20 ASCII characters.
<i>Authentication Password</i>	Enter the conference, Entry Queue or Meeting Room password as defined in the proxy. This field can contain up to 20 ASCII characters.

15 Click Next.

The IP Network Service is created and confirmed.

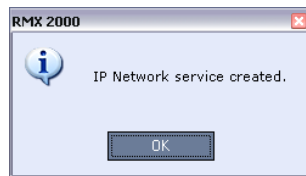

The IP Network Service cannot be saved if no Media cards are installed in the RMX.

16 Click OK.

During the initial RMX setup, if the system detects the presence of the RTM ISDN card, the ISDN/PSTN Network Service definition screens of the *Fast Configuration Wizard* are enabled.

If there is no RTM ISDN card in the RMX or if you do not want to define an ISDN/PSTN Network Service, go to Step 33.



A new ISDN/PSTN Network Service can be defined even if no RTM ISDN card is installed in the system **but** only via the *ISDN/PSTN Network Service ->Add New Service* dialog box.

The *Fast Configuration Wizard's* ISDN/PSTN configuration sequence begins with the *ISDN/PSTN* dialog box:

17 Define the following parameters:

Table 2-9 *Fast Configuration Wizard – ISDN Service Settings*

Field	Description
<i>Network Service Name</i>	Specify the service provider's (carrier) name or any other name you choose, using up to 20 characters. The Network Service Name identifies the ISDN/PSTN Service to the system. Default name: ISDN/PSTN Service Note: This field is displayed in all ISDN/PSTN Network Properties tabs and can contain character sets that use Unicode encoding.
<i>Span Type</i>	Select the type of spans (ISDN/PSTN) lines, supplied by the service provider, that are connected to the RMX. Each span can be defined as a separate Network Service, or all the spans from the same carrier can be defined as part of the same Network Service. Select either: <ul style="list-style-type: none"> T1 (U.S. – 23 B channels + 1 D channel) E1 (Europe – 30 B channels + 1 D channel) Default: T1 Note: Only one <i>Span Type</i> (E1 or T1) is supported on the RMX. If you define the first span as type E1 all other spans that you may later define must also be of type E1.
<i>Service Type</i>	PRI is the only supported service type. It is automatically selected.

18 Click **Next**.

The *PRI Settings* dialog box opens.

19 Define the following parameters:

Table 2-10 Fast Configuration Wizard – PRI Settings

Field	Description
<i>Default Num Type</i>	<p>Select the Default Num Type from the list.</p> <p>The Num Type defines how the system handles the dialing digits. For example, if you type eight dialing digits, the Num Type defines whether this number is national or international.</p> <p>If the PRI lines are connected to the RMX via a network switch, the selection of the Num Type is used to route the call to a specific PRI line. If you want the network to interpret the dialing digits for routing the call, select Unknown.</p> <p>Default: Unknown</p> <p>Note: For E1 spans, this parameter is set by the system.</p>
<i>Num Plan</i>	<p>Select the type of signaling (Number Plan) from the list according to information given by the service provider.</p> <p>Default: ISDN</p> <p>Note: For E1 spans, this parameter is set by the system.</p>
<i>Net Specific</i>	<p>Select the appropriate service program if one is used by your service provider (carrier).</p> <p>Some service providers may have several service programs that can be used.</p> <p>Default: None</p>
<i>Dial-out Prefix</i>	<p>Enter the prefix that the PBX requires to dial out. Leave this field blank if a dial-out prefix is not required.</p> <p>The field can contain be empty (blank) or a numeric value between 0 and 9999.</p> <p>Default: Blank</p>

20 Click Next.

The *Span Definition* dialog box opens.

Fast Configuration Wizard

- > IP Management Service
- > IP Signaling
- > Routers
- > DNS
- > Network Type
- > Gatekeeper
- > SIP Server
- > Security
- > ISDN/PSTN
- > PRI Settings
- > **Span Definition**
- > Phones
- > Spans
- > System Flags

Network Service Name:

Framing:

Side:

Line Coding:

Switch Type:

Back Next Cancel


21 Define the following parameters:

Table 2-11 *Fast Configuration Wizard – Spans Definition*

Field	Description
<i>Framing</i>	<p>Select the Framing format used by the carrier for the network interface from the list.</p> <ul style="list-style-type: none"> For T1 spans, default is SFSE. For E1 spans, default is FEBE.
<i>Side</i>	<p>Select one of the following options:</p> <ul style="list-style-type: none"> User side (default) Network side Symmetric side <p>Note: If the PBX is configured on the network side, then the RMX unit must be configured as the user side, and vice versa, or both must be configured symmetrically.</p>
<i>Line Coding</i>	<p>Select the PRI line coding method from the list.</p> <ul style="list-style-type: none"> For T1 spans, default is B8ZS. For E1 spans, default is HDB3.
<i>Switch Type</i>	<p>Select the brand and revision level of switch equipment installed in the service provider's central office.</p> <ul style="list-style-type: none"> For T1 spans, default is AT&T 4ESS. For E1 spans, default is EURO ISDN.

22 Click Next.

The *Phones* dialog box opens.

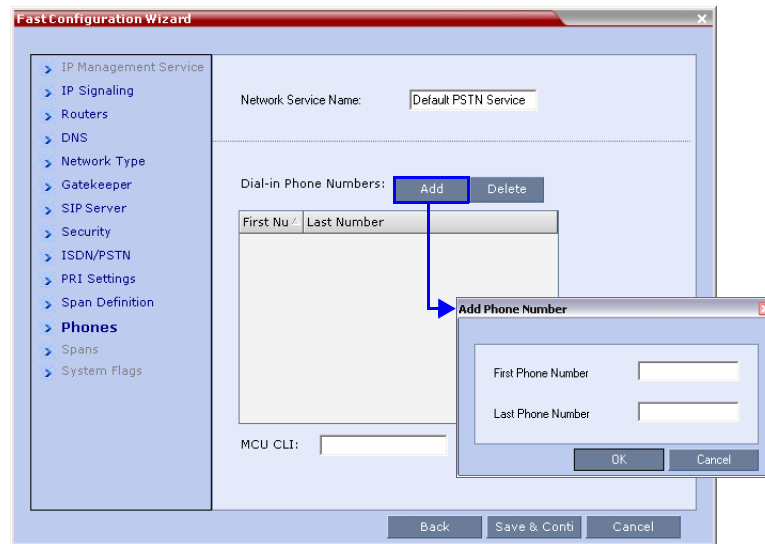

23 Click **Add** to define dial-in number ranges.

The *Add Phone Number* dialog box opens.

24 Define the following parameters:

Table 2-12 Fast Configuration Wizard – Add Phone Numbers

Field	Description
<i>First Number</i>	The first number in the phone number range.
<i>Last Number</i>	The last number in the phone number range.



- A range must include at least two dial-in numbers.
- A range cannot exceed 1000 numbers.

25 Click **OK**.

The new range is added to the *Dial-in Phone Numbers* table.

26 Optional. Repeat steps **23** to **24** to define additional dial-in ranges.

27 In the *Phones* tab enter the *MCU CLI* (Calling Line Identification).

With dial-in connections, the *MCU CLI* indicates the MCU's number dialed by the participant. In a dial-out connection, indicates the MCU (CLI) number as seen by the participant.

28 Click **Save & Continue**.

After clicking **Save & Continue**, you cannot use the **Back** button to return to previous configuration dialog boxes.


The *ISDN/PSTN Network Service* is created and is added to the ISDN/PSTN Network Services list.

If the system cannot create the *ISDN/PSTN Network Service*, an error message is displayed indicating the cause and allowing you access the appropriate dialog box in the *Fast Configuration Wizard* for corrective action.



29 Click **OK** to continue the configuration.

The *Spans* dialog box opens displaying the following read-only fields:

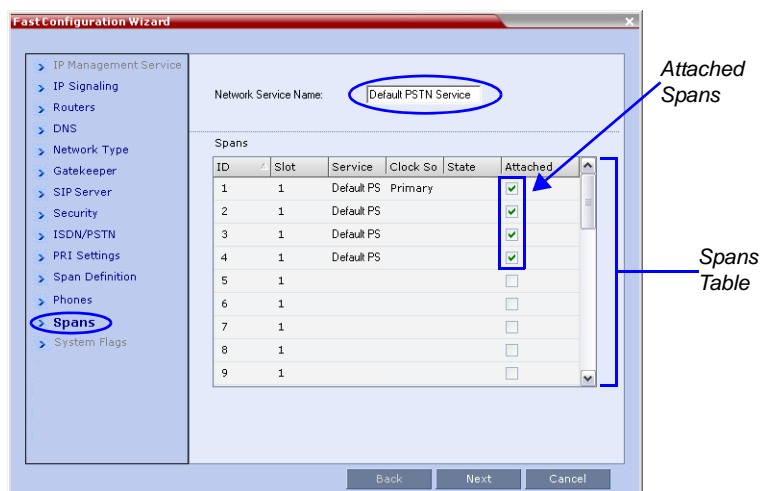

- **ID** – the connector on the RTM ISDN card (PRI1 to PRI12).
- **Slot** – the MPM/MPM+/MPMx card that the RTM ISDN / RTM ISDN 1500 card is connected to (RMX 2000: MPM 1/ MPM2 RMX 4000: MPM1/MPM2/MPM3/ MPM4).



On the RMX 1500, the *Slot* field does not appear.

- **Service** – the *ISDN/PSTN Network Service* to which the span is assigned.
- **Clock Source** – indicates if *ISDN* signaling synchronization is being supplied by the *Primary* or *Secondary* clock source. The first span to synchronize becomes the *Primary* clock source.
- **State** – the *System Alert* level of the span (*Major*, *Minor*). If there are no span related alerts, this column contains no entries.

30 Click the check boxes in the *Attached* field to attach spans (E1 or T1 PRI lines) to the network service named in the *Network Service Name* field.

The *Spans Table* displays the configuration of all spans and all *ISDN* network services in the system.

When using the *Fast Configuration Wizard* during *First Entry Configuration*, you are defining the first *ISDN/PSTN Network Service* in the system. Spans can only be attached to this service.

Additional *ISDN/PSTN Network Services* can be defined by using the **ISDN/PSTN Network Services > New PSTN Service** button in the *RMX Web Client*.

Spans can be attached to, or moved between ISDN network services by using the **ISDN/PSTN Network Services > ISDN Properties > Spans** tab in the *RMX Web Client*.

Each ISDN RTM card can support either 7 E1 or 9 T1 PRI lines (E1 and T1 connections cannot be used simultaneously).

31 Click Next.

The *System Flags* dialog box is displayed.

32 Enter the required **System Flags** information in the dialog box.

Table 2-13 Fast Configuration Wizard – System Flags

Field	Description / Default	
<i>Conference ID Length (MCU)</i>	The number of digits of the Conference ID to be assigned by the MCU. Range: 2-16 (Default: 5)	Note: Selecting 2 digits limits the number of simultaneous ongoing conferences to 99.
<i>Minimum Conference ID Length (User)</i>	The minimum number of digits that the user must enter when manually assigning a numeric ID to a conference. Range: 2-16 (Default: 4)	
<i>Maximum Conference ID Length (User)</i>	The maximum number of digits that the user can enter when manually assigning a Numeric ID to a conference. Range: 2-16 (Default: 8)	
<i>MCU Display Name</i>	The MCU name is displayed on the endpoint's screen. Default name: <i>Polycom RMX 1500/2000/4000</i>	

Table 2-13 Fast Configuration Wizard – System Flags (Continued)

Field	Description / Default
<i>Terminate Conference when Chairperson Exits</i>	When Yes is selected (default), the conference ends when the chairperson exits even if there are other participants connected. When No is selected, the conference automatically ends at the predefined end time, or when all the participants have disconnected from the conference.
<i>Auto Extend Conferences</i>	When Yes is selected (default), allows conferences running on the RMX to be automatically extended as long as there are participants connected and there are available resources. The maximum extension time allowed by the MCU is 30 minutes.


These flags can be modified later, if required, by selecting the *System Configuration* option from the *Setup* menu. For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Modifying System Flags" on page [21-1](#).

33 Click **Save & Close**.

The RMX confirms successful configuration.

34 In the *Success Message* box, click **OK**.

35 In the *Reset Confirmation* dialog box, click **Yes**.

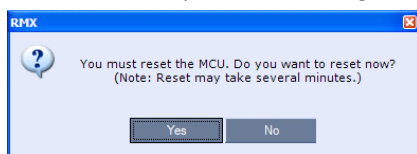

36 In the *Please wait for system reset* message box, click **OK**.



System restart may take approximately ten minutes.

37 Refresh the browser periodically until the *Login* screen is displayed.

38 When the *Login* screen is displayed, enter your *Username* and *Password* and click **Login**.

On first entry, the default *Username* and *Password* are both **POLYCOM**.

In the *RMX Web Client's Main Screen* an *MCU State* indicator displays a progress indicator **Starting up (15:25)** showing the time remaining until the system start-up is complete.

After system startup, the *MCU State* is in *Major* and two *Active Alarms* appear in the *Systems Alerts* list:

ID	Time	GMT Tim	Category	Level	Code	Description
2	Wed	Wednes	General	Major	Polycom	Polycom default User exists. For security reasons, it is recommended to delete this User and create your own User.
1	Wed	Wednes	General	Major	Error re	Failed to read MCU time configuration file (File does not exist)

System Alerts Participant Alerts Port Usage: Voice 0 / 0 Video 0 / 90 MCU State: MAJOR

- "Polycom default User exists" - The default RMX user (POLYCOM) with which the RMX system is shipped is still defined in the system. Once you have defined one or more new authorized administrator users, delete the default User to prevent unauthorized users from logging into the system.

— "Failed to read MCU time configuration file" - The RMX time was not set to the local time.

- 39 Create a new *User* with *Administrator* permissions. For more information see the RMX 1500/2000/4000 Administrator's Guide, "Adding a New User" on page 14-4.
- 40 Set the RMX time (**Setup > RMX Time**) and click **OK**. For more information, see the RMX 1500/2000/4000 Administrator's Guide, "RMX Time" on page 20-4.
- 41 Logout from the RMX Manager/RMX Web Client and log in using the *User Name* and *Password* defined earlier (do not use the default user login).
- 42 Delete the default User (POLYCOM) and click **OK** to confirm. For more information, see the RMX 1500/2000/4000 Administrator's Guide "Deleting a User" on page 14-5.



If the default User (POLYCOM) remains or the RMX time was not set, the active alarm is not deleted and the system status remains in *Major*.
For system security reasons the system is not fully configured until the default user is deleted.

- 43 The system is now fully configured and if there are no other *System Errors*, the green READY/RDY LED (on the 2000/4000 the LEDs are on the CNTL module) turns ON and the ERROR/ERR LED is OFF.



The *Fast Configuration Wizard* configures the *Default IP Network Service* with common parameters. Specific or additional settings (e.g. for ICE, or Secured Mode) should be performed once the initial configuration is complete. For detailed description of the IP Network Services, see the RMX 1500/2000/4000 Administrator's Guide, *Network Services*.

Selecting the RMX Web Client Languages

By default, the RMX Web Client interface is displayed only in English. However, the system administrator can choose the languages available for selection on the *Login* screen. These languages are represented by flags.

To choose the languages for selection in the *Login* screen:

- 1 On the RMX menu, click **Setup > Multilingual Setting**.
- 2 Click the check boxes of the languages to appear in the Login screen of the RMX Web Client. For more information see the RMX 1500/2000/4000 Administrator's Guide "Multilingual Setting" on page 20-42.

If the selected language is not supported by the browser or the workstation's Operating System, the RMX Web Client is displayed in English.

- 3 Click **OK**.
- 4 Log out and reconnect to the RMX.
The *Login* screen will display the flags of the selected languages.

RMX's Default Conferencing Settings

The RMX is shipped with default pre-configured conferencing entities, which allow RMX users and participants to start ongoing conferences without further configuration.

The default conferencing entities are:

Table 2-14 Conferencing Entities

Entity	Description										
<i>Meeting Rooms</i>	<p>Conferences saved on the MCU without using resources. They are activated when the first participant dials in.</p> <p>There are four Meeting Rooms ready for use:</p> <table> <tr> <th>Name</th><th>ID</th></tr> <tr> <td><i>Maple_Room</i></td><td><i>1001</i></td></tr> <tr> <td><i>Oak_Room</i></td><td><i>1002</i></td></tr> <tr> <td><i>Juniper_Room</i></td><td><i>1003</i></td></tr> <tr> <td><i>Fig_Room</i></td><td><i>1004</i></td></tr> </table> <p>Each Meeting Room uses the default <i>Conference Profile</i> called <i>Factory Video Profile</i> running at 384Kbps and has a default duration of one hour.</p>	Name	ID	<i>Maple_Room</i>	<i>1001</i>	<i>Oak_Room</i>	<i>1002</i>	<i>Juniper_Room</i>	<i>1003</i>	<i>Fig_Room</i>	<i>1004</i>
Name	ID										
<i>Maple_Room</i>	<i>1001</i>										
<i>Oak_Room</i>	<i>1002</i>										
<i>Juniper_Room</i>	<i>1003</i>										
<i>Fig_Room</i>	<i>1004</i>										
<i>Conference Profile</i>	<p>Name: <i>Factory Video Profile</i></p> <p>A Conference Profile is assigned to a Meeting Room to define its conferencing parameters, such as line rate and video resolution.</p> <p><i>Factory Video Profile</i> contains the video conference parameters with a bit rate of 384Kbps, <i>Auto Layout</i> and <i>Polycom Skin</i>. The Profile uses an IVR Service called <i>Conference IVR Service</i>.</p>										
<i>Conference IVR Service</i>	<p>Name: <i>Conference IVR Service</i></p> <p>The <i>Conference IVR Service</i> includes an optional video slide and all the voice messages played during the participant's connection process and during the conference.</p> <p>The <i>Conference IVR Service</i> contains a set of voice prompts in English and an optional video slide.</p> <p>It automates the participant's connection to a conference.</p>										

Table 2-14 Conferencing Entities (Continued)

Entity	Description
<i>Entry Queue</i>	<p>Name ID <i>DefaultEQ</i> 1000</p> <p>Using an Entry Queue enables one dial-in number to be used for all conferences. In the Entry Queue, participants are prompted for information to enable routing to their destination conferences. A default Entry Queue called <i>DefaultEQ</i> is provided.</p> <p>The default Entry Queue is also set to Ad Hoc conferencing which allows participants to start new conferences without prior definition by entering a Conference or Meeting Room ID that is not used by any ongoing conference currently running on the MCU. It uses an Entry Queue IVR Service called <i>Entry Queue IVR Service</i>.</p> <p>The default <i>Welcome Slide</i> displayed at the participants endpoint upon connection to the Entry Queue and lists the default Meeting Rooms. The participant can select one of these Meeting Rooms or enter another ID to start a new conference.</p> <p>If no <i>Transit Entry Queue</i> is defined, <i>DefaultEQ</i> is the default <i>Transit Entry Queue</i>. For more information see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "Transit Entry Queue" on page 6-6.</p> <p>Note: An ISDN/PSTN dial-in number is not assigned to the <i>Entry Queue</i> as the number depends on the dial-in numbers range defined in the <i>Network Service</i>. It must be manually assigned to enable ISDN or PSTN participant connections to this <i>Entry Queue</i>. For more information, see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "ISDN/PSTN Network Services" on page 15-35.</p>
<i>Entry Queue IVR Service</i>	<p>Name: <i>Entry Queue IVR Service</i></p> <p>Includes all the voice messages and video slides used to guide participants through their connection process to the MCU and route them to their destination conference.</p> <p><i>Entry Queue IVR Service</i> is the default Entry Queue IVR Service provided for the default Entry Queue.</p>

Customizing the RMX's Default Conferencing Settings

You can customize the conferencing entities to your organization's requirements:

- **To customize the Voice Prompts and Video Slides** to different organizations, users, languages etc. – first record the required messages and create the video slides and then create the appropriate conference IVR Service or Entry Queue IVR Service. These services must be assigned to the appropriate conference profile or Entry Queue. For more information, see the *RMX 1500/2000/4000 Administrator's Guide, "IVR Services"* on page **16-1**.
- **To modify the conference properties**, such as the conference line rate, specific video layout for the conference or the background that is used for the video display (skin), create a new *Conference Profile*. This Profile can be used for defining new ongoing conferences, Meeting Rooms and Single-dial Entry Queues. For more information, see the *RMX 1500/2000/4000 Administrator's Guide, "Defining Profiles"* on page **1-10**.
- **To allow ISDN participants to connect to a single dial Entry Queue** a dial in number must be assigned to the pre-configured Entry Queue.
To allow participants to connect to a single dial Entry Queue at a line rate other than 384 Kbps (as in the default Entry Queue) or play voice messages in different languages – create a new Entry Queue. For more information, see the *RMX 1500/2000/4000 Administrator's Guide, "Defining a New Conference IVR Service"* on page **16-7**.
- **You can personalize Meeting Rooms** for people in your organization with predefined conference and chairperson passwords (for added security) and allow only authorized people to start on going conferences. For more information, see the *RMX 1500/2000/4000 Administrator's Guide, "Meeting Rooms"* on page **5-1**.
- **To allow ISDN participants to connect directly to Meeting Rooms** a dial in number must be assigned to the pre-configured Meeting Room.
- The conferencing entities are designed mainly for dial in participants without prior definition of participants. **You can create your own Address Book** containing a list of participants to be dialed by the MCU. Once defined, these participants can be added to ongoing conferences saving the need to define them again. For more information, see the *RMX 1500/2000/4000 Administrator's Guide, "Address Book"* on page **7-1**.
- You can schedule conferences to start in the future. For more details, see the *RMX 1500/2000/4000 Administrator's Guide, "Reservations"* on page **8-1**.

Basic Operation

The most common operations performed via the *RMX Web Client* and the *RMX Manager* application are:

- Starting, monitoring and managing conferences
- Monitoring and managing **participants** and **endpoints** as individuals or **groups**.
 - **Participant** – A person using an endpoint to connect to a conference. When using a *Room System*, several participants use a single endpoint.
 - **Endpoint** – A hardware device, or set of devices, that can call, and be called by an MCU or another endpoint. For example, an endpoint can be a phone, a camera and microphone connected to a PC or an integrated *Room System* (conferencing system).
 - **Group** – A group of participants or endpoints with a common name.

Starting the RMX Web Client


Before you begin you need to get the following information from your system administrator:

- User name
- Password
- MCU Control Unit IP Address

To start the RMX Web Client:

- 1 In your browser address line, enter **http://<Control Unit IP Address>** and press the **Enter** key.

The *Login* screen is displayed.

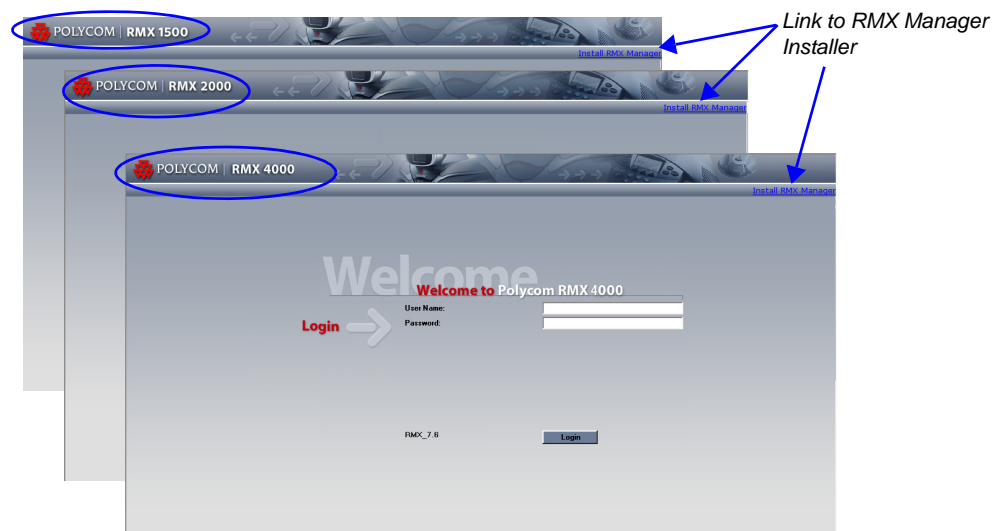

- 2 Enter your *Username* and *Password* and click the **Login** button.
On first entry, the default *Username* and *Password* are both **POLYCOM**.

The RMX Web Client main screen is displayed.



The Login screen contains a link to the *RMX Manager* installer.

Using the RMX Manager application, a single user can control a single or multiple RMX units as well as conferences from multiple RMXs. RMX 1500/2000/4000 can be managed and controlled by the RMX Manager application.

For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "RMX Manager Application" on page 19-1.

RMX Web Client Screen Components

The RMX Web Client's main screen consists of five panes:

- Conference List
- List Pane
- RMX Management
- Status Bar
- Address Book
- Conference Templates

You can login as a user with *Chairperson*, *Operator* or *Administrator* authorization. Your *Authorization Level* determines your viewing and system functions.

For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "Users, Connections and Notes" on page 14-1.

The Administrator's view is shown below:

The screenshot shows the RMX 2000 Web Client interface. The top navigation bar includes 'View', 'Administration', 'Setup', and 'Help'. The main content area is divided into several panes:

- Conferences List:** A table showing active conferences with columns for Display Name, Status, ID, Start Time, and End Time. One conference is listed: 'SUPP' with ID 43020, status 'Singl', and start time '12:23 P'.
- List Pane:** A table showing participants in the selected conference. Columns include Name, Status, Role, IP Address, Alias Name, Network, Dialing ID, Audio, and Video. Participants listed include 'SUPPORT_1001057406' (4 participants), 'isdn1', 'Faran', and 'ISDN'.
- RMX Management:** A sidebar menu with sections 'Frequently Used' (Connections, Users, Signaling Monitor, Hardware Monitor, Meeting Rooms, Reservations) and 'Rarely Used' (IVR Services, IP Network Services, Recording Links, ISDN/PSDN Network Services, Conference Profiles, Entry Queues, SIP Factories, Log Analysis).
- Address Book:** A table showing contacts with columns for Name, Type, and Dialing ID. Contacts listed include '213', '215', 'Aruget1', 'Faran', 'FX - 11', 'FX - 142', 'grcup1', 'Ipcwer', 'isdn1', 'Oren L', 'p103', 'P148-26', 'p158', 'p20sip', 'p2:0', 'p2:1', 'p2:2', 'p3:', 'p4:', 'p4: sip', 'PartyID', and 'PartyID'.
- Conference Templates:** A sidebar menu for managing conference templates.
- Status Bar:** A bottom bar showing system alerts, participant alerts, port usage (Voice: 0 / 40, Video: 12 / 72), and MCU state (MAJOR).

The main screen can be customized. For more information, see "Customizing the Main Screen" on page 3-9.

Viewing and System Functionality Permissions

The *RMX Web Client* user's viewing and system functionality depend on the *Authorization Level* assigned to each user as summarized in Table 3-1:

Table 3-1 Viewing and System Permissions

	Authorization Level		
	Chairperson	Operator	Administrator
	Viewing Permissions		
Conference List	✓	✓	✓
List Pane	✓	✓	✓
Address Book	✓	✓	✓
Conference Templates		✓	✓
Status Bar		✓	✓
RMX Management		✓	✓
Conference Alarms		✓	✓
Conference Status		✓	✓
Configurations		✓	✓
	System Functionality		
Start Conferences	✓	✓	✓
Monitor Conferences	✓	✓	✓
Monitor Participants	✓	✓	✓
Solve Basic Problems		✓	✓
Modify MCU Configuration			✓




In addition to Chairpersons, Operators and Administrators, an Auditor is a *User* type that can view Auditor Files and audit the system. For more information see the *RMX 1500/2000/4000 Administrator's Guide "Auditor"* on page [20-58](#).

Conferences List

If you are logged in as a User with *Operator or Administrator* permissions:

The *Conferences* pane lists all the conferences currently running on the MCU along with their *Status*, *Conference ID*, *Start Time* and *End Time* data. The number of ongoing conferences is displayed in the pane's title.

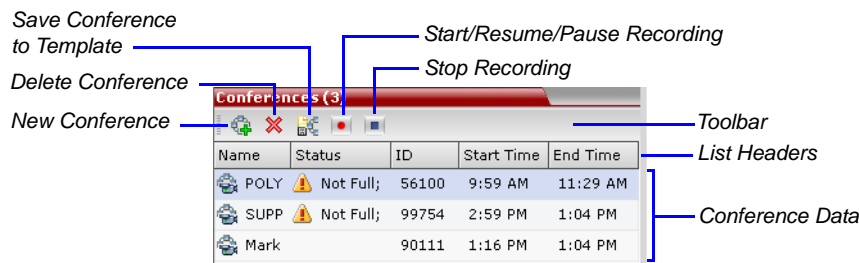


The *Conferences* list toolbar contains the following buttons:

- **New Conference** – to start a new ongoing conference.
- **Delete Conference** – delete the selected conference(s).
- If *Conference Recording* is enabled, the following buttons are displayed in color:
 - **Start/Resume Recording** – start/resume recording.
In MPM+ and MPMx mode, a *Recording Indication* is displayed to all conference participants informing them that the conference is being recorded.
 - **Stop Recording** – stop recording.
 - **Pause** – toggles with the *Start/Resume* button.
In MPMx mode, a *Paused Indication* is displayed to all conference participants informing them that conference recording has been paused.

If you are logged in as a User with *Chairperson* permissions:

- You can list and monitor conferences you have started or for which you have entered the password or that don't have a *Chairperson Password* assigned.
- A *Chairperson Password* field and a **Refresh** button are displayed.
The **Refresh** button does not change the *Chairperson Password*; it refreshes the *Conferences* list to display all ongoing conferences with the requested password.
For more information see “Using the Chairperson Password for Filtering” on page 3-38.
- A *Chairperson Password* column is included in the conference data.

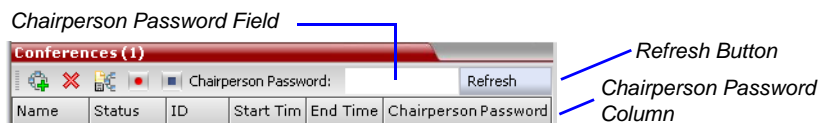

List Pane

The *List* pane displays details of the item selected in the *Conferences* pane or *RMX Management* pane.

The title of the pane changes according to the selected item.

Example: When an ongoing conference is selected in the *Conferences* pane, the list and parameters of the connected participants is displayed.



Selecting an item in the *RMX Management* pane, lists the items currently defined.

Example: If the *Users* item is selected, a list of *RMX Users* defined for the *RMX* is displayed.



RMX Management

Viewing Permissions		
Chairperson	Operator	Administrator
	✓	✓

The *RMX Management* pane lists the entities that need to be configured to enable the *RMX* to run conferences. Only users with Administrators permission can modify these parameters.

The *RMX Management* pane is divided into two sections:

- **Frequently Used** – parameters often configured monitored or modified.
- **Rarely Used** – parameters configured during initial system set-up and rarely modified afterward.

Items can be moved between these two sections to customize the management tasks per *RMX User*. For more details, see "*Customizing the RMX Management Pane*" on page 3-10.

Status Bar

The Status Bar at the bottom of the *RMX Web Client* contains *System* and *Participant Alerts* tabs as well as *Port Usage Gauges* and an *MCU State* indicator.



System Alerts

Viewing Permissions		
Chairperson	Operator	Administrator
	✓	✓

This is a list of system problems. The alert indicator flashes red when at least one system alert is active. The flashing continues until a user with Operator or Administrator permission reviews the list.

The *System Alerts* pane is opened and closed by clicking the **System Alerts** button in the left corner of the *Status Bar*.

Active
Alarms
Faults
List

System Alerts (6)						
Time	Category	Level	Code	Process Name	Description	
9/25/2006	general	major	IP_SERVICE_CHANGED	CSMngr	ip service was changed, reset the RMX (Task status: Normal)	
9/13/2006	card	major	NO_CONNECTION_WITH_CARD	Cards	Board ID:0, Card Type:switch, Description: No connection with Switch (Task status: Normal)	
9/13/2006	general	major	INTERNAL_MCU_RESET	McmsDaemo	No connection with Switch (Task status: Normal)	
9/13/2006	general	major	INSUFFICIENT_RESOURCES	Resource	Insufficient resources (Task status: Normal)	
9/13/2006	card	major	CARD_STARTUP_FAILURE	Cards	Board ID:0, Card Type:illegal, Description: MFA start failure	
9/13/2006	general	major	CFG_CHANGED	McuMngr	SYSTEM CFG was changed, reset the RMX (Task status: Normal)	

For more information about **Active Alarms** and **Faults List**, see the *RMX 1500/2000/4000 Administrator's Guide*, "System and Participant Alerts" on page 20-1.

Participant Alerts

Viewing Permissions		
Chairperson	Operator	Administrator
✓	✓	✓

This is a list of participants that are experiencing connection problems. It is sorted by conference.


The *Participant Alerts* pane is opened and closed by clicking the **Participant Alerts** button in the left corner of the *Status Bar*.

Participant Alerts (2)											
Conference	Name	Status	Disconnection Time	Role	IP Address	Alias	Network	Dialing Direction	Audio	Video	Encryption
Marketing	V69	discon	9/21/2006 2:18 PM		172.22.189		H.323	Dial out			
Marketing	V96	discon	9/21/2006 2:18 PM		172.22.186		H.323	Dial out			

Port Usage Gauges

Viewing Permissions		
Chairperson	Operator	Administrator
	✓	✓

- The *Port Usage* gauges indicate:
- The total number of *Video* or *Voice* ports in the system according to the *Video/Voice Port Configuration*.
 - The number of *Video* and *Voice* ports in use.
 - The *High Port Usage* threshold.

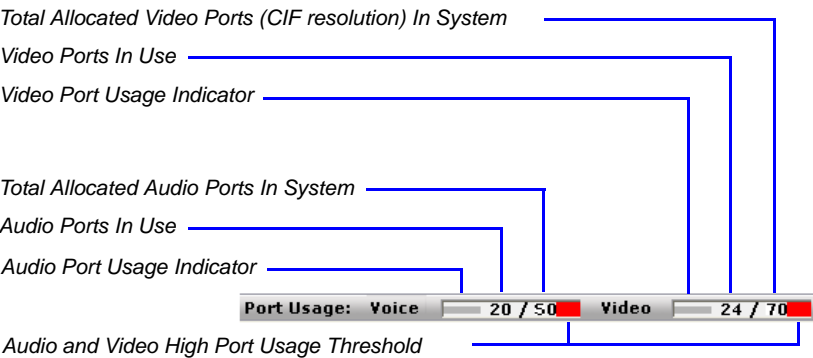



The *High Port Usage* threshold represents a percentage of the total number of video or voice ports available. It is set to indicate when resource usage is approaching its maximum, resulting in no free resources to run additional conferences. When port usage reaches or exceeds the threshold, the red area of the gauge flashes. The default port usage threshold is 80% and it can be modified by the system administrator. For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Port Usage Threshold" on page 20-20.



MCU State

Viewing Permissions		
Chairperson	Operator	Administrator
✓	✓	✓

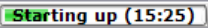The *MCU State* indicator displays one of the following:

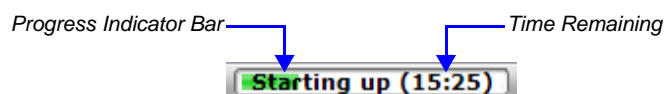-  - The MCU is starting up. The time remaining until the system start-up is complete is displayed between brackets while a green progress indicator bar indicates the start-up progress.



-  - The MCU is functioning normally.
-  - The MCU has a major problem. MCU behavior could be affected and attention is required.


Address Book

Viewing Permissions		
Chairperson	Operator	Administrator
✓	✓	✓

The *Address Book* is a list of *Participants* and *Groups* that have been defined on the RMX. The information in the *Address Book* can be modified only by an administrator. All RMX users can, however, view and use the *Address Book* to assign participants to conferences.

The *Address Book* toolbar contains a *Quick Search* field and the following six buttons:

- New Participant*
- Delete Participant*
- Import Address Book*
- New Group*
- Delete Group*
- Export Address Book*

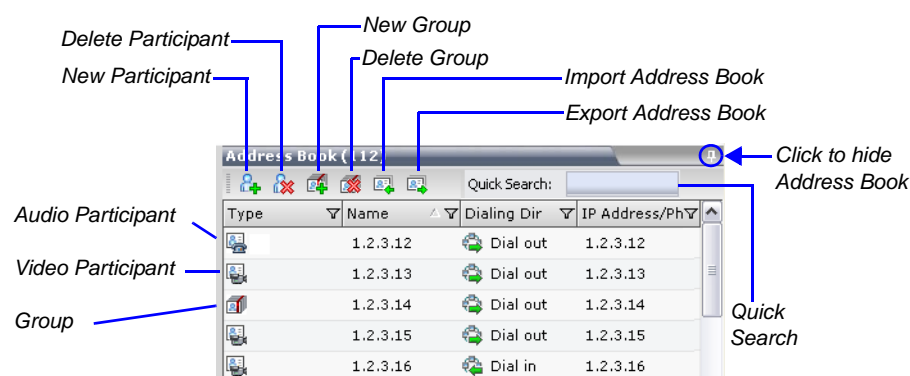

Address Book entries are listed according to:

- Type** - whether an individual *Participant* or a *Group* of participants
- Name** - of the participant or group
- Dialing Direction** - Dial-in or Dial-out
- IP Address/Phone** - of the participant

Displaying and Hiding the Address Book

The first time you access the *RMX Web Client*, the *Address Book* pane is displayed. You can hide it by clicking the anchor pin (📌) button.

The *Address Book* pane closes and a tab appears at the right edge of the screen.

Click the tab to re-open the *Address Book*.



Conference Templates


Conference Templates enable administrators and operators to create, save, schedule and activate identical conferences.

A *Conference Template*:


- Saves the conference Profile.
- Saves all participant parameters including their *Personal Layout* and *Video Forcing* settings.
- Simplifies the setting up *Telepresence* conferences where precise participant layout and video forcing settings are crucial.

Displaying and Hiding Conference Templates

The *Conference Templates* list pane is initially displayed as a closed tab in the *RMX Web Client* main window. The number of saved *Conference Templates* is indicated on the tab.

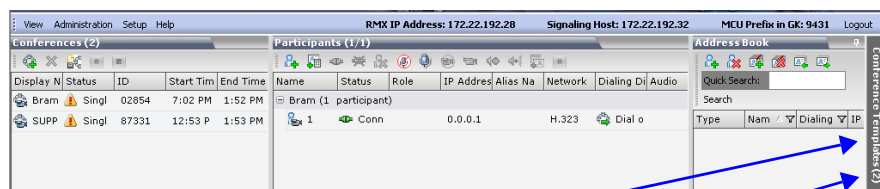

Clicking the tab opens the *Conference Templates* list pane.

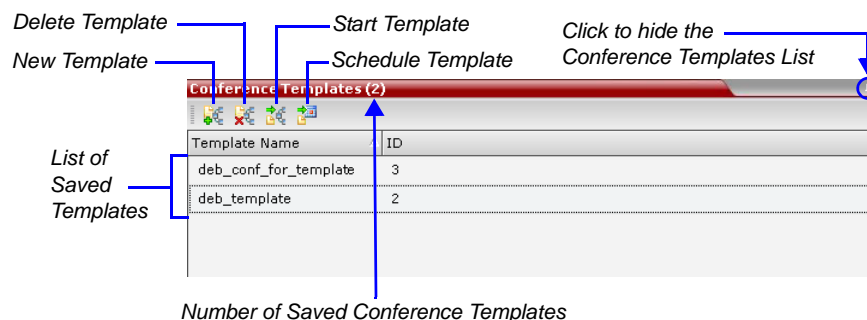

Hide the *Conference Templates* list pane by clicking the anchor pin (📌) button in the top right corner of the pane.

The *Conference Templates* list pane closes and a tab appears in the top right corner of the screen.

Customizing the Main Screen

You can customize the main screen according to your preferences. Pane sizes can be changed, column widths can be adjusted and data lists can be sorted.



Customization settings are automatically saved for each logged-in user.

The next time the *RMX Web Client* is opened, the main screen settings appear as they were when the user exited the application.

To re-size a pane:

>> Move the pointer over the pane border and when the pointer becomes a click and drag the pane border to the required size and release the mouse button.

To adjust column width:

- 1 In the column header row, place the pointer on the vertical field- separator bar of the column.
- 2 When the pointer becomes a , click and drag the field separator bar to the required column size and release the mouse button.

To sort the data by any field (column heading):

- 1 In the *Conference* list or *List* view pane, click on the column heading of the field to be used for sorting.

A or symbol appears in the column heading indicating that the list is sorted by this field, as well as the sort order.


- 2 Click on the column heading to toggle the column's sort order.

To change the order of columns in a pane:

>> Click the column heading to be moved and drag it to its new position. When a set of red arrows appears indicating the column's new position, release the mouse button.

To restore the RMX display window to its default configuration:

>> On the *RMX* menu, click **View > Restore RMX Display Defaults**.

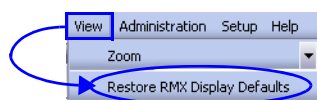

Increasing and Decreasing the Text Size

You can increase or decrease the text size of the RMX Web Client windows for easier readability.

To increase or decrease the text size:

- 1 On the RMX menu, click **View**.
- 2 Select the drop-down arrow on the **Zoom** option and click the desired text size percentage (default is 100%).



In some cases, the text in the dialog boxes in the RMX Web Client might appear not aligned or incomplete. This issue is not caused by setting the Zoom option. Rather, the text size in the Display settings in Windows Control Panel may affect the display of the dialog boxes. Check the Windows Display settings by clicking the **Windows Start** button and selecting **Control Panel>Display**. For Windows XP, click the **Appearance** tab, select **Normal** for the Font size and click **OK**. For Windows 7, select the **Smaller - 100%** option and click **OK**.


Customizing the RMX Management Pane

The *RMX Management* pane can be viewed either as a list or as a toolbar.

To switch between Toolbar and List Views:

- >> In the *RMX Management* pane, click the *Toolbar View* button to switch to Toolbar view. In Toolbar view, click the *List View* button to switch back to List view.

Toolbar View Button

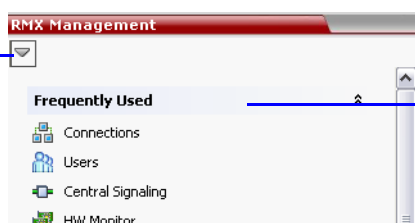

List View


List View Button




Toolbar View

In *List* view, you can move items between the *Frequently Used* and *Rarely Used* sections depending on the operations you most commonly perform and the way you prefer to work with the *RXM Web Client*. This option does not work in *Toolbar* view as all items are represented by icons.


To expand or collapse the Frequently Used and Rarely Used sections:

The *Frequently Used* and *Rarely Used* sections can be expanded or collapsed by clicking the  and  buttons.

To move items within and between the Frequently Used and Rarely Used sections:

- 1 In the *RMX Management* pane click and drag the icon of the item that you wish to move. An indicator line () appears indicating the new position of the icon.

- 2 Release the mouse button when the icon is in the desired position.

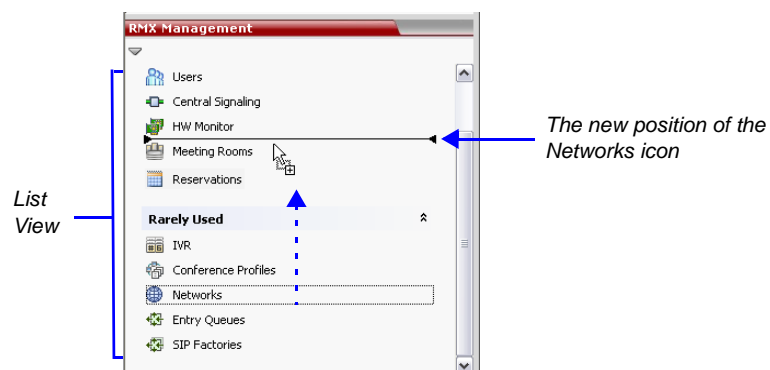

Starting a Conference

There are several ways to start a conference:


- Clicking the *New Conference* button in the *Conferences* pane. For more information, see "*Starting a Conference from the Conferences Pane*" on page [3-13](#).
- Dialing in to a *Meeting Room*.
A *Meeting Room* is a conference that is saved on the MCU. It remains in passive mode until it is activated by the first participant, or the meeting organizer, dialing in.
For more information about Meeting Rooms, see the *RMX 1500/2000/4000 Administrator's Guide*, "*Meeting Rooms*" on page [5-1](#).
- Dialing in to an *Ad Hoc Entry Queue* which is used as the access point to the MCU.
For a detailed description of Ad Hoc Entry Queues, see the *RMX 1500/2000/4000 Administrator's Guide*, "*Entry Queues*" on page [6-1](#).
- Start a *Reservation*:
 - If the *Start Time* of the *Reservation* is past due the conference becomes ongoing immediately.
 - If the *Start Time* of the *Reservation* is in the future the conference becomes ongoing, at the specified time on the specified date.For more information, see "*Starting a Reservation*" on page [3-22](#).
- Start any *Conference Template* saved in the *Conference Templates* list.
For more information, see "*Starting an Ongoing Conference From a Template*" on page [3-23](#).
- Clicking on the link included in a *Microsoft Outlook Polycom Meeting Invitation* or by manually dialing the numbers displayed in the invitation using the endpoint's numeric input device.
Attendees that have received an invitation to a *Polycom Meeting* via the *Polycom Conferencing Add-in for Microsoft Outlook* can start a conference by being the first invited attendee to click on a link in the *Meeting Invitation* displayed on his/her workstation or calendaring enabled endpoint, or manually dial in to the meeting using the *Polycom Conference* information included in the *Meeting Invitation*.
For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "*Polycom Conferencing for Microsoft Outlook®*" on page [11-1](#).

Starting a Conference from the Conferences Pane

To start a conference from the Conference pane:

- 1 In the *Conferences* pane, click the **New Conference** (🔗) button.

The *New Conference – General* dialog box opens.

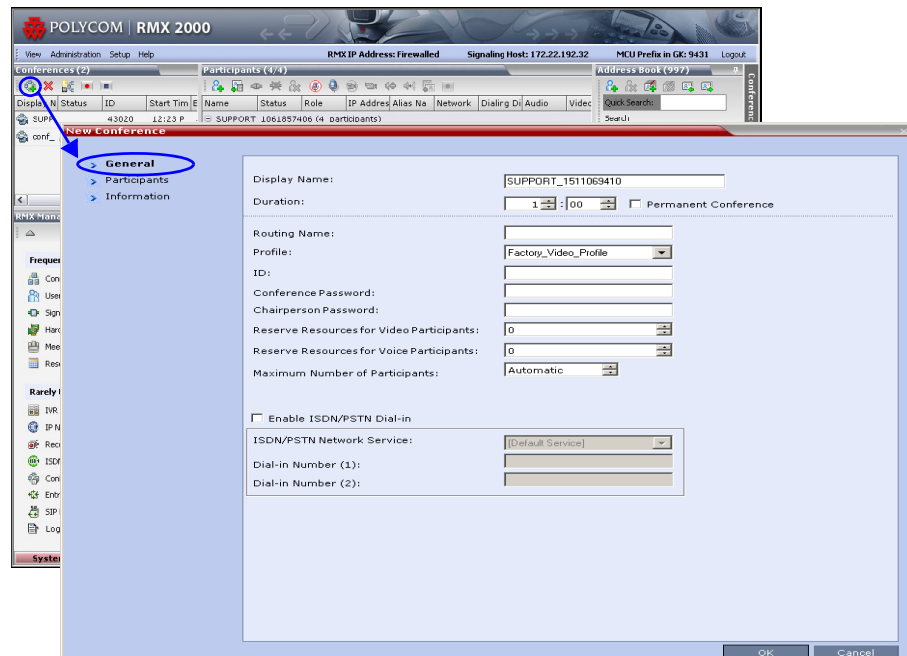

The system displays the conference default *Name*, *Duration* and the default *Profile*, which contains the conference parameters and media settings.

The RMX automatically allocates the conference *ID*, when the conference starts.

In most cases, the default conference *ID* can be used and you can just click **OK** to launch the conference. If required, you can enter a conference *ID* before clicking **OK** to launch the conference.

If you are the meeting chairperson or organizer using the *RMX Web Client* to start your own meeting, you need to communicate the default conference *ID* (or the one you created) to the other conference participants so they can dial in.

You can use the *New Conference - General* dialog box to modify the conference parameters. If no defined participants are to be added to the conference, or you do not want to add additional information, click **OK**.

General Tab

2 Define the following parameters:

Table 3-2 New Conference – General Options

Field	Description
<i>Display Name</i>	<p>The Display Name is the conferencing entity name in native language character sets to be displayed in the RMX Web Client.</p> <p>In conferences, Meeting Rooms, Entry Queues and SIP factories the system automatically generates an ASCII name for the <i>Display Name</i> field that can be modified using Unicode encoding.</p> <ul style="list-style-type: none"> English text uses ASCII encoding and can contain the most characters (length varies according to the field). European and Latin text length is approximately half the length of the maximum. Asian text length is approximately one third of the length of the maximum. <p>The maximum length of text fields also varies according to the mixture of character sets (Unicode and ASCII).</p> <p>Maximum field length in ASCII is 80 characters.</p> <p>If the same name is already used by another conference, Meeting Room or Entry Queue, the RMX displays an error message requesting you to enter a different name.</p> <p>Note: This field is displayed in all tabs.</p>
<i>Duration</i>	<p>Define the duration of the conference in hours using the format HH:MM (default 01:00).</p> <p>Default minimum duration is 11 minutes for RMX1500 and 20 minutes for RMX 2000/4000 when the Automatic Extension of conference duration mechanism is enabled. To define a shorter duration, the Automatic Extension of conference duration mechanism is disabled, by setting the system flag ENABLE_AUTO_EXTENSION to NO. For more information about system flags, see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "Modifying System Flags" on page 21-1.</p> <p>Note: This field is displayed in all tabs.</p>
<i>Permanent Conference</i>	<p>Click this check box to make this conference a <i>Permanent Conference</i>: an ongoing conference with no pre-determined <i>End Time</i>, continuing until it is terminated by an administrator, operator or chairperson. For more information see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "Permanent Conference" on page 3-59.</p> <p>Note: This field is displayed in all tabs.</p>

Table 3-2 New Conference – General Options (Continued)

Field	Description
<i>Routing Name</i>	<p><i>Routing Name</i> is the name with which ongoing conferences, Meeting Rooms, Entry Queues and SIP Factories register with various devices on the network such as gatekeepers and SIP servers. This name must be defined using ASCII characters.</p> <p>Comma, colon and semicolon characters cannot be used in the <i>Routing Name</i>.</p> <p>The <i>Routing Name</i> can be defined by the user or automatically generated by the system if no <i>Routing Name</i> is entered as follows:</p> <ul style="list-style-type: none"> • If ASCII characters are entered as the <i>Display Name</i>, it is used also as the <i>Routing Name</i> • If a combination of Unicode and ASCII characters (or full Unicode text) is entered as the <i>Display Name</i>, the <i>ID</i> (such as Conference ID) is used as the <i>Routing Name</i>. <p>If the same name is already used by another conference, Meeting Room or Entry Queue, the RMX displays an error message and requests that you enter a different name.</p>
<i>Profile</i>	<p>The system displays the name of the default Conference Profile. Select the required Profile from the list.</p> <p>The <i>Conference Profile</i> includes the conference line rate, media settings and general settings.</p> <p>For a detailed description of Conference Profiles, see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "Conference Profiles" on page 1-1.</p>
<i>ID</i>	<p>Enter the unique-per-MCU conference ID. If left blank, the MCU automatically assigns a number once the conference is launched.</p> <p>This ID must be communicated to conference participants to enable them to dial in to the conference.</p>
<i>Conference Password</i>	<p>Enter a password to be used by participants to access the conference. If left blank, no password is assigned to the conference. This password is valid only in conferences that are configured to prompt for a conference password.</p> <p>This field is numeric and has a default length of 4 characters. The administrator can modify it in the <i>Setup - System Configuration</i> settings. For more information, see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "Modifying System Flags" on page 21-1.</p> <p>The RMX can be configured to automatically generate conference (and chairperson) passwords when these fields are left blank. For more information, see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "Automatic Password Generation Flags" on page 21-35.</p>

Table 3-2 *New Conference – General Options (Continued)*

Field	Description
<i>Chairperson Password</i>	<p>Enter a password to be used by the RMX to identify the <i>Chairperson</i> and grant him/her additional privileges. If left blank, no chairperson password is assigned to the conference. This password is valid only in conferences that are configured to prompt for a chairperson password.</p> <p>This field is numeric and has a default length of 4 characters. The administrator can modify it in the <i>Setup - System Configuration</i> settings. For more information, see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "Modifying System Flags" on page 21-1.</p> <p>The RMX can be configured to automatically generate chairperson (and conference) passwords when these fields are left blank. For more information, see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "Automatic Password Generation Flags" on page 21-35.</p>
<i>Reserve Resources for Video Participants</i>	<p>Enter the number of video participants for which the system must reserve resources.</p> <p>Default: 0 participants.</p> <p>Maximum:</p> <ul style="list-style-type: none"> • MPM Mode: 80 participants • MPM+ Mode: 160 participants. • MPMx Mode: 180 participants (Double card assembly) • MPMx Mode: 90 participants (Single card assembly) <p>Note: From <i>Version 7.1</i>, MPM media cards are not supported.</p>
<i>Reserve Resources for Audio Participants</i>	<p>Enter the number of audio participants for which the system must reserve resources. Voice resources must be allocated in the <i>Video/Voice Port Allocation</i> dialog box.</p> <p>Default: 0 participants.</p> <p>Maximum:</p> <ul style="list-style-type: none"> • MPM Mode: 80 participants. • MPM+ Mode: 200 participants (if all ports are set to Audio Only). • MPMx Mode: 720 participants (Double card assembly, with all ports are set to Audio Only). • MPMx Mode: 360 participants (Single card assembly, with all ports are set to Audio Only). <p>Note: From <i>Version 7.1</i>, MPM media cards are not supported.</p>
<i>Maximum Number of Participants</i>	<p>Indicate the total number of participants that can be connected to the conference. The automatic setting indicates that the maximum number of participants that can be connected to the conference is determined according to resource availability.</p> <p>Note: If a number is specified, it should be large enough to accommodate the participants specified in the <i>Reserve Resources for Video/Audio Participants</i> fields.</p>
<i>Enable ISDN/PSTN Dial-in</i>	<p>Select this check box if you want ISDN and PSTN participants to be able to connect directly to the conference.</p>

Table 3-2 *New Conference – General Options (Continued)*

Field	Description
<i>ISDN/PSTN Network Service</i>	The default Network Service is automatically selected. A different ISDN/PSTN Network Service can be selected from the Network Services list.
<i>Dial-in Number (1)</i>	Leave this field blank to let the system automatically assign a number from the dial-in range defined for the selected ISDN/PSTN Network Service. To manually define a dial-in number, enter a unique number from the dial-in number range defined for the selected Network Service. This number cannot be assigned to another Conference/Reservation/Meeting Room/Gateway Profile
<i>Dial-in Number (2)</i>	By default, the second dial-in number is not defined. To define a second dial-in number, enter a required number from the dial-in number range defined for the selected Network Service.

- 3 If all participants are undefined, dial-in and no additional information is required for the new conference, click **OK**.
- 4 To add participants from the *Participants Address Book* or to define participants (mainly dial-out participants) click the *Participants* tab.

Participants Tab



This procedure is optional.

The *Participants* tab is used to add participants to the conference from the *Address Book* or by defining them. Defined dial-out participants are connected to the conference automatically when the conference is launched, unless the *Dial Out Manually* option is selected.

- 5 Click the **Participants** tab.
The *Participants* tab opens.

When defining a new conference, the *Participants List* is empty.

The following table describes the information displayed in the *Participants List* and the operations that can be performed.

Table 3-3 *New Conference – Participants Tab*

Column / Button	Description
Participants List	
<i>Name</i>	A Unicode field that displays the participant's name and an icon representing the endpoint type: <i>Voice</i> or <i>Video</i> .
<i>IP Address/Phone</i>	Indicates the IP address or phone number of the participant's endpoint. <ul style="list-style-type: none"> For dial-out connection, displays the IP address or phone number of the endpoint called by the Polycom RMX 1500/2000/4000. For dial-in connection, displays the participant's IP address or phone number used to identify and route the participant to the appropriate conference.
<i>Alias Name/SIP Address (IP Only)</i>	Displays the alias name of an H.323 endpoint or the SIP URL.
<i>Network</i>	The network communication protocol used by the endpoint to connect to the conference: <i>H.323</i> , <i>SIP</i> or <i>ISDN/PSTN</i> .
<i>Dialing Direction</i>	Select the dialing direction: <ul style="list-style-type: none"> Dial-in – The participant dials in to the conference. This field applies to IP participants only. Dial-out – The MCU dials out to the participant. Note: <ul style="list-style-type: none"> Dial-out is forced when defining an ISDN/PSTN participant.
<i>Encryption</i>	Displays whether the endpoint uses encryption for its media. The default setting is <i>Auto</i> , indicating that the endpoint must connect according to the conference encryption setting.
<i>Lecturer</i>	This option is used to activate the <i>Lecture Mode</i> . Select the participant you want to designate as <i>Lecturer</i> from the list of conference participants. The Lecturer can be selected once the conference is running and participants are connected.
<i>Dial Out Manually</i>	Select this option to designate an RMX User-controlled dial-out conference connection. When checked, the user must connect each of the dial-out participants who remain on standby until they are connected to the conference.
Buttons	
New	Click to define a new participant. For more information, see the <i>RMX 1500/2000/4000 Administrator's Guide</i> , "Adding a new participant to the Address Book Directly" on page 7-3.
Remove	Click to remove the selected participant from the conference.

Table 3-3 New Conference – Participants Tab (Continued)


Column / Button	Description
Add from Address Book	Click to add a participant from the <i>Address Book</i> to the conference.

Participants can be added to the conference in the following methods:

- Defining a new participant during the definition of the conference (clicking the **New** button).
- Adding pre-defined participants from the *Address Book* by either selecting the participants from the list or dragging and dropping the participants from the *Address Book* to the Participants list.
- Dial-in participants can connect to the conference after it was started (without using the *New Conference - Participants* dialog box).
- Once the conference has started, participants can be added to a conference directly from the Participants *Address Book* without having to use the *New Conference - Participants* tab. For more details, see "Adding Participants from the Address Book" on page 3-48.

To add participants from the Address Book:

- 6 In the *Participants List*, click the **Add from Address Book** button to open the *Participants Address Book*.

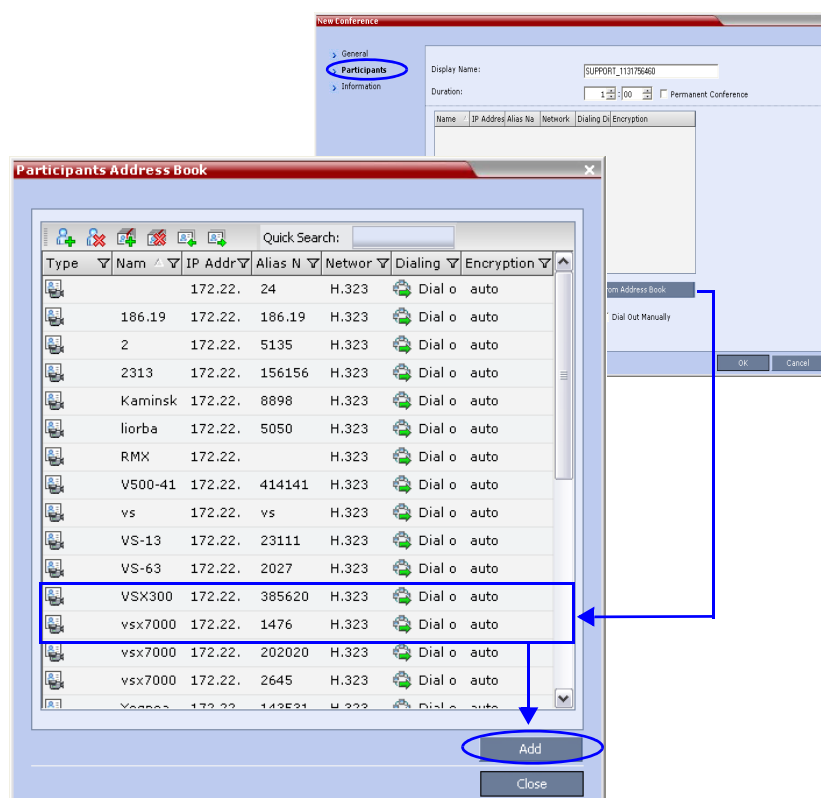

- 7 In the *Participants Address Book*, select the participants that you want to add to the conference and click the **Add** button.

Standard Windows multiple selection techniques can be used in this procedure.

- 8 The selected participants are assigned to the conference and appear in the *Participant List*.
- 9 Select additional Participants or click the **Close** button to return to the *Participants* tab.

Information Tab

In the *Info* fields, you can add general information about the conference, such as contact person name, company name, billing code, etc.

This information is written to the *Call Detail Record (CDR)* when the conference is launched. Changes made to this information once the conference is running are **not** saved to the *CDR*.



This procedure is optional.
The information entered into these fields does not affect the conference.

To add information to the conference:

- 10 Click the **Information** tab.

The *Information* tab opens.

- 11 Enter the following information:

Table 3-4 New Conference – Info Options

Field	Description
<i>Info1, 2, 3</i>	There are three information fields that allow you to enter general information for the conference such as company name, contact person etc. Unicode can be used in these fields. The maximum length of each field is 80 characters.
<i>Billing</i>	Enter the conference billing code if applicable.

- 12 Click **OK**.

An entry for the new conference appears in the *Conferences* pane.

If no participants were defined for the conference or as long as no participants are connected, the indication *Empty* and a warning icon (⚠️) appear in the *Status* column in the *Conferences* pane.


The status changes when participants connect to the conference.

If no participant connects within the time specified in the *Conference Profiles > Auto Terminate > Before First Joins* field, the conference is automatically terminated by the system.


Starting a Reservation

To start a conference from the Reservation Calendar:

- 1 In the *RMX Management* pane, click the **Reservations** entry (📅).
The *Reservation Calendar* is displayed.
- 2 Click the **New Reservation** (+) button.

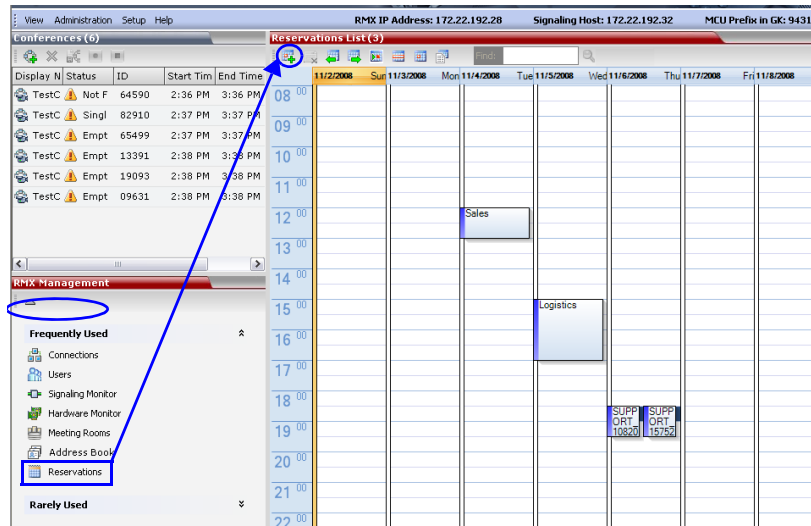

The *New Reservation – General* tab dialog box opens.

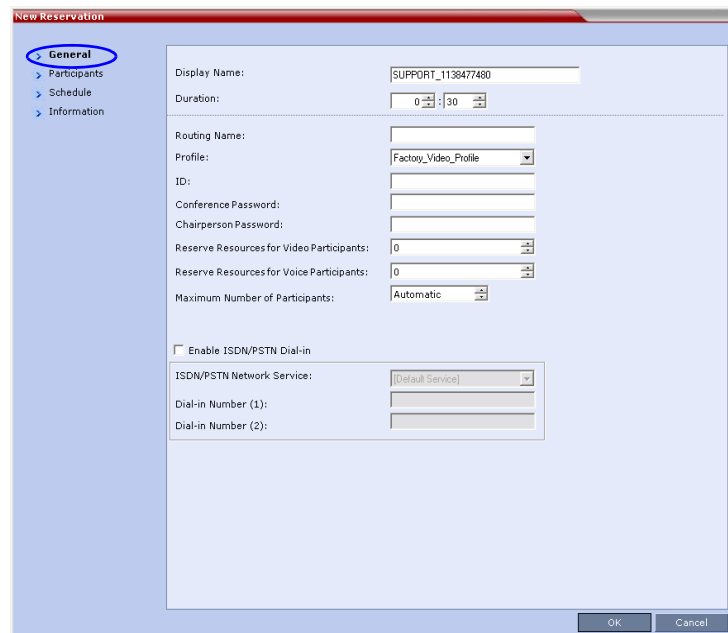


This dialog box is identical to the *New Conference - General* dialog box. For a field description, see "General Tab" on page 3-14.

- 3 **Optional.** Select the **Enable ISDN/PSTN Dial-in** check box if you want ISDN and PSTN participants to be able to connect directly to the conference.

- 4 If *Enable ISDN/PSTN Dial-in* option is selected, either enter a dial-in number, or leave the *Dial-in Number* field blank to let the system automatically assign a number from the dial-in range defined for the selected ISDN/PSTN Network Service.
- 5 Click the **OK** button.

A confirmation box is displayed stating that the *Reservation* time is past due and that the conference will become ongoing.

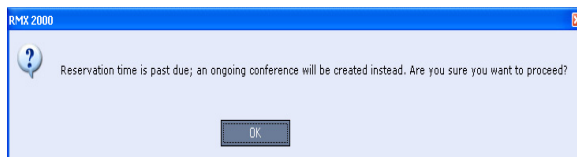

- 6 Click **OK**.

The conference is started. If an ISDN/PSTN dial-in number was assigned to the conference either automatically or manually, this number can be viewed in the *Conferences* pane.


For more information about *Reservations*, see the *RMX 1500/2000/4000 Administrator's Guide*, "Reservations" on page 8-1.

Starting an Ongoing Conference From a Template

An ongoing conference can be started from any Conference Template saved in the *Conference Templates* list.

To start an ongoing conference from a Template:

- 1 In the *Conference Templates* list, select the Template you want to start as an ongoing conference.
- 2 Click the **Start Conference from Template** (🔗) button.
or
Right-click and select **Start Conference from Template**.

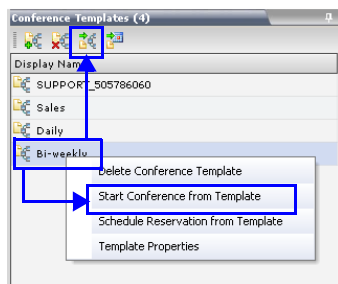

The conference is started.



If a Conference Template is assigned a dial-in number that is already assigned to an ongoing conference, Meeting Room, Entry Queue or Gateway Profile, when the template is used to start an ongoing conference or schedule a reservation it will not start. However, the same number can be assigned to several conference templates provided they are not used to start an ongoing conference at the same time. If a dial in number conflict occurs prior to the conference's start time, an alert appears: "ISDN dial-in number is already assigned to another conferencing entity" and the conference cannot start.

The name of the ongoing conference in the *Conferences* list is taken from the Conference Template *Display Name*.

Participants that are connected to other ongoing conferences when the template becomes an ongoing conference are not connected.



If an ongoing conference, Meeting Room or Entry Queue with the same *Display Name*, *Routing Name* or *ID* already exist in the system, the conference will not be started.

For detailed description of Conference Templates, see *RMX 1500/2000/4000 Administrator's Guide*, "Conference Templates" on page **10-1**.

Starting a Meeting from Microsoft Outlook using the Polycom Conferencing Add-in to Microsoft Outlook

Polycom Conferencing for Microsoft Outlook is an add-in that enables users to easily organize and invite attendees to *Video Enabled* meetings via *Microsoft Outlook®*. For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "Polycom Conferencing for Microsoft Outlook®" on page **11-1**.

Starting an Audio Meeting from a Microsoft Outlook Polycom Meeting Invitation

Using the *Polycom Conferencing Add-in to Microsoft Outlook*, a meeting can be created as any other Outlook meeting. For more details, see *Polycom Unified Conferencing Deployment Guide for Microsoft Environments*.

Click-to-Conference

Microsoft Lync and *OCS* clients can be configured to start multipoint audio and video conferences directly from the *OCS* or *Lync Client* window that will run on the *RMX MCU* in the same way point-to-point calls are started.

In this mode, several contacts can be selected before starting an audio or video conference. The ad-hoc conference is started on the *RMX* instead of the *Microsoft A/V MCU*, offering better, higher quality video.

For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "Click-to-Conference" on page **H-82**.

Connecting to a Conference

Direct Dial-in

Direct dial-in connection to conferences and Meeting Rooms is available to all endpoints. Participants must be provided with a dialing string which can vary according to the network type, conference password and chairperson password.

Participants dial the conference dial-in string and are connected to the conference IVR Service. Once the correct information, such as the conference password and chairperson password are entered, the participants are connected to the conference.

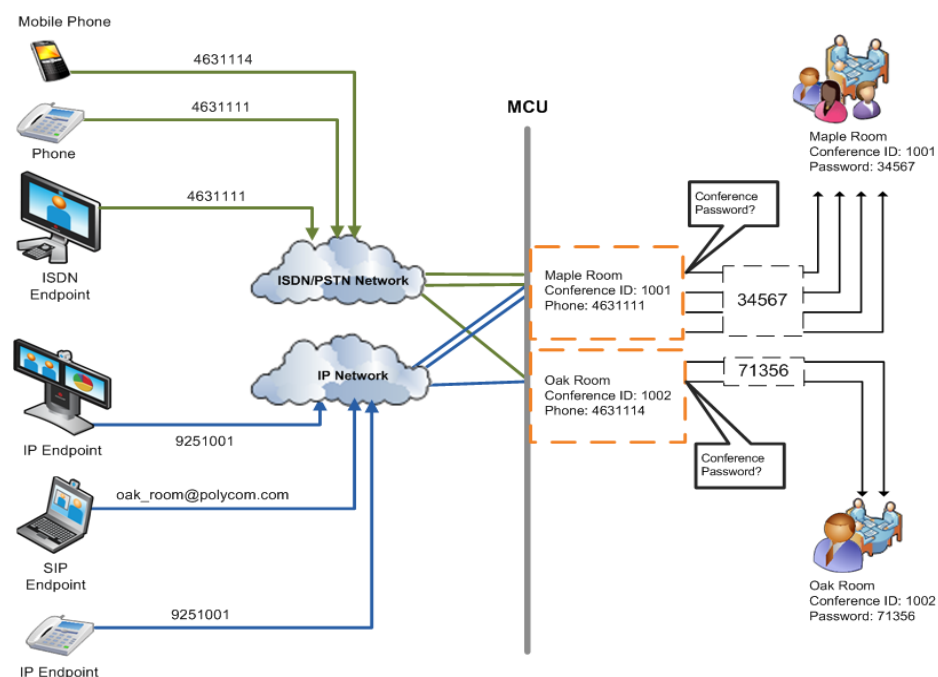


Figure 3-1 Dial-in Connection via IVR System

The MCU can be configured to enable the chairperson to use the chairperson password as the conference password without the need to enter the conference password.

H.323 Participants

For H.323 participants, the dialing string is composed of the MCU prefix in the Gatekeeper and the conference ID.

Example:

Prefix in gatekeeper	925
Conference ID	1001
Conference Name	Maple_Room
>> The participant dials	9251001 or 925Maple_room

If there is no gatekeeper defined for the network, H.323 participants dial the MCU's signaling host IP address and the conference ID, separated by ##.

Example:

MCU (Signaling Host) IP address	172.22.30.40
Conference ID	1001
>> The participant dials	172.22.30.40##1001

SIP Participants

For SIP participants the dialing string is composed of the conference routing name and domain name in the following format:

`conference_routing_name@domain_name`

Example:

Conference routing name	1001
>> The participant dials	1001@polycom.com

ISDN/PSTN Participants

Dial-in ISDN and PSTN participants dial one of the dial-in numbers assigned to the conference/Meeting Room/Reservation/Conference Template, including the country and area code (if needed). They are routed to their conference according to the dial-in number.

Example:

Assigned dial-in number	4631111
The participant dials	4631111

Entry Queue Access

Access via an Entry Queue allows all participants to dial the same entry point that acts as a routing lobby. Once in the Entry Queue, participants are guided to the conference according to the conference ID they enter.

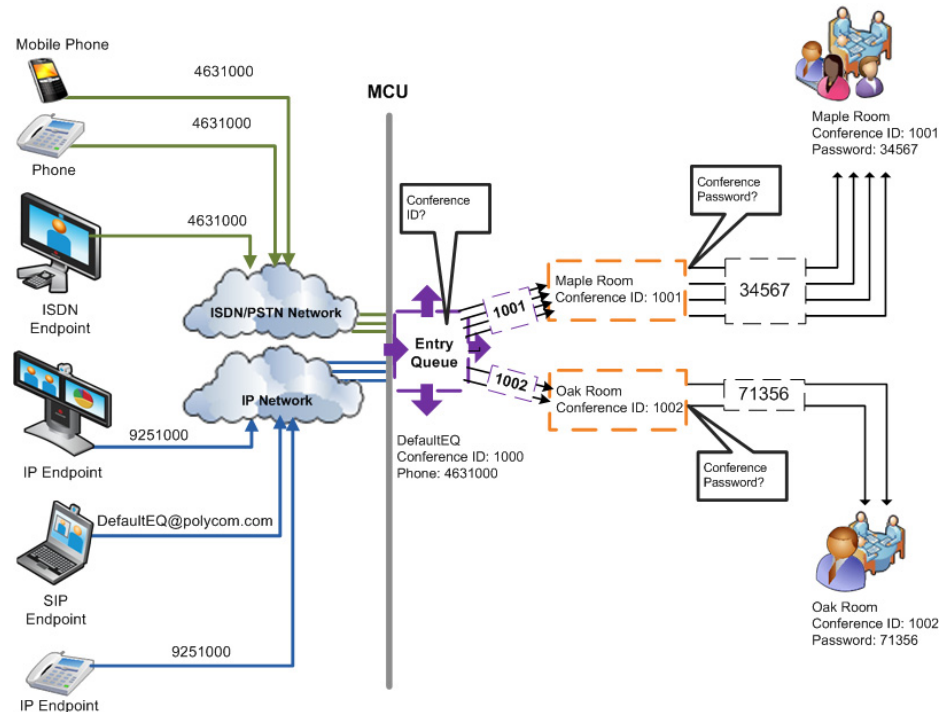


Figure 3-2 Dial-in Connection via Entry Queue

H.323 Participants

Dialing is executed in the same way as for conferences, where the Entry Queue ID/Name replaces the Conference ID/Name.

H.323 participants dial [Gatekeeper Prefix][Entry Queue ID/Name].

Example:

Prefix in gatekeeper	925
Entry Queue ID	1000
>> The participant dials	9251000

H.323 participants can bypass the Entry Queue IVR voice messages by adding the correct Conference ID of destination conference to the initial dial string:

[Gatekeeper Prefix][EQ ID][##Destination Conference ID]

Example:

Conference ID	1001
>> H.323 participants dial	9251000##1001

H.323 participants can also bypass the conference IVR voice messages by adding the Conference Password to the initial dial string:

[Gatekeeper Prefix][EQ ID][##Destination Conference ID][##Password]

Example:

Conference ID	1001
Conference Password	34567
>> H.323 participants dial	9251000##1001##34567

SIP Participants

Using an Entry Queue minimizes the number of conferences that require registration with the SIP server and enables using one URI address for all dial-in connections, using the format:

<Entry Queue routing name>@<domain name>

Example:

Entry Queue Routing Name	DefaultEQ
Domain Name	polycom.com
>> SIP participants dial	DefaultEQ@polycom.com

ISDN and PSTN Participants

Up to two dial-in numbers can be allocated to an Entry Queue for use by ISDN and PSTN participants.

Calls to numbers within the ISDN and PSTN *Dial-in Range* that are not allocated to an Entry Queue are routed to the *Transit Entry Queue*.

Dial-in ISDN and PSTN participants dial one of the dial-in numbers assigned to the Entry Queue, including the country and area code (if needed).

They are routed to their conference according to the conference ID.

Example:

Entry Queue ID	1000
Assigned Dial-in number	4631000
>> ISDN/PSTN participants dial	4631000

Connecting to a Polycom Conference from an Outlook Meeting Invitation

Attendees that have received a *Meeting Invitation* via *Outlook* using the *Polycom Conferencing Add-in for Microsoft Outlook*, connect by clicking on the link included in the invitation or by manually dialing the numbers displayed using the endpoint's numeric input device.

The screenshot shows an Outlook meeting invitation from Maria Bell. It includes links to join via Polycom CMA Desktop and Microsoft Office Communicator. Annotations with blue arrows point to these links, stating 'Click Link to Connect'. Another annotation points to the 'MEETING DETAILS' section, specifically the video number, stating 'Dial Manually to Connect'.

Meeting
 Bell, Maria
 Sent: 18:56 11/03/2010
 To: O'Brien, Sean

~~~~~  
 You have been invited to join a meeting using the Polycom® conferencing service.  
[Join the meeting using Polycom CMA Desktop](#)  
[Join the meeting using Microsoft Office Communicator](#)

**MEETING DETAILS**  
 Video Number: 7218817  
 Meeting Password: 12  
[View the meeting stream or recording](#)

**TECHNICAL SUPPORT**  
 If you need help, contact technical support at  
 • 1.800.555.2222  
 • [help@example.com](mailto:help@example.com)  
 • <http://help.example.com/video-calendaring>

**NOTICE**  
 Polycom® conferencing service can be used to record meetings. By participating in this meeting, you agree that your communications may be monitored or recorded at any time during the meeting.

DO NOT EDIT BELOW THIS LINE  
 ==BEGIN POLYCOM VMR ENCODED TOKEN==  
 UE9MWUNPTS1BVURJT05VTUJFUJI9CIBPTFD00tQVVESU9OVU1CRVIXPQPQT0xZQ09NLVNUUKVBTU1FRVRJTKc9dHJ1ZQp  
 PTFDT00tQ0hBSVJQVNTV09SRFJFUVVJUKVEPWZhbHNICIBPTFD00tU0IHTkFMSU5HUE9TVEZJWD1Ac2lwLmV4YW1wbGU  
 RD0xMgpQT0xZQ09NLVZFUJNT049MQo=  
 ==END POLYCOM VMR ENCODED TOKEN==  
 ~~~~~

Maria Bell
 Engineer
 Polycom

For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "Polycom Conferencing for Microsoft Outlook®" on page **11-1**.

Dial-out Participants

Automatic Dial Out

Dial-out participants are defined with their dial-out number. Once they are added to the ongoing conference, the MCU automatically calls them at a rate of 1 dial-out per second, using the default H.323, SIP or ISDN/PSTN Network Service defined for them.

Manual Dial Out


In the manual mode, the RMX user or meeting organizer instructs the conferencing system to call the participant. Dial-out participants must be defined (mainly their name and telephone number) and added to the conference. This mode can only be selected at the conference definition stage and cannot be changed once the conference is running.

Gathering Phase

The *Gathering Phase* of a conference is the time period during which participants are connecting to a conference. It is enabled for the conference in the *Conference Profile - Gathering Settings* dialog box.


During the *Gathering Phase*, a mix of live video from connected endpoints is combined with both static and variable textual information about the conference into a slide which is displayed on all connected endpoints. All connected participants are kept informed about the current conference status including names of connected participants, participant count, participant type (video/audio) etc.

During the *Gathering Phase*, the audio of all participants can be heard, and the video of active speakers is displayed in the video windows as they begin talking.

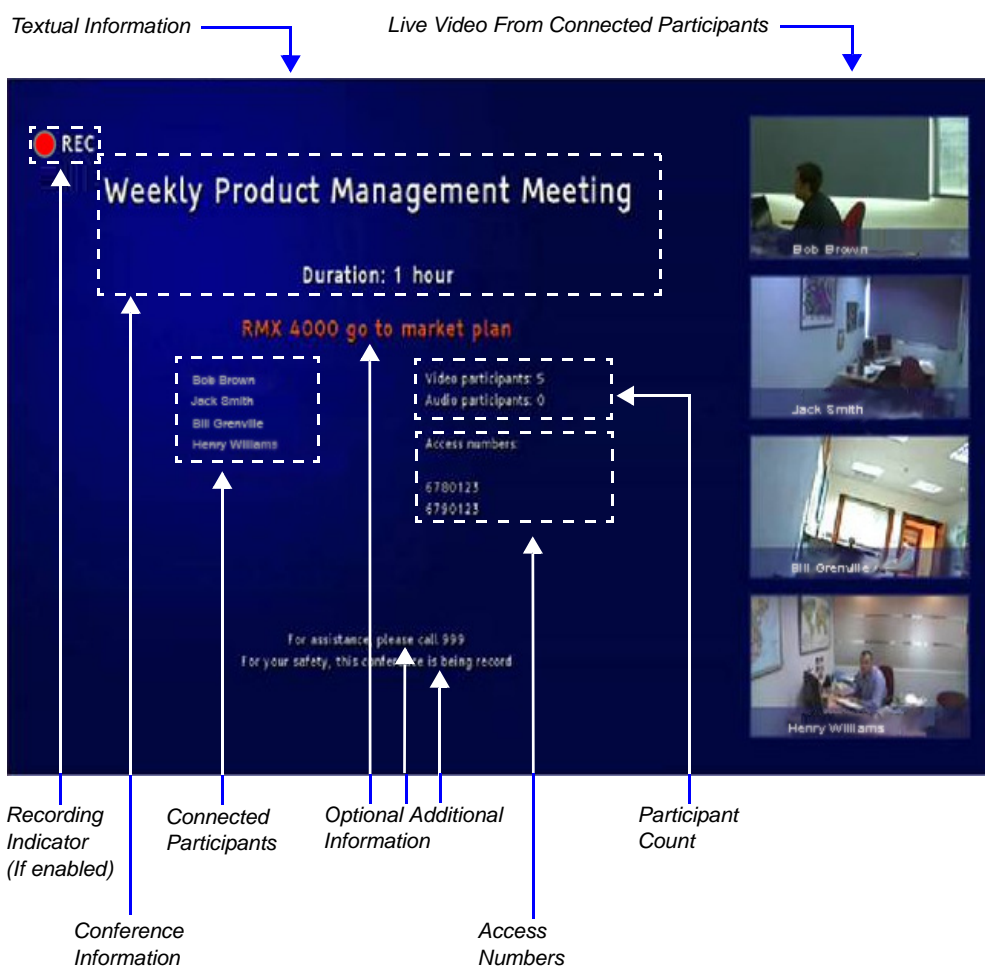

Gathering Phase Guidelines

- The *Gathering Phase* slide can be displayed at any time during the conference by entering the *Show Participants DTMF* code, *88.
- The *Gathering Phase* is not supported in *Video Switching Conferences*.
- The names of the first eight participants to connect are displayed. If eight or more participants connect, the 8th row displays "...".
- **Static text** in the *Gathering Phase* slide such as the field headings: *Organizer, Duration, Video/Audio Participants, Access Number, IP* are always displayed in the language as configured in the *Polycom Virtual Meeting Rooms Add-in for Microsoft Outlook*. The following languages are supported:
 - English
 - French
 - German
 - International Spanish
 - Korean
 - Japanese
 - Simplified Chinese
- **Dynamic text** in the *Gathering Phase* slide such as the meeting name, participants' names, access numbers and the additional information entered in the *Info1/2/3* fields of the *Gathering Settings* tab of the conference *Profile* are displayed in the language of the meeting invitation.
- The language of a *Gathering Phase* slide of a conference configured to include a *Gathering Phase* that is not launched by the *Polycom Conferencing Add-in for Microsoft Outlook* is configured by the administrator. Using the *RMX Web Client*, the administrator selects the language for the *Gathering Phase* slide. The language selected can be different to that of the *RMX Web Client* used by the administrator to perform the configuration.
- *Content* can be sent during the *Gathering Phase*. The content is displayed in the large video window of the participant's layout while the *Gathering* slide is displayed in a smaller video window in the layout.

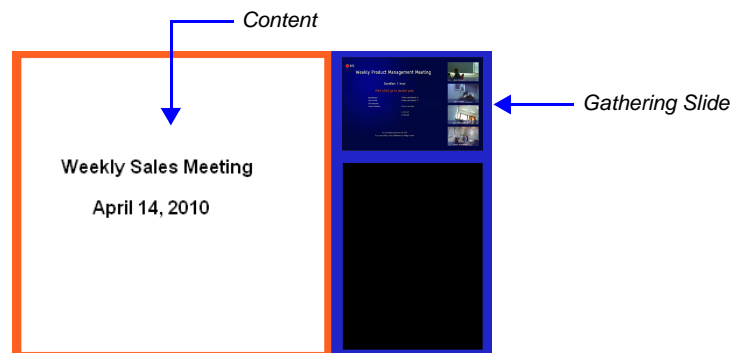


For more information see, the *RMX 1500/2000/4000 Administrator's Guide*, "Gathering Phase" on page 3-23.

Text Indication in the Video Layout

Site Names

During conferences you can view the names of the endpoints that are connected to the conference in your endpoint's video layout windows. The MCU can display up to 33 characters of the endpoint's name, depending on the window's layout (size).

The following is an example of endpoint name display in the endpoint screen:

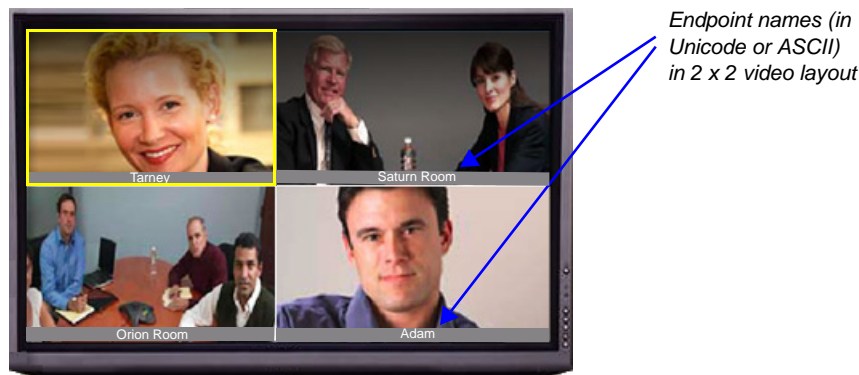

The display of the site names is enabled or disabled in the conference Profile. The *Site Names* option is not supported in *Video Switching* conferences.

The displayed name is determined as follows:


- The system displays the name that is defined at the endpoint.
- If the endpoint does not send its name:
 - For a defined H.323 or SIP participant:
 - The system displays the name from the participant definition.
 - For an undefined H.323 participant:
 - Display the *H.323 ID* alias.
 - or
 - Display the *E.164* alias.
 - or
 - Display nothing if all the fields are empty.
 - For a SIP undefined participant:
 - Display the *SIP DisplayName* field.
 - or
 - Display the *SIP Address* (SIP application server).
 - or
 - Display the *SIP ContactDisplay* field.
 - or
 - Display nothing if all the fields are empty.
 - For a defined H.320 participant:
 - The system displays the name from the participant definition.
 - For an undefined H.320 participant:

- Display the *Terminal Command String* (TCS-2) to identify the participant.
or
Display nothing if the string is not received or empty.
- If the endpoint's *Display Name* is changed in the *RMX Web Client*, it overrides all the above.

To change the Display Name:

- 1 In the *Participants* list, double-click the participant or right-click the participant and then select **Participant Properties**.

The *Participant Properties – Media Sources* dialog box opens:

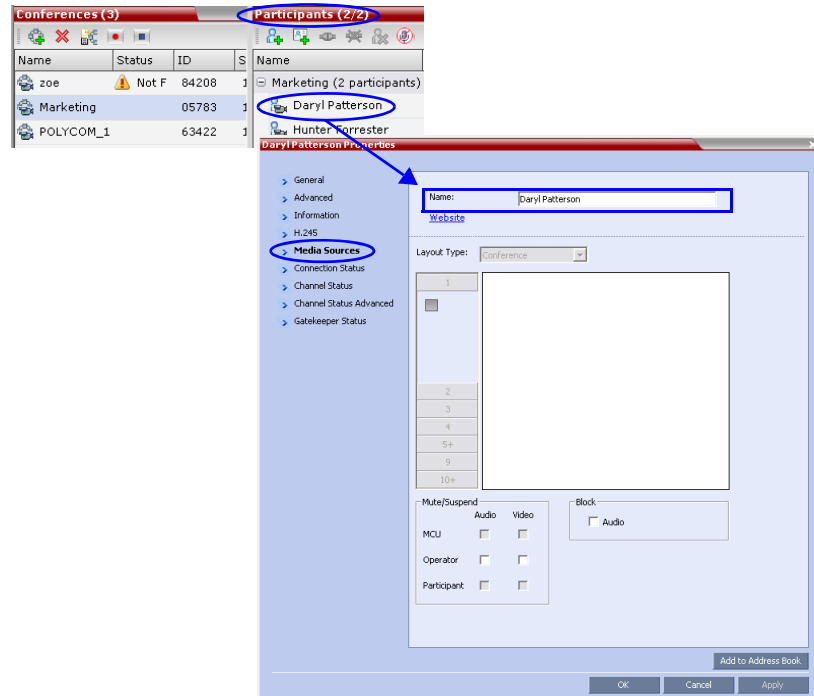

- 2 Enter the new *Display Name* in the *Name* field.
- 3 Click **OK**.

Displaying and Hiding Site Names

Prior to Version 7.6 *Site Names* display was enabled or disabled by the `HIDE_SITE_NAMES` *System Flag*.

In Version 7.6, *Site Names* display was enabled or disabled using a check box in the *Conference Properties – Video Settings* dialog box.

From this version:

- **In MPM+ Mode** - *Site Names* display is still enabled or disabled using a check box in the *Conference Properties – Video Settings* dialog box.
- **In MPMx Mode** - All *Site Names* display characteristics are controlled using the *Site Names* tab in the *New Profile* and *Conference Properties* dialog boxes.

For more information see *RMX 1500/2000/4000 Administrator's Guide*, "Defining Profiles" on page 1-10.

Transparent Site Names

Endpoint name backgrounds are 50% transparent, and while maintaining contrast, do not completely obscure the overlaid video.

In previous versions *Site Name Transparency* was enabled or disabled by adding a new *System Flag*, `SITE_NAME_TRANSPARENCY` to the *System Configuration* and setting its value to NO. For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Manually Adding and Deleting System Flags" on page [21-16](#).

From this version:

- **In MPM+ Mode** - *Site Name Transparency* is still enabled or disabled using the `SITE_NAME_TRANSPARENCY` *System Flag*.
- **In MPMx Mode** - All *Site Names* display characteristics are controlled using the *Site Names* tab in the *New Profile* and *Conference Properties* dialog boxes.

For more information see *RMX 1500/2000/4000 Administrator's Guide*, "Defining Profiles" on page [1-10](#).

Permanent Display of Site Names

Site Names can be permanently displayed.

In previous versions permanent display of *Site Names* was enabled or disabled by adding a new *System Flag*, `SITE_NAMES_ALWAYS_ON` to the *System Configuration* and setting its value to YES. For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Manually Adding and Deleting System Flags" on page [21-16](#).

From this version:

- **In MPM+ Mode** - Permanent display of *Site Names* was still enabled or disabled using the `SITE_NAMES_ALWAYS_ON` *System Flag*.
- **In MPMx Mode** - All *Site Names* display characteristics are controlled using the *Site Names* tab in the *New Profile* and *Conference Properties* dialog boxes.

For more information see *RMX 1500/2000/4000 Administrator's Guide*, "Defining Profiles" on page [1-10](#).

Location of Site Names

The default location (top left) of the location of *Site Names* in the video layout can be changed.

In previous versions the location of *Site Names* display was determined by adding a new *System Flag*, `SITE_NAMES_LOCATION` to the *System Configuration* and setting its value to top, middle, bottom, left or right-justify the *Site Names* display. For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Manually Adding and Deleting System Flags" on page [21-16](#).

From this version:

- **In MPM+ Mode** - The location of *Site Names* display is still determined by the value of the `SITE_NAMES_LOCATION` *System Flag*.
- **In MPMx Mode** - All *Site Names* display characteristics are controlled using the *Site Names* tab in the *New Profile* and *Conference Properties* dialog boxes.


For more information see *RMX 1500/2000/4000 Administrator's Guide*, "Defining Profiles" on page [1-10](#).

Text Indication

The *Text Indication* appears in the window of the current speaker in the participant's layout in addition to the endpoint name. It displays the conference Secure mode (on or off), total number of connected participants, number of video participants and number of audio participants.

The text indication is automatically displayed when there is a change in the conference Secure state (when Secure is implemented or cancelled) and it appears only for a few seconds (the same duration as the endpoint names).

The conference chairperson or participants can request the display of a *Textual Indication* of the conference's statistics by entering the DTMF code *88 on the endpoint's DTMF input device, such as remote control.

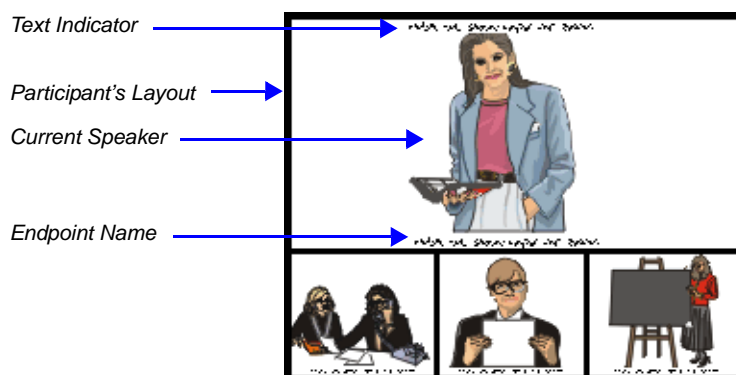

The *Text Indication* is displayed according to the permission set in the *Conference IVR Service*:

- Chairperson permission: Only the chairperson sees the indication
- Everyone permission: All participants see the indication



Participants connected as Secondary (no video) will be considered as audio participants; defined participant which are not currently connected to the conference (disconnected, redial, disconnecting, etc.) are not counted.

Text Indication can be disabled by adding a new flag to the *System Configuration* and setting its value to NO as follows: `ENABLE_TEXTUAL_CONFERENCE_STATUS=NO`.

This setting is recommended for MCUs running *Telepresence* conferences.

For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Manually Adding and Deleting System Flags" on page 21-16.

Closed Caption

When enabled, IP endpoints that support FECC (Far End Camera Control) can also be configured to provide real-time text transcriptions or language translations of the video conference by displaying closed captions.

The captions for a conference may be provided by the captioner who is present in the conference, or the captioner may use a telephone or web browser to listen to the conference audio. When the captioner sends a unit of text, all conference participants see it on the main monitor for 15 seconds. The text then disappears automatically.

Endpoint Name display is not affected by *Closed Captions* display.

For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Closed Captions" on page [3-26](#).

Closed Captions option is enabled by a system flag in the system configuration. For more details about system flags, see the *RMX 1500/2000/4000 Administrator's Guide*, "Modifying System Flags" on page [21-1](#).

Message Overlay for Text Messaging


Message Overlay allows messages to be sent during a conference to a single participant, selected number of participants or all participants in an ongoing conference.

The number of characters that can be included in a message varies according to the language and can differ due to the type of font used. For example, the available number of characters in Chinese is 32 and 48 for English and Russian..



In some languages, for example Russian, when a large font size is selected, both rolling and static messages may be truncated if the message length exceeds the resolution width.

The message can be set to be displayed at various positions on the screen in different colors, static or scrolling.

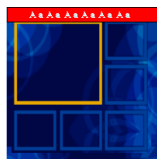

Small Text, White on red, Top, Middle



Small Text, White on yellow, Bottom



For more information see the *RMX 1500/2000/4000 Administrator's Guide "Audio Algorithm Support"* on page [3-27](#).

Monitoring Ongoing Conferences

Conference monitoring enables you to keep track of conferences and their participants: if all its participants are correctly connected and whether errors or faults have occurred.


Maximum number of participants (voice and video) in a conference:

- RMX 1500 MPMx-Q card assembly: 90 (25 video)
- RMX 1500 MPMx-S card assembly: 180 (45 video)
- RMX 1500 MPMx-D card assembly: 360 (90 video)
- RMX 2000 MPM card: 400 (80 video)
- RMX 2000 MPM+ card: 800 (160 video)
- RMX 2000 MPMx card: 720 (180 video)
- RMX 4000 MPM+ card: 1600 (160 video)
- RMX 4000 MPMx-D card assembly: 1440 (180 video)


General Monitoring

All monitoring and operations procedures performed during ongoing conferences can be performed by either of two methods:

- **Using the buttons** in the toolbars.

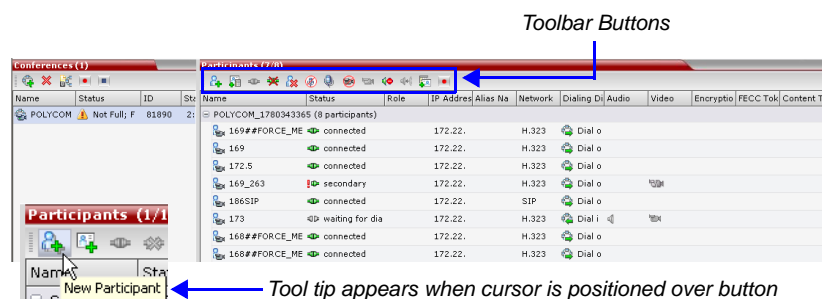

- **Right-clicking** anywhere in the *Conferences* or *Participants* pane and selecting an operation from the menu.

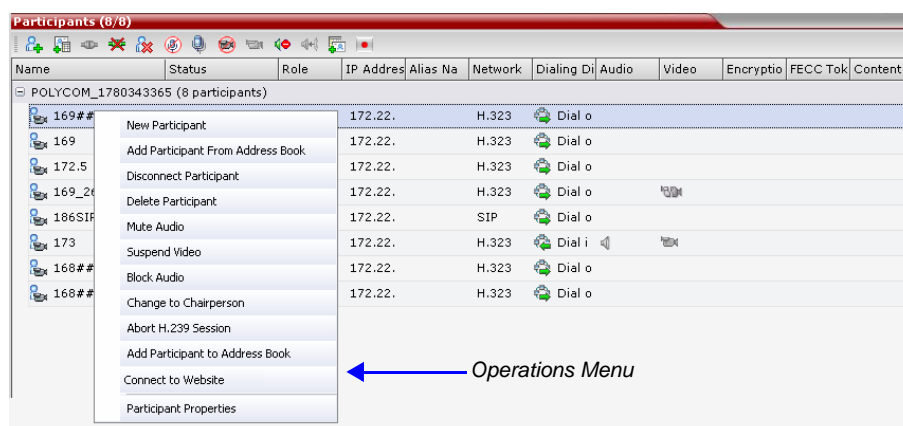


Multi Selection

Using multiple selection, you can monitor and perform simultaneous operations on multiple participants in multiple conferences.


The selected conferences are displayed as sub-lists in the *Participants* list pane.

The sub-lists can be expanded and collapsed by clicking the **+** and **-** sublist control buttons that appear next to the conference name in the sublist headings.

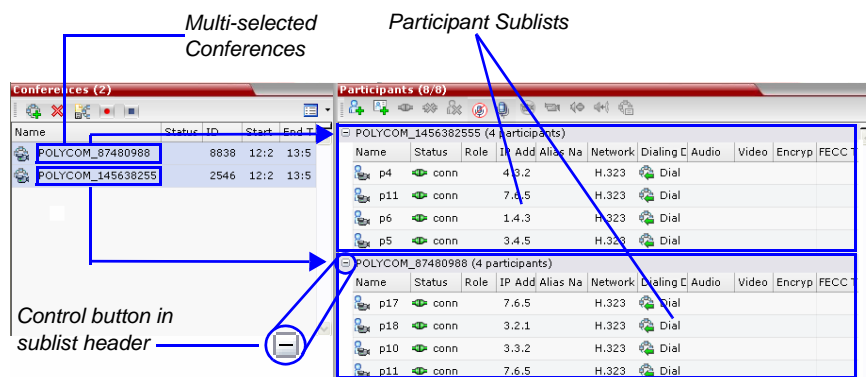

Using the Chairperson Password for Filtering


If you are logged in as a chairperson, the *Chairperson Password* field is displayed. It enables you to search for, and display a list of, ongoing conferences for which you have the password.

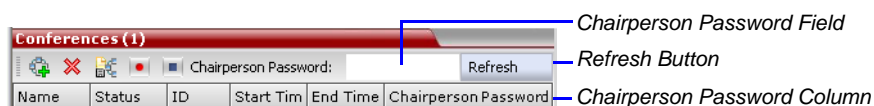

To search for an ongoing conference by Chairperson Password:

- 1 Click in the *Chairperson Password* field.
- 2 Enter the password to be searched for.
- 3 Click the **Refresh** button.


The *Conferences* list is refreshed and ongoing conferences with the requested password are displayed.

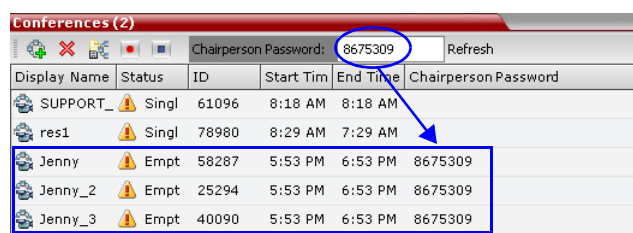

Conference Level Monitoring

Conference level monitoring is available to the administrator, operator and chairperson. Monitoring of VSW conferences is done in the same way as for CP conferences.

The *Conference List* pane displays information about ongoing conferences.

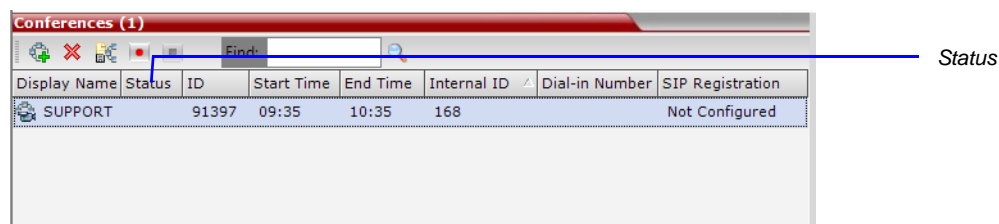

No status indicator display in the *Status* column means that the conference is running without problems.

One or more of the status indicators listed in Table 3-5 may appear in the *Status* column.

Table 3-5 Conferences – Monitoring Information

Field	Description
<i>Display Name</i>	Displays conference name and type of conference: <ul style="list-style-type: none"> – Video Conference (including HD CP conferences). – Conference running in Video Switching mode. – The conference has been secured using the *71 DTMF code. For details, see "Secured Conference Monitoring" on page 3-41. – Operator Conference.
<i>Status</i>	Displays the status of the ongoing conference. If there is no problem with the participant's connection no indication is displayed. If one of the following statuses occur, the appropriate indication is displayed, preceded by a warning icon (⚠). <ul style="list-style-type: none"> Audio – There is a problem with the participant's audio. Empty – No participants are connected. Faulty Connection – Participants are connected, but the connection is problematic. Not Full – Not all the defined participants are connected. Partially Connected – The connection process is not yet complete; the video channel has not been connected. Single Participant – Only one participant is connected. Video – There is a problem with the participant's video. Content Resource Deficiency – Content will not be sent to legacy endpoints. Awaiting Operator – A participant has requested operator assistance.
<i>ID</i>	The Conference ID assigned to the conference.
<i>Start Time</i>	Conference start time.
<i>End Time</i>	The time the conference is expected to end.

Table 3-5 Conferences – Monitoring Information (Continued)


Field	Description
Dial in Number(1)	The Conference dial in number for ISDN/PSTN participants.
SIP Registration	<p>The status of registration with the SIP server:</p> <ul style="list-style-type: none"> • Not configured - Registration with the SIP Server was not enabled in the Conference Profile assigned to this conferencing Entity. In <i>Multiple Networks</i> configuration, If one service is not configured while others are configured and registered, the status reflects the registration with the configured Network Services. The registration status with each SIP Server can be viewed in the <i>Properties - Network Services</i> dialog box of each conferencing entity. • Failed - Registration with the SIP Server failed. This may be due to incorrect definition of the SIP server in the IP Network Service, or the SIP server may be down, or any other reason the affects the connection between the RMX or the SIP Server to the network. • Registered - the conferencing entity is registered with the SIP Server. • Partially Registered - This status is available only in <i>Multiple Networks</i> configuration, when the conferencing entity failed to register to all the required Network Services if more than one Network Service was selected.

Additional information about the conference can be viewed when accessing the conference properties.

To monitor a conference:

- >> In the *Conference List* pane, double click the name of the conference you wish to monitor, or right-click the conference and then click **Conference Properties**.

The *Conference Properties - General* dialog box opens.

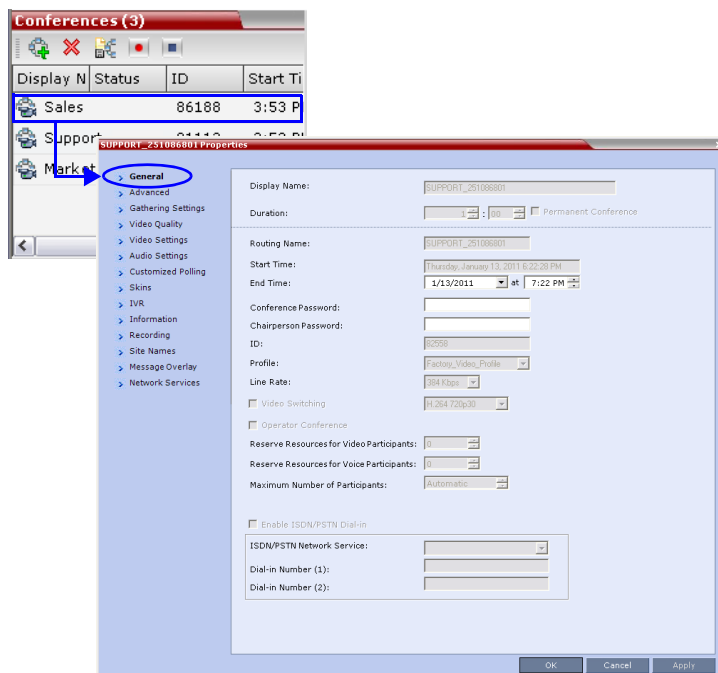

You can view all the conference properties but those that appear with a gray background cannot be modified.


For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Conference Level Monitoring" on page 12-3.

Roll Call/Audible Tones During an Ongoing Conference

If *Roll Call* is enabled, when a participant joins or leaves a conference, the system plays a voice message to all participants. The audio message consists of the joining or leaving participant's *Roll Call* name followed by either "has joined the conference" or "has left the conference".

These voice messages can be replaced with audio tones. The use of tones requires that the appropriate tone files in *.wav format be uploaded and configured to replace the *Roll Call Joined* and *Roll Call Left* message files.

These options are enabled or disabled by selection in the *Conference IVR Service Properties - Roll Call/Notifications* dialog box.

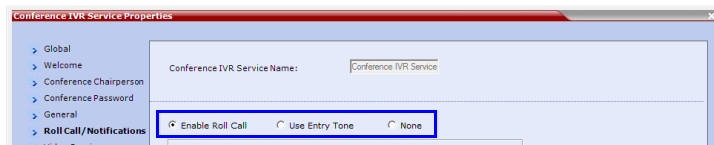

For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "Defining a New Conference IVR Service" on page 16-7.


Audio Only Message

H.323 and SIP video participants that are connected as *Secondary (Audio Only)* because of lack of video resources receive an audio message: "All video resources are currently in use. Connecting using audio only" indicating why their video has not connected. For more information see the *RMX 1500/2000/4000 Administrator's Guide*.

Secured Conference Monitoring

When *Secured Conference Mode* is enabled on the RMX, it locks the conference and prevents participants and RMX Users from joining the conference. A *Secured* conference cannot be monitored or controlled in any way. While a conference is in the *Secure Mode*, the RMX User with Administrator authorization cannot view the participants list or any other conference properties, but can manually terminate it.

The conference chairperson can enable or disable the *Secure* mode from the DTMF input device (touch-tone telephone or the endpoint's remote control), using the appropriate DTMF code (the default code is *71). During the secure conference, the chairperson and participants can perform various operations, such as muting, via their DTMF input device using the appropriate DTMF codes. However, because *Secure* conferences cannot be monitored, these operations or status changes are not displayed in the *Conferences* or *Participants* panes.

A special icon  is used to indicate that the conference is in *Secure* mode.

Monitoring Ongoing Gateway Sessions


Ongoing Gateway Sessions that are created when calling the Gateway Profile, are listed in the ongoing Conferences list pane and are monitored in the same way as the conferences.

For more details, see the *RMX 1500/2000/4000 Administrator's Guide*, "Conference Level Monitoring" on page 12-3.

Participant Level Monitoring

Participant Connection Monitoring

When a conference is selected in the *Conference* list, the *Participants* list header displays a summary of participant connection status.

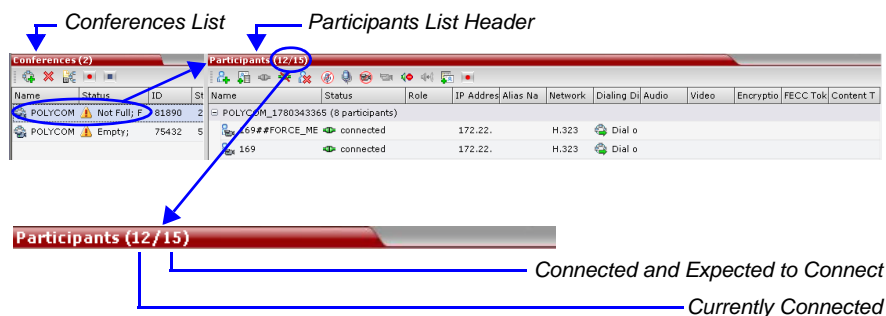

These numbers include:

- **Currently Connected** participants - both defined and undefined participants currently connected to the conference.
- **Connected and Expected to Connect** - Total number of participants known to take part in the conference. It includes all participants currently connected and Defined participants that are expected to connect to the conference..

In the diagram above, **Participants (12/15)** indicates that 12 of the 15 expected participants have connected and that 3 defined participants have not yet connected.

The *Participant* list displays the following participant indicators and properties:

Table 3-6 Participant Monitoring – Indicators and Properties







Column	Icon/Description
Name	Displays the name and type (icon) of the participant:
	 Audio Participant – Connected via IP phone or ISDN/PSTN.
	 Video Participant – Connected with audio and video channels.
Status	Displays the connection status (text and icon) of the participant. If there is no problem with the participant's connection no indication is displayed.
	 Connected – The participant is successfully connected to the conference.
	 Disconnected – The participant is disconnected from the conference. This status applies only to defined participants.
	 Waiting for Dial-in – The system is waiting for the defined participant to dial into the conference.
	 Partially Connected – The connection process is not yet complete; the video channel has not been connected.

Table 3-6 Participant Monitoring – Indicators and Properties (Continued)























Column	Icon/Description	
<i>Status (cont.)</i>		Faulty Connection – The participant is connected, but problems occurred in the connection, such as synchronization loss.
		Secondary Connection – The endpoint's video channel cannot be connected to the conference and the participant is connected only via audio.
		Awaiting Individual Assistance – The participant has requested the user's (operator's) assistance.
		Awaiting Conference Assistance – The participant has requested the operator's assistance for the conference. This usually means that the user (operator) has been requested to join the conference.
<i>Role</i>	Displays the participant's role or function in the conference:	
		Chairperson – The participant is defined as the conference chairperson. The chairperson can manage the conference using touch-tone signals (DTMF codes).
		Lecturer – The participant is defined as the conference Lecturer.
		Lecturer and Chairperson – The participant is defined as both the conference Lecturer and Chairperson.
		Cascade Enabled Dial-out Participant – A special participant functioning as a link in a cascaded conference.
		Recording – A special participant functioning as a Recording Link.
		Request to speak - Participants that were muted by the conference organizer/system operator can indicate that they want to be unmuted by entering the appropriate DTMF code (default 99). The icon is displayed for 30 seconds.
<i>IP Address/Phone</i>	The IP participant's IP address or the ISDN/PSTN participant's phone number.	
<i>Alias Name/SIP Address</i>	The participant's Alias Name or SIP URI. The alias of an <i>RSS 2000 Recording System</i> if the participant is functioning as a recording link.	
<i>Network</i>	The participant's network connection type – H.323, SIP or ISDN/PSTN.	
<i>Dialing Direction</i>		Dial-in – The participant dialed the conference.
		Dial-out – The MCU dialed the participant.

Table 3-6 Participant Monitoring – Indicators and Properties (Continued)

Column	Icon/Description	
Audio	Displays the status of the participant's audio channel. If the participant's audio is connected and the channel is neither muted nor blocked, no indication is displayed.	
		Disconnected – Participant's audio channel is disconnected. This is a defined participant who is waiting to be connected to the conference.
		Muted – Participant's audio channel is muted. The participant can still hear the conference.
		Blocked – Transmission of audio from the conference to the participant is blocked.
		Muted and Blocked - Audio channel is muted and blocked.
Video	Displays the status of the participant's video channel. If there is no problem with the participant's video connection and the channel is neither suspended nor secondary, no indication is displayed.	
		Disconnected – Participant's video channel is disconnected. This is a defined participant who is waiting to be connected to the conference.
		Suspended – Video transmission from the endpoint to the conference is suspended.
		Secondary – Participant is connected only through the audio channel due to problems with the video channel.
Encryption		Indicates that the endpoint is using encryption for its connection to the conference.
Service Name	Displays the <i>IP Network Service</i> used by this participant to connect to the conference.	
FECC Token		Participant is the holder of the FECC token and has Far End Camera Control capabilities. The FECC token can be allocated to only one participant at a time and remains un-allocated if no participant requests it.
Content Token		Participant is the holder of the Content token and has content sharing permission. The Content token can be allocated to only one participant at a time and remains un-allocated if no participant requests it. For more information, see the <i>RMX 1500/2000/4000 Administrator's Guide</i> , "H.239 / People+Content" on page 3-2.

For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Participant Level Monitoring" on page 12-14.

Video Preview

Video Preview enables the RMX users to monitor the quality of the video sent and received by the participant and identify possible quality degradation.


Guidelines

- Video preview is supported with MPM+ and MPMx cards.
- Only one preview window can be displayed for each RMX Web Client connection (workstation).
- Only one preview window can be displayed for a single conference and up to four preview windows can be displayed for each media card on different workstations (one per workstation and one per conference).

For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "Video Preview" on page 3-19.


To preview the participant video:

- 1 List the conference participants in the *Participants* pane.
- 2 Right-click the participant whose video you want to preview and then click one of the following options:

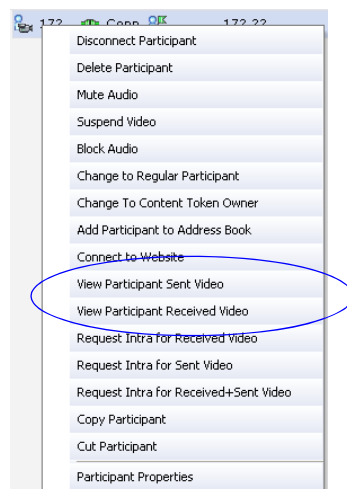

- **View Participant Sent Video** - to display the video sent from the participant to the conference.
- **View Participant Received Video** - to display the video sent from the conference to the participant.

The *Video Preview* window opens.

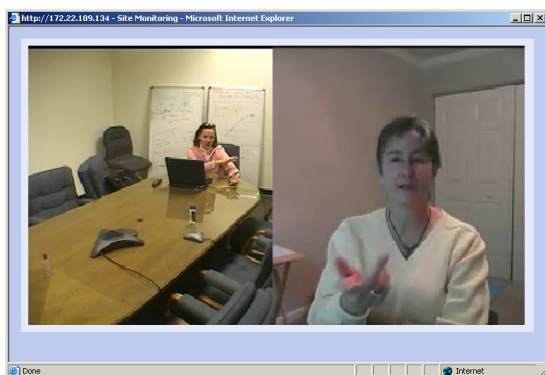

If the video card installed in the PC does not support DirectDraw Acceleration, a black window may be viewed. For more information, including workstation minimum requirements, see the *RMX 1500/2000/4000 Administrator's Guide*.

Operations Performed During On Going Conferences

Conference Level operations


Changing the Duration of a Conference

The duration of each conference is set when the new conference is created. The default duration of a conference is 1 hour. All conferences running on the RMX are automatically extended as long as there are participants connected to the conference.

A conference's *Duration* can be extended or shortened while it is running, by modifying its scheduled *End Time*.

To extend or shorten a conference manually:

- 1 In the *Conference List* pane, double-click the conference **Name**.
- 2 In the *General* tab, modify the *End Time* fields and click **OK**.

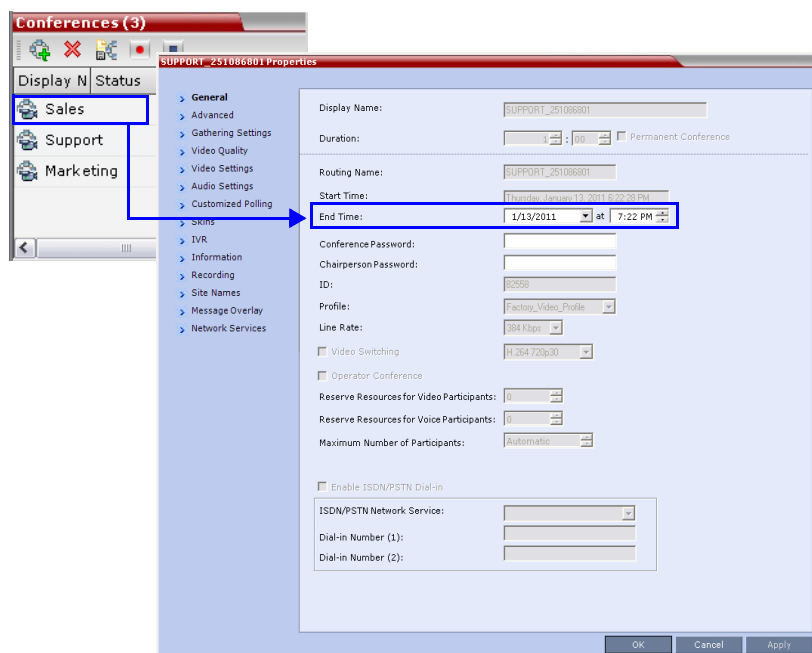


The *End Time* is changed and the *Duration* field is updated.

To terminate a conference manually:

- 1 In the *Conferences* list, select the conference you wish to delete and click the **Delete Conference** (X) button.

You are prompted for confirmation.

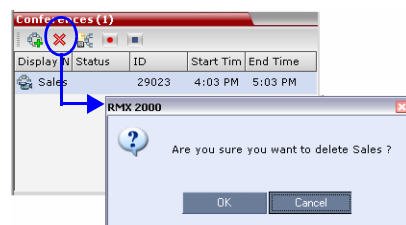

- 2 Click **OK** to terminate the conference.


Adding Participants from the Address Book

Once the conference has started, you can add participants to a conference directly from the *Participants Address Book* without having to use the *New Conference – Participants* tab.

To drag & drop participants into the Participants List:

- 1 Open the *Address Book*.
- 2 Select, drag and drop the participant that you wish to add to the conference directly from the *Participant Address Book* into the *Participant List*.

Standard Windows multiple selection techniques can be used in this procedure.

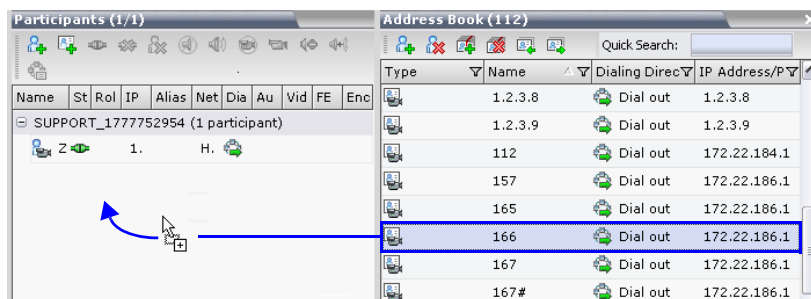

Moving Participants

RMX users can assist participants by performing the following operations:

- Move participant from one ongoing conference to another
- Move a participant to an *Operator conference* (Attend a participant).
- Move a participant to the *Home* (destination) conference.

The move to the Operator conference is enabled only when an Operator conference is running. For more details about *Operator* conferences and moving participants to and from the Operator conference, see the *RMX 1500/2000/4000 Administrator's Guide, "Operator Assistance & Participant Move"* on page 9-1.


You can move participants using the following methods:

- Using the participant right-click menu
- Using drag and drop

To move a participant from the ongoing conference using the right-click menu options:


- 1 In the *Conferences* list, click the conference where there are participants waiting to be moved.

- 2 In the *Participants* list, right-click the icon of the participant to move and select **Move to Conference** to move the participant to any ongoing conference.

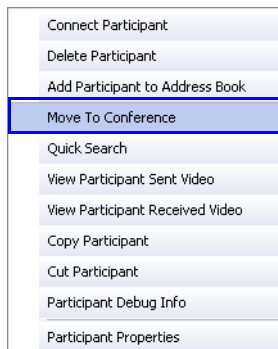

The *Move to Conference* dialog box opens.

- 3 Select the name of the destination conference from the ongoing conferences list.

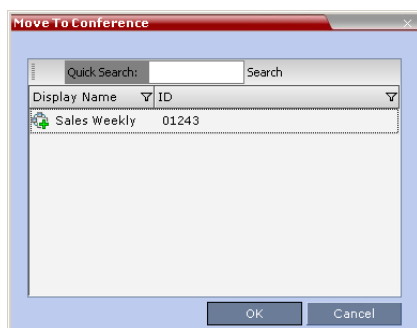

Moving a Participant Interactively

You can drag and drop a participant from the Entry Queue or ongoing conference to the *Operator* or destination (Home) conference:


- 1 Display the participants list of the Entry Queue or the source conference by clicking its entry in the *Conferences* list.
- 2 In the *Participants* list, drag the icon of the participant to the *Conferences List* pane and drop it on the *Operator Conference* icon or another ongoing conference.

Saving an Ongoing Conference as a Template

Any conference that is ongoing can be saved as a template.

To save an ongoing conference as a template:

- 1 In the *Conferences List*, select the conference you want to save as a Template.
- 2 Click the **Save Conference** (📄) button.
or
Right-click and select **Save Conference**.

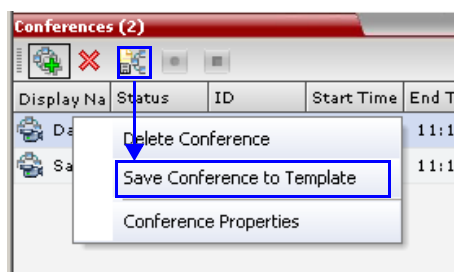

The conference is saved to a template whose name is taken from the ongoing conference *Display Name*.

Copy and Paste Conference


The RMX user can **Copy**, and **Paste** conferences. When using the *RMX Web Client*, conferences can be copied and pasted on the same RMX, however when using the *RMX Manager*, with its ability to manage multiple RMXs, conferences can be copied and pasted between different RMXs.

Copy Conference

The **Copy** command copies all the conference's properties including connected participants and makes these properties available for pasting, starting a new conference. The copied conference remains active until it terminates or is deleted.

To copy a conference:

- 1 In the *Conferences List* pane, right-click the conference you want to copy.
- 2 In the drop-down menu select **Copy Conference**.

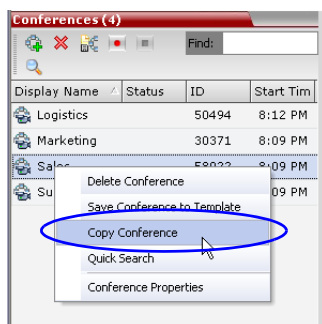

Paste Conference

The **Paste Conference** command starts the new conference on the same *RMX* or on a different *RMX*.


To paste a conference:

>> Right-click in the *Conferences List* pane and in the drop-down menu select **Paste Conference**.

or

If you are using the *RMX Manager* and you want to paste the conference to a different *RMX*:

- a In the *MCUs* list pane, click the *RMX* that is to receive the conference.
- b In the *Conferences* list pane, right-click, and in the drop-down menu select **Paste Conference**.

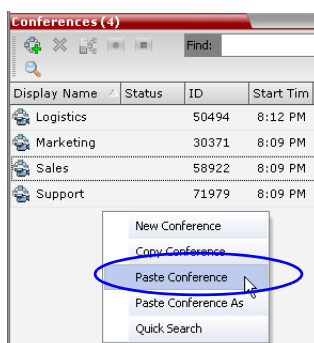

The conference is pasted to the *RMX* with a *Display Name* is assigned by the system.

Paste Conference As

The **Paste Conference As** command allows the *RMX* user to create a new conference using the copied conference's properties as a template. It automatically opens the *Conference Properties* dialog box allowing the *RMX* user to modify the *General*, *Participants* and *Information* tabs to create the new conference. When the **OK** button in the *Conference Properties* dialog box is clicked the new conference is started.

To paste a conference as a new conference:


1 Right-click in the *Conferences List* pane and in the drop-down menu select **Paste Conference As**.

or


If you are using the *RMX Manager* and you want to paste the conference to a different *RMX*:

- a In the *MCUs* list pane, click the *RMX* that is to receive the conference.

- b** In the *Conferences* list pane, right-click, and in the drop-down menu select **Paste Conference As**.

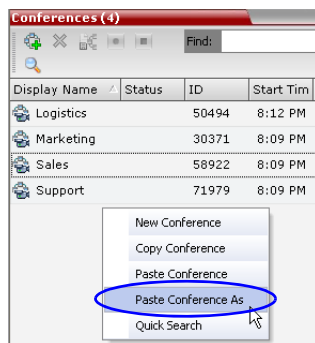

The *Conference Properties* dialog box is displayed.

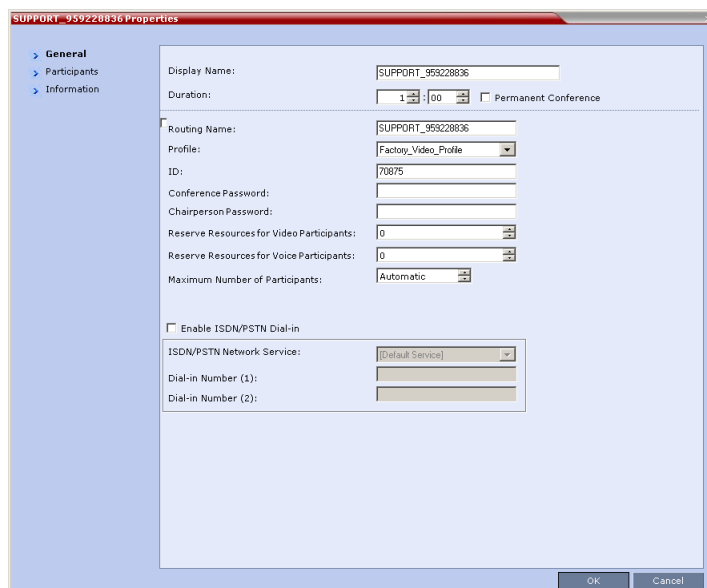

- 2 Modify the conference information as required.
- 3 Click the **OK** button to paste and start the new conference.

Changing the Video Layout of a Conference

While the conference is running, you can change the video layout and select one of 35 video layouts supported by the RMX.

Video Layout selection can be done in two levels:


- **Conference Level** – Applies to all conference participants. All participants have the same video layout.
- **Participant Level** – The participant's video layout is changed. The video layout of all other conference participants is unaffected.

The initial video layout is selected for the conference in the *Conference Profile*.


Participant level video layout selection overrides conference level video layout settings. Participants cannot change their *Personal Layouts* when *Lecturer Mode* is enabled.

To change the video layout of a conference:

- 1 In the *Conference Properties* dialog box, select **Video Settings**.

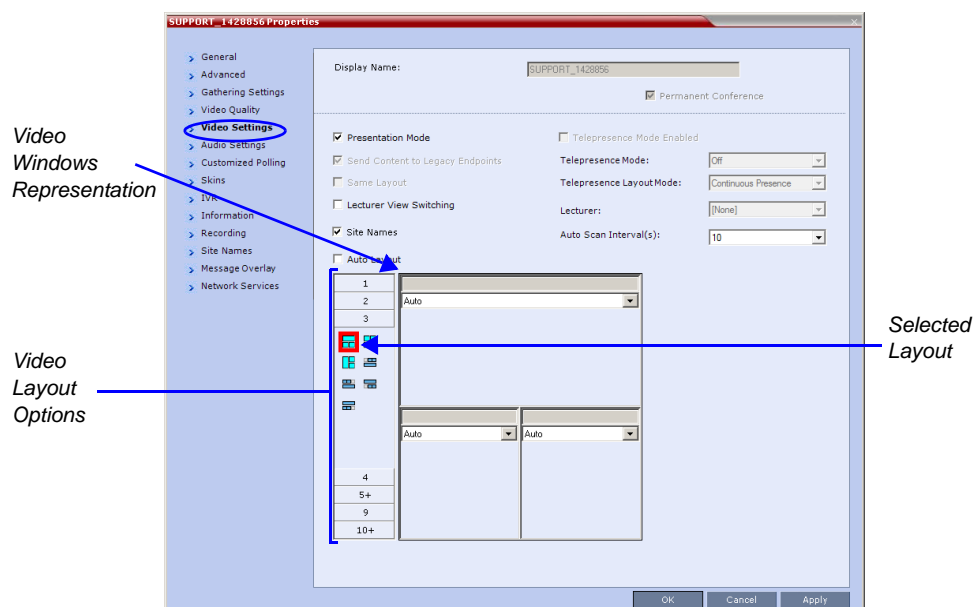

- 2 If the **Auto Layout** check box is selected, clear it.
- 3 From the *Video Layout* options, select the *Number of Windows* to display and the *Video Layout* thumbnail required and click **OK**.

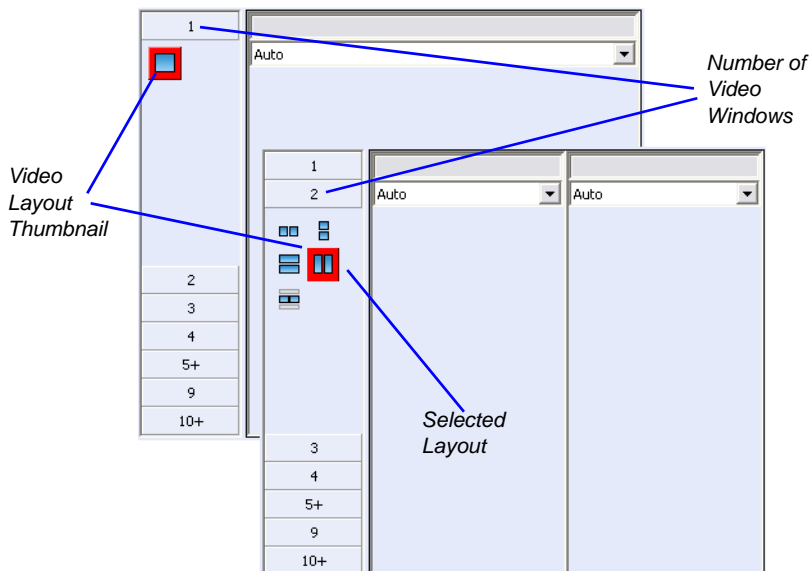

Video Forcing

RMX Users can select which participant appears in each of the video layout windows using *Video Forcing*. When a participant is forced to a layout window, switching between participants is suspended for that window and only the assigned participant is viewed. Video Forcing works on Conference Level or Participant Level:


- **Conference Level** – When forcing a participant to a window, all conference participants will see that participant in the selected window.
- **Participant Level** – When forcing a participant to a window, only the participant's video layout display is affected. All other participants see the conference layout.

Video Forcing Guidelines:

- A participant cannot appear in two or more windows at the same time.
- Participant level video forcing overrides conference level video forcing.
- In *Same Layout* mode, participant can view him/herself in a layout window.
- When different size video windows are used in video layouts such as 1+2, 1+3, 1+4, etc., a participant can only be forced, in *Personal Layout*, to a video window of the same size as that selected for him/her in *Conference Layout*.
- When changing the Video Layout at the conference level, the video forcing settings are not applied to a new layout, and switching between participants is audio-activated. The video forcing setting is saved and applied the next time that layout is selected.
- Windows that are not assigned any participant display the current speaker and last speakers.

To video force a participant to a window:

- 1 In the *Conference Properties* dialog box, select the **Video Settings** tab.
- 2 If **Auto Layout** check box is selected, clear it.
- 3 Select the required video layout.
- 4 In the window to which you want to force a participant, select the participant's name from the list of conference participants.

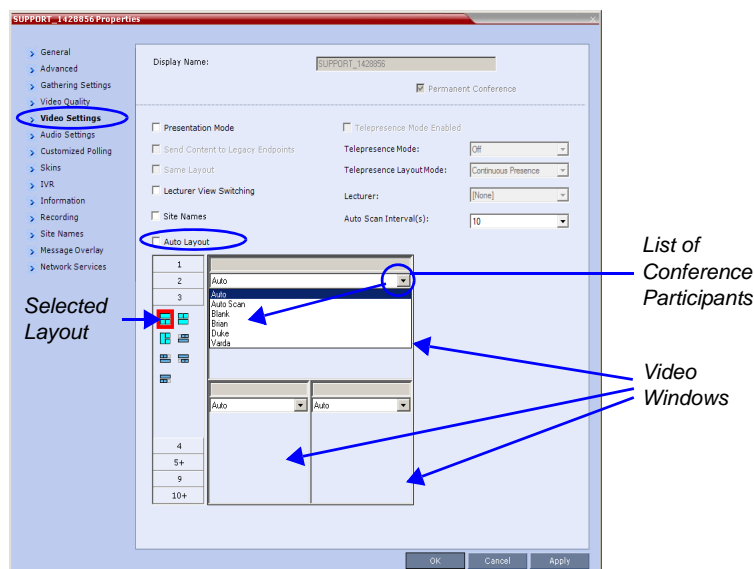

- 5 Repeat step 3 to force participants to other windows.

- 6 Click **OK**.

To cancel Video Forcing for a window:

- 1 In the *Conference Properties* dialog box, select the **Video Settings** tab.
- 2 In the video layout window, in the *Participants* list, select **Auto**.
- 3 Click **OK**.

Switching between participants is renewed and is audio activated.

Enabling and Disabling Video Clarity™

When enabled (default), Video Clarity applies video enhancing algorithms to incoming video streams of resolutions up to and including SD. Clearer images with sharper edges and higher contrast are sent back to all endpoints at the highest possible resolution supported by each endpoint. Video Clarity™ can be disabled during an ongoing conference.

To disable or enable Video Clarity:

- 1 In the *Conference List* pane, double-click the name of the conference or right-click the conference name and then click **Conference Properties**.
- 2 Click the **Video Settings** tab.
- 3 Clear the **Video Clarity** check box to disable it or select it to enable it as required.
- 4 Click **OK**.

Sending Messages to All Conference Participants Using Message Overlay

Messages can be sent during a conference to a single participant, selected number of participants or all participants in an ongoing conference. For more information see the *RMX 1500/2000/4000 Administrator's Guide "Audio Algorithm Support"* on page 3-27.

To send messages to all conference participants using Message Overlay:

- 1 In the *Conferences List* pane, double click the name of the conference to have *Message Overlay* enabled or right-click the conference name and then click **Conference Properties**.
- 2 Click the **Message Overlay** tab.
- 3 Select the **Enable** check box.
- 4 In the *Content* field, enter the text to be displayed to all the conference participants. The number of characters that can be included in a message varies according to the language and can differ due to the type of font used. For example, the available number of characters in Chinese is 32 and 48 for English and Russian.
- 5 Modify the remaining fields in the dialog box to display the message as required.
- 6 Click **OK**.

To cancel the Message Overlay display:

- 1 Repeat Step 1 and Step 2 in the enabling procedure above.
- 2 Clear the **Enable** check box.
- 3 Click **OK**.


Auto Scan

Auto Scan enables a user to define a single cell in the conference layout to cycle the display of participants that are not in the conference layout.

Customized Polling allows the cyclic display to be set to a predefined order for a predefined time period. The cyclic display only occurs when the number of participants is larger than the number of cells in the layout.

To enable Auto Scan:

- 1 In the *RMX Web Client Main Screen - Conference* list pane, double-click the conference or right-click the conference and then click **Conference Properties**.
- 2 In the *Conference Properties - General* dialog box, click **Video Settings**. The *Video Settings* tab is displayed.

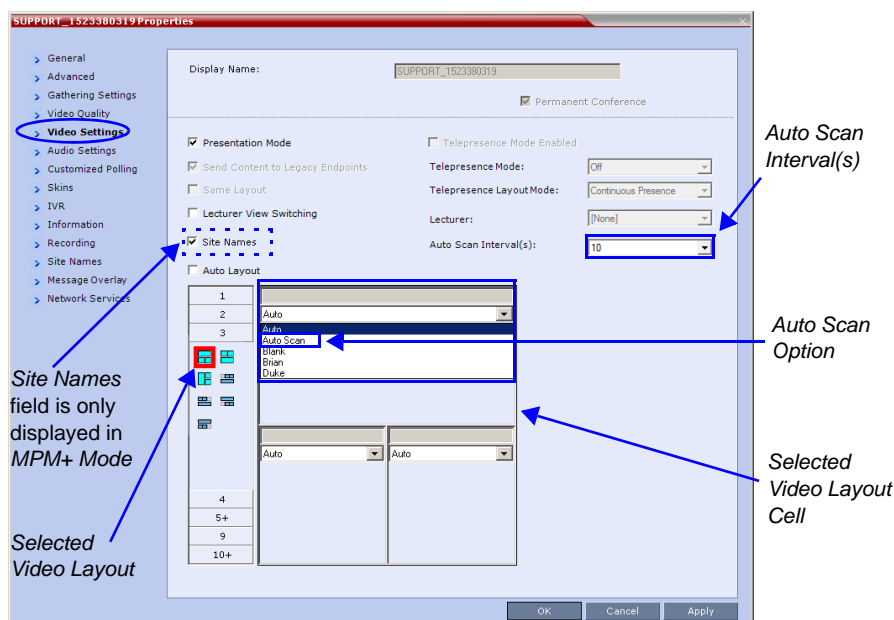

- 3 In the video layout cell to be designated for *Auto Scan*, click the drop-down menu button and select **Auto Scan**.
 - 4 Select from the *Auto Scan Interval(s)* drop-down list the scanning interval in seconds.
 - 5 Click the **Apply** button to confirm and keep the *Conference Properties* dialog box open.
- or-
- Click **OK** to confirm and close the *Conference Properties* dialog box.


Customized Polling

The order in which the Auto Scanned participants are displayed in the *Auto Scan* enabled cell of the video layout can be customized.

- 1 Open the *Customized Polling* tab:
 - a If the *Video Settings* tab is open click the **Customized Polling** tab.

or

- b In the *Conference* list pane, double-click the conference or right-click the conference and then click **Conference Properties**.
- c In the *Conference Properties - General* dialog box, click **Customized Polling**. The *Customized Polling* tab is displayed.

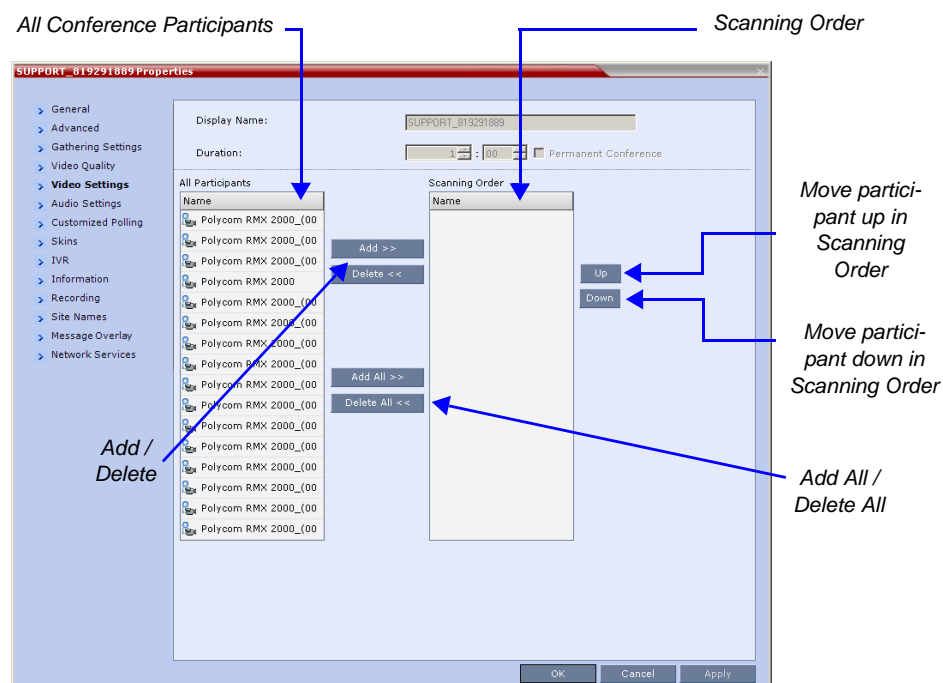

All conference participants are listed in the left pane (*All Participants*) while the participants that are to be displayed in the Auto Scan enabled cell of the video layout are listed in the right pane (*Scanning Order*).

The dialog box buttons are summarized in Table 3-7.

Table 3-7 Customized Polling - Buttons

Button	Description
<i>Add</i>	Select a participant and click this button to <i>Add</i> a the participant to the list of participants to be Auto Scanned. The participants name is removed from the <i>All Participants</i> pane.
<i>Delete</i>	Select a participant and click this button to <i>Delete</i> the participant from the list of participants to be Auto Scanned. The participants name is moved back to the <i>All Participants</i> pane.
<i>Add All</i>	Add all participants to the list of participants to be Auto Scanned. All participants' names are removed from the <i>All Participants</i> pane.
<i>Delete All</i>	Delete all participant from the list of participants to be Auto Scanned. All participants' names are moved back to the <i>All Participants</i> pane.

Table 3-7 Customized Polling - Buttons

Button	Description
<i>Up</i>	Select a participant and click this button to move the participant <i>Up</i> in the <i>Scanning Order</i> .
<i>Down</i>	Select a participant and click this button to move the participant <i>Down</i> in the <i>Scanning Order</i> .

- 2 **Optional.** Add a participant to the list of participants to be *Auto Scanned*:
 - a Click on the participant's name in the *All Participants* list.
 - b Click the **Add** button to move the participant to the *Scanning Order* pane.
- 3 **Optional.** Delete a participant from the list of participants to be *Auto Scanned*:
 - a Click on a participant's name in the *Scanning Order* list.
 - b Click the **Delete** button to move the participant back to the *All Participants* pane.
- 4 **Optional.** Add all participants to the list of participants to be *Auto Scanned*:
 - Click the **Add All** button.
- 5 **Optional.** Delete all participant from the list of participants to be *Auto Scanned*:
 - Click the **Delete All** button.
- 6 **Optional.** Move the participant up in the *Scanning Order*:
 - Click the **Up** button.
- 7 **Optional.** Move the participant down in the *Scanning Order*:
 - Click the **Down** button.
- 8 Click the **Apply** button to confirm and keep the *Conference Properties* dialog box open.
or
Click the **OK** the button to confirm and return to the *RMX Web Client Main Screen*.

Sending Text Messages to All Participants Using Message Overlay

Text messages can be sent to all participant in the conference using the *Message Overlay* options in the *Conference Properties – Message Overlay* dialog box.

To send text messages to all participants in a conference using Message Overlay:

- 1 In the *Conferences List* pane, double-click the conference entry or right-click the conference entry and then click **Conference Properties**.
The *Conference Properties – General* dialog box is displayed.
- 2 Click the **Message Overlay** tab.

The **Message Overlay** tab is displayed.



- 3 Click the **Enable** check box.
- 4 Modify the fields as set out in the *RMX 2000 Administrator's Guide*, Table 1-9, "New Profile / Profile Properties - Message Overlay Tab," on page 1-34.
- 5 Click the **OK** button.

To cancel the Message Overlay display:

- 1 Repeat Step 1 and Step 2 in the enabling procedure above.
- 2 Clear the **Enable** check box.
- 3 Click **OK**.

Participant Level Operations

Participant Level Operations enable you to modify and control the connections and statuses of participants in ongoing conferences, as described in Table 3-8.

Table 3-8 Participant Level Operations



















Menu Option	Button	Description
<i>New Participant</i>		Define a new participant. For more information about the <i>New Participant</i> dialog box tab, see Table 3-3 on page 3-18.
<i>Add Participant From Address Book</i>		Open the <i>Address Book</i> to select the participant for the conference. For more information about the <i>Address Book</i> , see the <i>RMX 1500/2000/4000 Administrator's Guide</i> , "Address Book" on page 7-1.
<i>Connect Participant</i>		Connect a disconnected defined dial-out participant to the conference.
<i>Disconnect Participant</i>		Disconnect the participant from the conference.
<i>Delete Participant</i>		Delete the selected participants from the conference.
<i>Mute Audio</i>		Mute the audio transmission from the participant to the conference. The <i>Audio Muted</i> indicator appears in the <i>Participants List</i> and the <i>Unmute Audio</i> button () becomes active.
<i>Unmute Audio</i>		Resume the participant's audio transmission to the conference. The <i>Mute Audio</i> button () becomes active.
<i>Suspend Video</i>		Suspend the video transmission from the participant to the conference. The suppressed participant's video is not transmitted to the conference but the participant still receives conference video. The <i>Suspend Video</i> indicator appears in the <i>Participants List</i> and the <i>Resume Video</i> button () becomes active.
<i>Resume Video</i>		Resume the participant's video transmission to the conference. The <i>Suspend Video</i> button becomes active ()
<i>Block Audio</i>		To block the audio transmission from the conference to the participant. When blocked, the participant can still be heard by the conference. The <i>Audio Blocked</i> indicator appears in the <i>Participants List</i> and the <i>Unblock Audio</i> button () becomes active.
<i>Unblock Audio</i>		Resume the audio transmission from the conference to the participant. The <i>Block Audio</i> button () becomes active.
<i>Add Participant to Address Book</i>		Add selected participant's details to the <i>Participant Address Book</i> .

Table 3-8 Participant Level Operations (Continued)

Menu Option	Button	Description
<i>Move to Conference</i>		Move the participant to another ongoing conference. The destination conference is selected from a displayed list.
<i>View Participant Sent Video</i>		Preview the video sent from the participant to the conference.
<i>View Participant Received Video</i>		Preview the video sent from the conference to the participant.
<i>Copy Participant</i>		Copy the all participant's parameters in preparation for Pasting into another conference or back into the current conference.
<i>Cut Participant</i>		Copy the all participant's parameters and delete the participant from the current conference. The participant can be Pasted into another conference or back into the current conference.
<i>Paste Participant As</i>		Paste the participant into the selected conference as a new participant with parameters modified via the Address Book Participant - Properties dialog box.
<i>Abort H.239 Session</i>		To withdraw the Content Token from the participant back to the MCU for re-assignment.
<i>Change to Chairperson</i>		Define the selected participant as the conference leader/ chairperson.
<i>Change to Regular Participant</i>		Define the chairperson as a regular participant without chairperson privileges.
<i>Change To Content Token Owner</i>		Initiate <i>Content Broadcast Control</i> to prevent the accidental interruption or termination of <i>H.239 Content</i> that is being shared by this participant. For more information see the <i>RMX 1500/2000/4000 Administrator's Guide</i> , "Content Broadcast Control" on page 3-54.
<i>Cancel Content Token Owner</i>		Cancel <i>Content Broadcast Control</i> . For more information see the <i>RMX 1500/2000/4000 Administrator's Guide</i> , "Content Broadcast Control" on page 3-54.
<i>Connect to Website</i>		Connect directly to the internal website of the participant's endpoint to perform administrative, configuration and troubleshooting activities.
<i>AGC (Auto Gain Control)</i>		Enable AGC for the participant with weak audio signal during ongoing conferences. Notes: <ul style="list-style-type: none"> To implement AGC for the participant audio, the ENABLE_AGC System Flag in system.cfg must be set to YES. The flag's default value is NO. For more information see the <i>RMX 1500/2000/4000 Administrator's Guide</i>, "Adding a Participant to the Address Book" on page 7-3. Enabling AGC may result in amplification of background noise.

Table 3-8 Participant Level Operations (Continued)

Menu Option	Button	Description
<i>Participant Properties</i>		To view all <i>Participant Properties</i> . For more information, see the <i>RMX 1500/2000/4000 Administrator's Guide</i> , "Participant Level Monitoring" on page 12-14 .

Copy Cut and Paste Participant


The RMX user can **Copy**, **Cut** and **Paste** participants between different conferences running on the RMX, including his/her current conference. These functions, when used via the *RMX Manager*, with its ability to manage multiple RMXs, participants, allows the RMX user to **Copy**, **Cut** and **Paste** participants between conferences running on different RMXs.

Copy Participant

The **Copy** command copies all the participant's properties and makes them available for pasting. The participant remains connected to his/her current conference.

To copy a participant:

- 1 In the *Participants List* pane, right-click the participant you want to copy.
- 2 In the drop-down menu select **Copy Participant**.

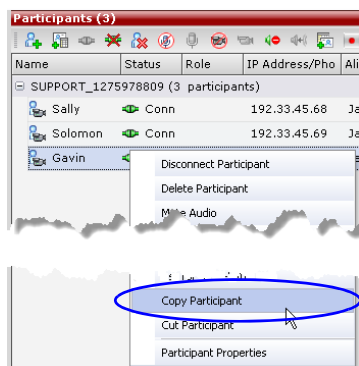


Cut Participant

The **Cut** command copies all the participant's properties and makes them available for pasting. The participant is deleted from his/her current conference.

To cut a participant:

- 1 In the *Participants List* pane, right-click the participant you want to cut.

- 2 In the drop-down menu select **Cut Participant**.

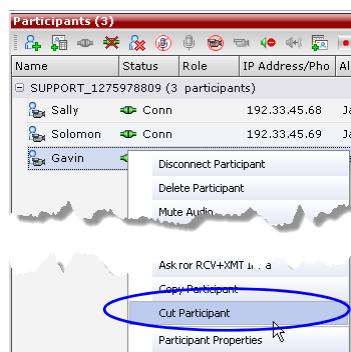

Paste Participant

The **Paste** command connects the *copied* or *cut* participant to the selected conference. If the participant was *copied*, he/she should be deleted from the conference he/she was *copied* from, unless it is required that the participant is connected to two (or more) conferences. (There are endpoints that permit a participant to be connected to multiple conferences).


To paste a participant:

- 1 In the *Conferences List* pane, click the conference you want to paste the copied/cut participant into.
- 2 Right-click in the *Participants List* pane of the selected conference and in the drop-down menu select **Paste Participant**.

or

If you are using the *RMX Manager* and you want to paste the participant to a conference to different RMX:

- a In the *MCUs list* pane, click the *RMX* that is hosting the conference that is to receive the participant.
- b In the *Conferences list* pane, click the conference you want to paste the copied/cut participant into.
- c Right-click, and in the drop-down menu select **Paste Participant**.

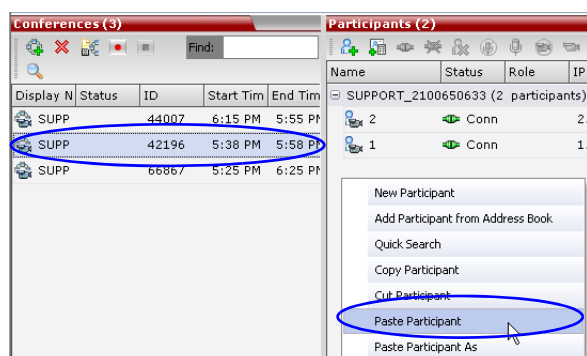

The participant is connected to the conference.

Paste Participant As

The **Paste Participant As** command allows the RMX user to create a new participant using the copied participant's properties as a template. It automatically opens the *Address Book - Participant Properties* dialog box allowing the RMX user to modify the participant's properties effectively creating a new participant. When the **OK** button in the *Participant Properties* dialog box is clicked the new participant is connected to the selected conference.

To paste a participant as a new participant:


- 1 In the *Conferences List* pane, click the conference you want to paste the copied/cut participant into.

Right-click in the *Participants List* pane of the selected conference and in the drop-down menu select **Paste Participant As**.

or

If you are using the *RMX Manager* and you want to paste the participant to a conference on another RMX:

- a In the *MCUs list* pane, click the RMX that is hosting the conference that is to receive the participant.
- b In the *Conferences list* pane, click the conference you want to paste the copied/cut participant into.
- c Right-click, and in the drop-down menu select **Paste Participant As**.

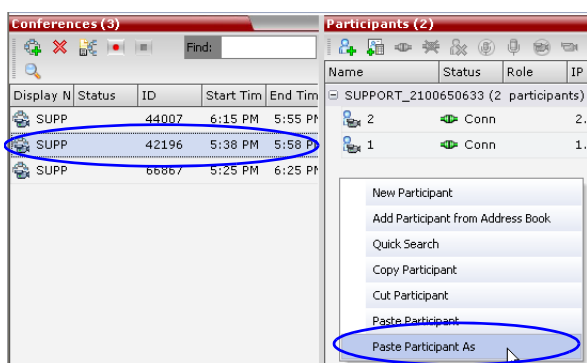

The *Address Book - Participant Properties* dialog box is displayed.

- 2 Modify the participant information as required. For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "Modifying Participants in the Address Book" on page 5-11.

Optional. If not already in the *Address Book*, the copied/cut participant can be added to the *Address Book*.

Optional. The new participant can be added to the *Address Book*.

- 3 Click the **OK** button to connect the new participant to the selected conference.


Sending Messages to Selected Participants Using Message Overlay

During an ongoing conference, text messages can be sent to selected participants (a single participant or a number of participants) using the *Send Text Message to Participant* right-click menu option.

To send text to selected participants:

- 1 In the *Participant List* pane, choose a participant or a number of participants.
- 2 In the *Participant List* pane, right-click a participant or a number of participants and then select **Send Text Message to Participant**.

The *Send Text Message to Participant* dialog box is displayed.

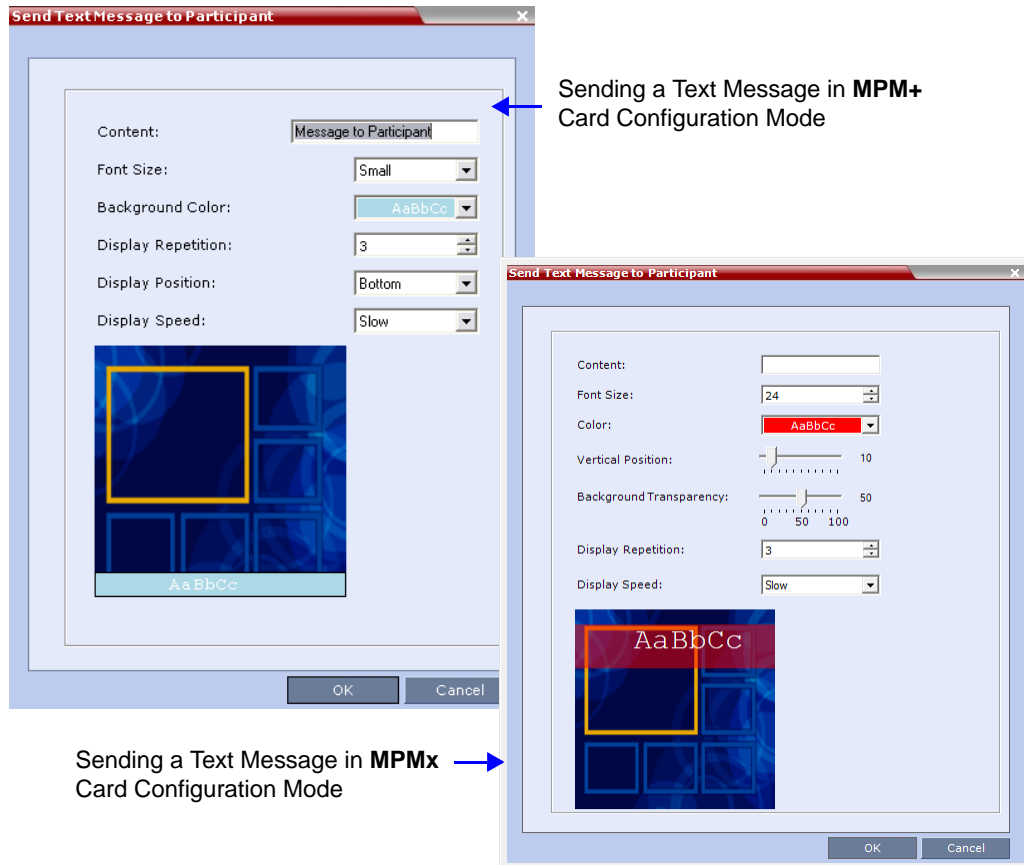

- 3 In the *Content* field, enter the text to be displayed to all the conference participants. The number of characters that can be included in a message varies according to the language and can differ due to the type of font used. For example, the available number of characters in Chinese is 32 and 48 for English and Russian.
- 4 Modify the remaining fields as set out in the *RMX 2000 Administrator's Guide*, Table 1-9, "New Profile / Profile Properties - Message Overlay Tab," on page 1-34.
- 5 Click the **OK** button.

Personal Layout Control with the RMX Web Client


RMX users can use the *RMX Web Client* to change the *Video Layouts* of individual participants and force participants to its windows without affecting the *Video Layouts* of other participants. A participant's *Personal Layout* cannot be changed while *Lecture Mode* is enabled.

To change a participant's Video Layout and Video Forcing:

- 1 In the *Participants* list, double click the participant or right-click the participant and then click **Participant Properties**.

The *Participant Properties - Media Sources* dialog box opens.

- 2 In the *Layout Type* list, select **Personal**.

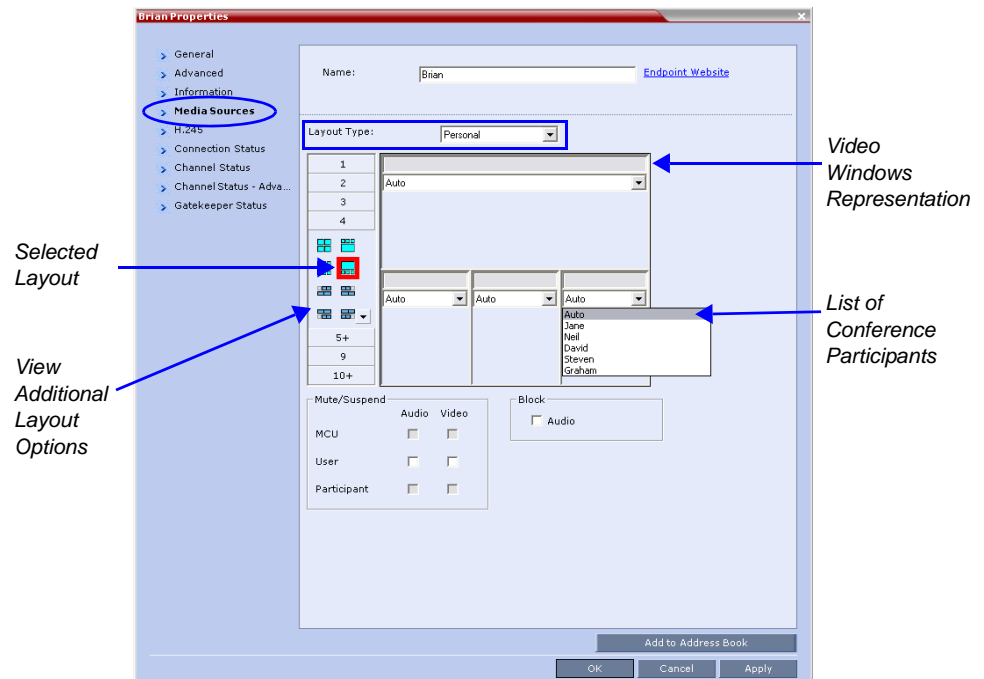

- 3 Select the number of Video Windows.
- 4 Select the required Video Layout.
- 5 To video force participants to windows in the selected video layout, in the window to which you want to force a participant, select the name of the participant to force from the list of conference participants.
- 6 Repeat step 5 to force participants to other windows.
- 7 Click **OK**.

To cancel the Personal Video Layout selection and return to the conference layout:

- 1 In the *Participant Properties* dialog box, select the **Media Sources** tab.
- 2 In the *Layout Type* list, select **Conference**.
- 3 Click **OK**.

The participant will now see the conference video layout with its forced participants.

To cancel the Personal Video Forcing for a window without returning to the conference layout:

- 1 In the *Participant Properties – Media Sources* dialog box, in the video layout window, select **Auto** in the *Participants* list.
 - 2 Click **OK**.
- Switching between participants is renewed and is audio activated.

Personal Layout Selection with Click&View

With the **Click&View** application, participants can change their *Personal Layouts* via DTMF codes entered from their endpoints. Participants cannot change their *Personal Layouts* when *Lecture Mode* is enabled.

This option is available only if the **Click&View** option is selected in the *Conference IVR Service*. For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "Defining a New Conference IVR Service" on page 16-7.

To change Personal Layout with Click&View:

- 1 **Enable Click&View** – on the endpoint's keypad, enter *** ***.

The *Click&View* application is displayed on the screen.



When using a *Polycom VSX* endpoint, an additional ***** must be entered to enable the remote DTMF keypad. The full *Click&View* entry sequence is: *** ***, ***** ***** *****.

The Personal Layout keypad options menu is displayed on the video screen.



- 2 On the endpoint's remote keypad, press the number corresponding to the number of video squares you wish to select.

For example, if you want a four-square video layout, press **4**.

The video window layout of your screen changes to the first four-window layout as follows:



Repeated presses of the **4** key, within eight seconds, cycles through the following series of four-square layout options:



























In any multi-square layout, pressing **#** forces the current speaker to the top left window.

In full view, pressing **#** forces the next participant to full view.

In any video layout, pressing **0** reverts to the conference layout.


The following table summarizes the Video Layout options available via *Click&View*.

Table 3-9 Video Layout Options

DTMF Code	Group Default Layout	Group Layout Options
1		
2		  
3		 
4		  
5		 
6		
7		
8		
9		   
0 / 	Revert to the previous conference layout.	

Personal Layout Control via Polycom Touch Control

Participants connected via *HDX* endpoints can control their *Personal Layouts* via the *Polycom® Touch Control* device.

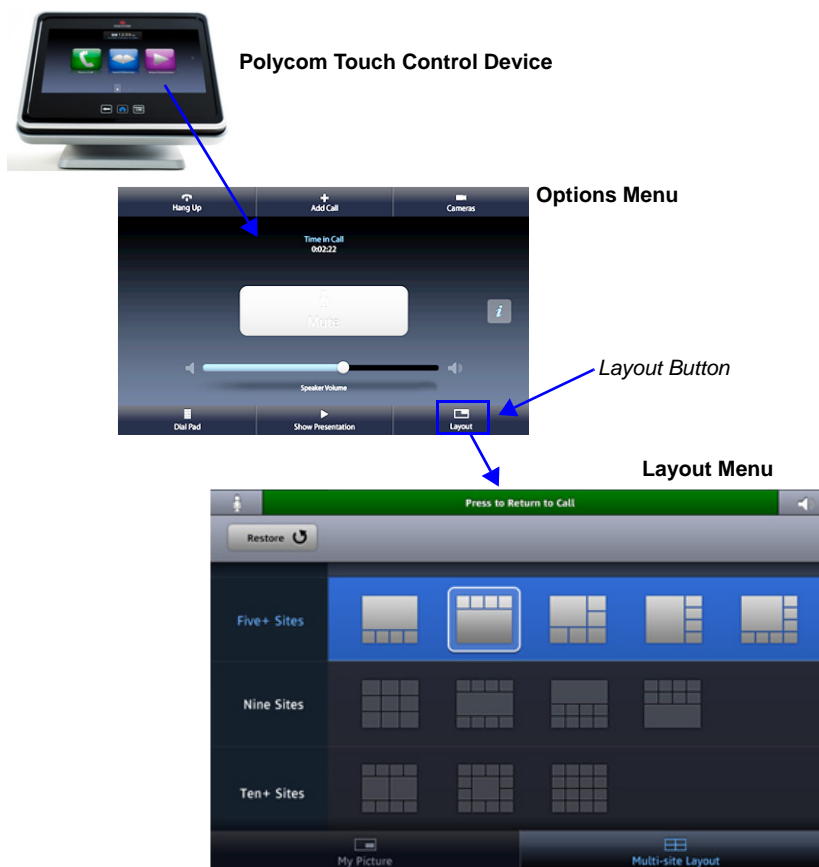

Layout change requests sent by the participant to the *HDX* via the *Touch Control* device result in *DTMF* codes being sent from the *HDX* endpoint to the *RMX*. The *RMX* responds by sending the requested layout to the *HDX* endpoint.



The *Polycom® Touch Control* device is only supported with *MPM+* and *MPMx* media cards. For more information see the *Polycom® Touch Control User Guide*.

Conference Control Using DTMF Codes

Participants and chairpersons can manage their connection to ongoing conferences from their endpoints, using touch-tone signals (*DTMF* codes) from their endpoints. Table 3-9 lists the *DTMF* Codes that can be used.

Chairpersons can also control an ongoing conference using *DTMF* codes.

Permissions for *DTMF* actions to be performed by all conference participants or by chairperson only are configured in the *Conference IVR Service* assigned to the conference.

For more information, see the *RMX 1500/2000/4000 Administrator's Guide*, "Defining a New *Conference IVR Service*" on page 16-7.

To use the DTMF codes to control the conference, the DTMF input must be first enabled on the endpoint remote control (for example, entering #).

Table 3-10 *Default DTMF Codes to Manage Conferences and Participants*

Operation	DTMF String	Permission
Conference help	00	Chairperson
Initiate PCM	##	Everyone
Start Click&View	**	Everyone
Individual help	*0	Everyone
Pause Recording	*1	Chairperson
Stop Recording	*2	Chairperson
Start/Resume Recording	*3	Chairperson
Enable Roll Call	*42	Chairperson
Disable Roll Call	#42	Chairperson
Roll Call Review Names	*43	Chairperson
Roll Call Stop Review Names	#43	Chairperson
Mute All Except Me	*5	Chairperson
Cancel Mute All Except Me	#5	Chairperson
Mute My Line	*6	Everyone
Unmute My Line	#6	Everyone
Increase Broadcast Volume	*9	Everyone
Decrease Broadcast Volume	#9	Everyone
Secure Conference	*71	Chairperson
Unsecure Conference	#71	Chairperson
Invite Participant	*72	Everyone
Increase Listening Volume	*76	Everyone
Decrease Listening Volume	#76	Everyone
Change Password	*77	Chairperson
Change To Chairperson	*78	Everyone
Play Help Menu	*83	Everyone
Mute Incoming Participants	*86	Chairperson
Unmute Incoming Participants	#86	Chairperson
Terminate Conference	*87	Chairperson
Show Participants	*88	Everyone

Table 3-10 Default DTMF Codes to Manage Conferences and Participants



Operation	DTMF String	Permission
Request to speak	99	Everyone
Override Mute All	Configurable	Everyone
Touch Control Prefix	*#	Everyone

Requesting Help

A participant can request help using the appropriate DTMF code from his/her touch tone telephone or the endpoint's DTMF input device. The participant can request Individual Assistance (default DTMF code *0) or Conference Assistance (default DTMF code 00).

Participants in Entry Queues who failed to enter the correct destination conference ID or the conference password will wait for operator assistance (provided that an Operator conference is active).


Participant who is waiting for User (Operator) Assistance is displayed with the following icons in the Status column of the Participants pane.

	Awaiting Individual Assistance – The participant has requested the user's (operator's) assistance.
	Awaiting Conference Assistance – The participant has requested the user's (operator's) assistance for the conference. This usually means that the RMX user (operator) has been requested to join the conference.

Request to Speak

Participants that were muted by the conference organizer/system operator can indicate that they want to be unmuted by entering the appropriate DTMF code.

An icon is displayed in the *Role* column of the *Participants* list for 30 seconds.

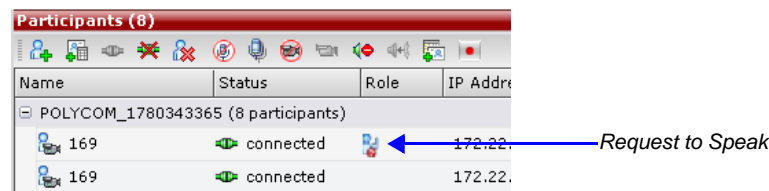

Request to Speak is:

- Activated when the participant enters the appropriate DTMF code (default: 99).
The DTMF code can be modified in the conference *IVR Service Properties - DTMF Codes* dialog box.
- Available for dial-in and dial-out participants.
- A participant can request to speak more than once during the conference.
- Supported in *all* conference types.
- Supported in H.323 and SIP environments.
- The duration of the icon display cannot be modified.

Invite Participant

A participant in a video or audio conference can invite another participant to the conference using the touch-tone DTMF numeric keypad on the participant's endpoint. You can invite a participant using various communication devices, such as a mobile phone, an IP phone, PSTN phones, laptops, or connect to another conference running on another PBX or MCU.

Invite Call Flow

The following flow describes how a participant is invited to the conference using the DTMF codes:

- 1 During the conference, the participant enters the DTMF code (default is *72) on the numeric keypad to invite another participant.
- 2 The participant is prompted to enter the invited participant's destination number (a number or IP address) including the prefix (if required) and the DTMF delimiter digit ('*' or '#') at the end. The asterisk (*) is used to denote the dot in the IP address.
For example: To enter an IP address such as 10.245.22.19, on the DTMF keypad press 10*245*22*19 and then the DTMF delimiter.



Digits that are entered after the DTMF delimiter and before the participant is connected are ignored.

- 3 The system automatically dials to the destination according to the protocol order as defined in the *IVR Services Properties - Video Services* tab.
When the call cannot be completed by the current protocol, the system attempts to connect to the destination using the next protocol according to the protocol order.
The RMX connects the participant when the call is answered.

Entering Additional DTMF Codes

In some environments, the call is answered by an IVR system (for example when connecting to another conference or PBX), requesting a password or a destination number to complete the connection process. In such a case, additional DTMF digits must be entered before the **DTMF forward duration** time has expired and are forwarded to the invited destination. When the additional DTMF codes are entered, they are heard by all the conference participants.

If the DTMF code is not entered on time or if the wrong DTMF code is entered, the participant is prompted for a new input. After the defined number of retries have elapsed, the call is ended.

Error Handling

- If the destination endpoint is busy or the participant did not answer, the system ends the call.
- When an incorrect number is entered, the call fails and an error message is displayed.
- If the destination number is not entered in a specific amount of time (defined in **Timeout for user input** in the *IVR Services - Global* tab), the participant is prompted to enter a destination number again. Depending on the **Number of user input retries** as defined in the *IVR Services - Global* tab, the system will attempt to receive the required input. When all the retries have failed, the call to the invited participant is cancelled.

Guidelines

- In CP conferences, the participant initiating the invitation to another participant is able to view the dialing information and connection status. During the dialing process, the

dialing string is displayed as the participant name which is replaced by the site name when connected to the conference.

- By default, all participants (Everyone) are granted permission to invite a participant to join a conference. To change the permission to the Chairperson, modify the *Permission* column in the *IVR Service - DTMF Codes* tab.

For details on enabling the Invite Participants feature, see "*Enabling the Participants using DTMF Option*" on page [16-38](#).

Personal Conference Manager (PCM)

The *Personal Conference Manager (PCM)* interface enables the conference chairperson to control various conference features using his/her endpoint's remote control device.


The following conference operations can be performed:

- Initiate **Polycom's Click&View™** application to change the local screen layout.
- Invite participants to connect to the conference.
- View and control the audio and video of each connected endpoint.
- Camera Control - control the camera of a remote endpoint using *Far End Camera Control (FECC)*.
- Control the camera of a connected endpoint.
- Video Force a specific participant to a specific window of the video layout.
- Initiate and control recording of the conference.
- Disconnect a participant.
- Terminate the conference.

Guidelines

- PCM is supported with MPM+ and MPMx cards.
- PCM is supported in H.323, SIP, and H.320 network environments.
- PCM is only available in CP conferences.
- Although the RMX can host up to a maximum of 800 conferences (depending on the RMX model) PCM can only be activated from 4 conferences per MPM+ or MPMx card.
 - An RMX 2000 with 2 MPM+ or 2 MPMx cards installed can host a total of 8 PCM sessions while an RMX 4000 with 4 MPM+ or 4 MPMx cards installed can host a total of 16 PCM sessions.
 - If 4 PCM sessions are active on an MPM+ /MPMx card and a chairperson of another conference, hosted on the same MPM+/MPMx card, attempts to start an additional PCM session, a message is displayed indicating that the requested PCM session cannot be activated because the maximum number of concurrent PCM sessions are already activated. FECC is then activated.
 - When PCM is active, FECC can only be performed by the chairperson using PCM's *Camera Control* menu.
- FECC is available to all IP participants in the conference with the exception of the chairperson that has an active PCM session.
- If enabled, *Message Overlay* is not displayed while PCM is active.
- Normal conference video is resumed after 4 seconds of inactivity within the PCM menu.
- If a chairperson with active PCM session is moved to another conference, the PCM session is automatically terminated.
- PCM cannot be activated from the chairperson's endpoint when connected with QCIF resolution.

- The **PCM_LANGUAGE System Flag** determines the language of the *PCM* interface.
Possible Values: ENGLISH, CHINESE_SIMPLIFIED, CHINESE_TRADITIONAL, JAPANESE, GERMAN, FRENCH, SPANISH, KOREAN, PORTUGUESE, ITALIAN, RUSSIAN, NORWEGIAN
Default: Current RMX Web Client language.
- The *Start PCM DTMF* code for initiating PCM is configured in the *DTMF Codes* tab of the *New Conference IVR Service* or *Conference IVR Service Properties* dialog box. The default *DTMF Code* is **##** and can be modified or if required.
The default value of the *Permission* field is **Everyone**. It can be modified to **Chairperson**.

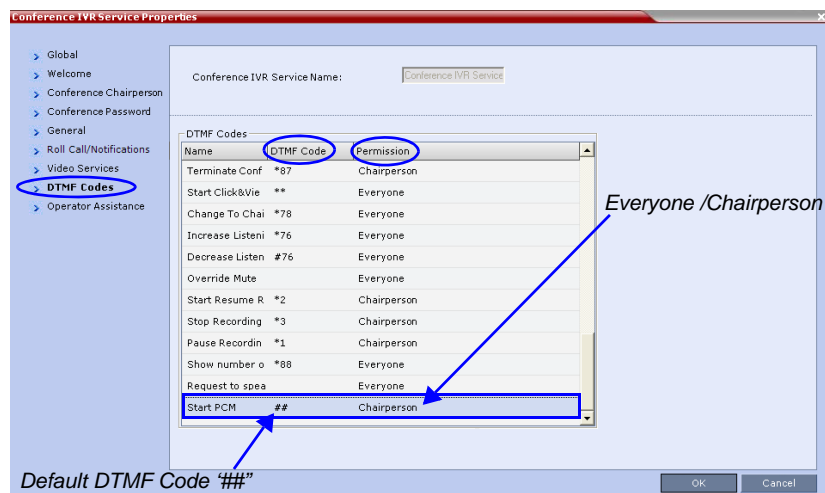

- Although PCM is successfully initiated on Microsoft Office Communications client or Lync client, since FECC feature is not available on these clients none of the PCM options are accessible as the only available keys are #,*1..9 and not the navigation keys ("LEFT", "RIGHT", etc.).

System Flag

The **PCM_FECC System Flag** determines whether the *DTMF Code*, **##**, the *Arrow Keys* (FECC) or both will activate the *PCM* interface. In addition, this flag can be used to disable the PCM.

Possible Values: YES / NO

Default: YES.

Table 3-11 summarizes the combined effect of the *DTMF Code* and **PCM_FECC System Flag** settings on the system.

Table 3-11 PCM_FECC / DTMF Code

PCM_FECC=	DTMF Code	Effect on System
YES	Defined	Both <i>DTMF Codes</i> and <i>Arrow Keys</i> will activate <i>PCM</i> .
	Deleted	Only the <i>Arrow Keys</i> can activate <i>PCM</i> . Once <i>PCM</i> is activated the <i>Arrow Keys</i> lose their <i>FECC</i> functionality.


Table 3-11 PCM_FECC / DTMF Code

PCM_FECC=	DTMF Code	Effect on System
NO	Defined	Only the <i>DTMF Code</i> can activate <i>PCM</i> . Once <i>PCM</i> is activated the <i>Arrow Keys</i> lose their <i>FECC</i> functionality.
	Deleted	<i>PCM</i> is disabled.

This *System Flag* must be added to the *System Configuration* file before it can be modified. For more information see the *RMX 1500/2000/4000 Administrator's Guide*, "Modifying System Flags" on page 21-1.

PCM Interface

Initiating PCM


For IP endpoints: *PCM* is activated by pressing the *Far* key () followed by any of the *Arrow Keys* on the *Remote Control Device*.

For ISDN/PSTN endpoints: *PCM* is activated by pressing ## on the *Remote Control Device*.

If, after activation, no keys are pressed on the *Remote Control Device* within a period of 10 seconds, *PCM* is automatically deactivated.

When *PCM* becomes active, the top level of the *PCM Main Menu* is displayed on the conference chairperson's endpoint:

Main Menu - Level 1

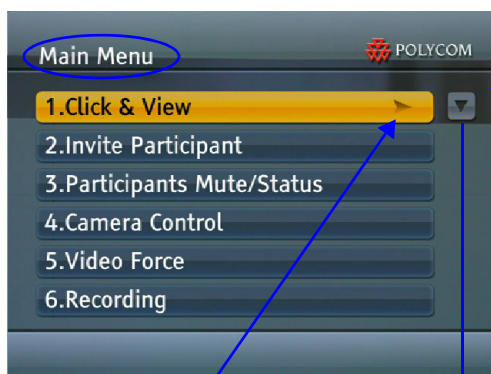

Arrow Indicator:
There are more menu options on the next page

Arrow Indicator:
There are menu options on the previous page

Right Arrow:
Corresponds to the Remote Device's Right Arrow Key
Action:
Go to Sub-Menu of Selected Option (Click&View)

Main Menu - Level 2






PCM Main Menu - Level 2 can only be viewed and accessed by *ISDN* endpoints by using *DTMF* Codes **7** and **8**.

Remote Control Device Keys

PCM facilitates user interaction with the RMX using *DTMF* Codes and the *Arrow* (FECC) keys of the endpoint's remote control device.

Menu Navigation - Arrow and Zoom Keys

The PCM Menu is navigated using the Remote Device's *Arrow Zoom* Keys which are defined as follows:

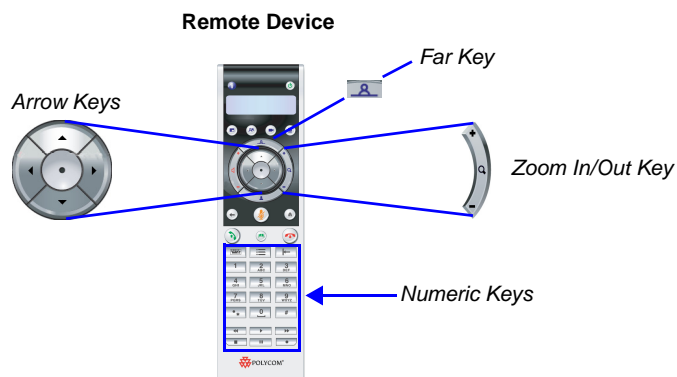

They are defined as follows:

Table 3-12 PCM - Menu Navigation







Arrow Key	Description
Left 	<ul style="list-style-type: none"> Go up one menu level. Delete the character to the left of the cursor when entering data. Exit the PCM menu and return to normal conference video (from PCM the top level menu.) Select the video window to the left when navigating a video layout. Initiate PCM from a conference.
Right 	<ul style="list-style-type: none"> Go down one menu level. Confirm current selection in the PCM menu. Select the video window to the right when navigating a video layout. Initiate PCM from a conference.
Up 	<ul style="list-style-type: none"> Cycle upward through the displayed menu options. Select the video window above when navigating a video layout. Initiate PCM from a conference.

Table 3-12 PCM - Menu Navigation

Arrow Key	Description
Down 	<ul style="list-style-type: none"> • Cycle downward through the displayed menu options. • Select the video window below when navigating a video layout. • Initiate PCM from a conference.
Zoom in (+) 	<ul style="list-style-type: none"> • Confirm current selection in the PCM menu. • Zoom in on the remote camera when using FECC.
Zoom out (-) 	<ul style="list-style-type: none"> • Exit PCM Menu. • Zoom out on the remote camera when using FECC.

DTMF Codes - Numeric Keys

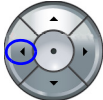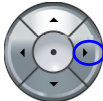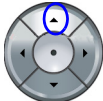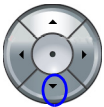

Before using the shortcut number keys 0-9, enable the DTMF function of the endpoint according to that endpoint's configurations.

DTMF codes are entered using the *Remote Device Numerics Keys* and are defined as follows:

Table 3-13 PCM - DTMF Codes

Numeric Key	Description
0	<ul style="list-style-type: none"> • Number input. • Shortcut key to a numbered menu option - when conference video or the PCM menu is displayed.
1-9	<ul style="list-style-type: none"> • Number input. • Shortcut key to a numbered menu option - when the conference video or the PCM menu is displayed. • Initiate PCM session on ISDN/PSTN endpoint (1 is the default for the <i>Start PCM</i> DTMF Code).
*	<ul style="list-style-type: none"> • Initiate DTMF mode (with Polycom endpoints) - during a conference or when the PCM menu is displayed. • Enter a period "." - while entering an IP address.
#	Confirm selection and send information to the RMX.

PCM Main Menu - Level 1

Click&View


With the *Click&View* application, participants can change their *Personal Layouts* using the *Arrow Keys* or *DTMF* codes entered using the *Numeric Keys* of their endpoints.

For a full description of *Click&View* see "*Personal Layout Selection with Click&View*" on page 3-68.

Invite Participant


To invite a participant to connect to the conference:

- 1 Use the **Up/Down** arrow keys to select **Invite Participant** in the *Main Menu* and then press the **Right** arrow or **#** key to confirm your selection.
or
Press the **2** key on the *Remote Device*.
The *Invite Participant* sub menu is displayed.

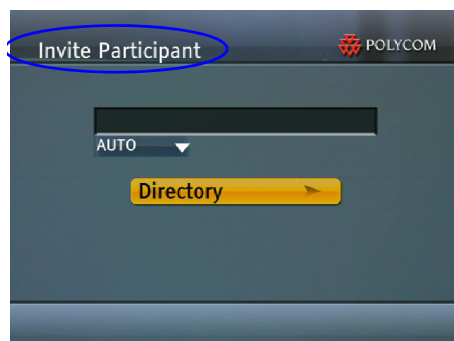

- 2 Use the *Numeric Keys* to enter the number of the participant's endpoint.
- 3 Press the **#** key to initiate the call.
- 4 **Optional.**
 - a Use the **Down** arrow to browse to and change the selection of the dialing method from **Auto** to one of the following:
 - H.323
 - SIP
 - VoIP
 - ISDN
 - PSTN
 - b Press the **#** key to initiate the call.
- 5 **Optional.**
 - a Use the *Arrow Keys* to browse to the **Directory** button and select the *Alphabetic Grouping* sub menu.

The *Local Directory* is displayed.

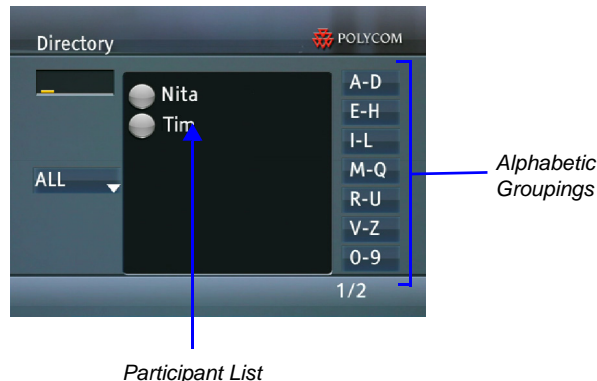

- b** Use the *Numeric Keys* to enter the number of the participant's endpoint.
- c** Press **#** or the **Zoom In** key to initiate the call.
- or**
- d** Use the **Up/Down** arrow keys to select a **Participant** from the displayed list or use the **Up/Down** and **Left/Right** arrow keys to display other directory listings.
A message, *Press # or Zoom In to select*, is displayed.
- e** Press **#** or the **Zoom In** key to initiate the call.

Optional. To display all participants:

- Use the **Down** arrow and the **Left/Right** arrow keys to select the **ALL** button.
- Use the **Zoom In** key to display the global directory.
- Use the **Up/Down** and **Left/Right** arrow keys to select a **Participant**.
- Press **#** or the **Zoom In** key to initiate the call.

Participants Mute/Status

The chairperson can view and control the audio and video status of each participant's endpoint. The chairperson can:

- View the audio and video status of participants.
- Mute, block, unmute, unblock participant audio.
- Suspend or allow participant video.
- Mute all (except chairperson and lecturer).


To view and change the Participants Mute/Status:

- 1** Use the **Up/Down** arrow keys to browse to **Participants Mute/Status** entry in the *Main Menu* and then press the **Right** arrow or **#** key to confirm your selection.

or

Press the **3** key on the *Remote Device*.

The *Participants Mute/Status* sub menu is displayed.

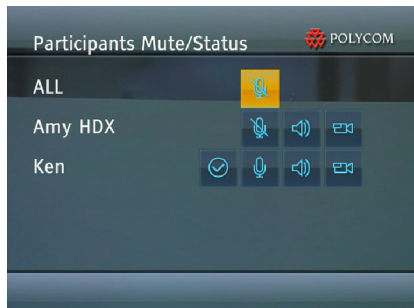









The sub menu displays the *Muted*, *Blocked* and *Video Suspended* status of all participants' endpoints. **ALL** can be selected to mute and unmute all participant endpoints with the exception of the conference chairperson and lecturer.

- 2 Use the **Up/Down/Left/Right** arrow keys to select a *Mute*, *Block* or *Suspend* status icon.
- 3 Use the **Zoom In** key to toggle the state of the audio and video channels of the participants' endpoints.

The status icons are summarized in Table 3-14.

Table 3-14 *Participants Mute/Status - Icons*

Status Icon	Description
	Audio output from this endpoint is allowed. Other conference participants can hear the audio from this endpoint.
	The endpoint is muted. Other conference participants will not hear audio from this endpoint.
	The audio input to this endpoint is allowed. This endpoint can hear the conference audio.
	The audio output to this endpoint is blocked. This endpoint cannot receive the conference audio.
	Video output from the endpoint is allowed. Other conference participants can see video from this endpoint.
	Video output from the endpoint is suspended. Other conference participants cannot see video from this endpoint.
	The endpoint is neither muted nor blocked.
	The endpoint is both muted and blocked.

Camera Control

This function is not available to chairpersons using *PCM* with *ISDN* endpoints.

The endpoint to be controlled must support *Far End Camera Control* (FECC).

Using the arrow keys of the remote control device, the chairperson can control the direction, zoom and focus of a remote endpoint's camera.


To control a far camera:

- 1 Use the **Up/Down** arrow keys to select **Camera Control** in the *Main Menu* and then press the **Right** arrow or **#** key to confirm your selection.


or


Press the **4** key on the *Remote Device*.

The *Camera Control* sub menu is displayed.

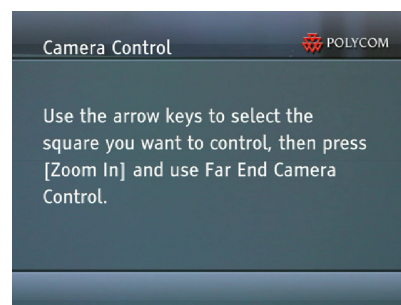

- 2 Use the **Up/Down/Left/Right** arrow keys to select the far camera to be controlled. A colored frame is displayed around the selected cell in the video layout.
- 3 Use the **Zoom In** key to activate *FECC*.

Following a 10 second delay, the *FECC* active icon () is displayed in the video image of the selected site.

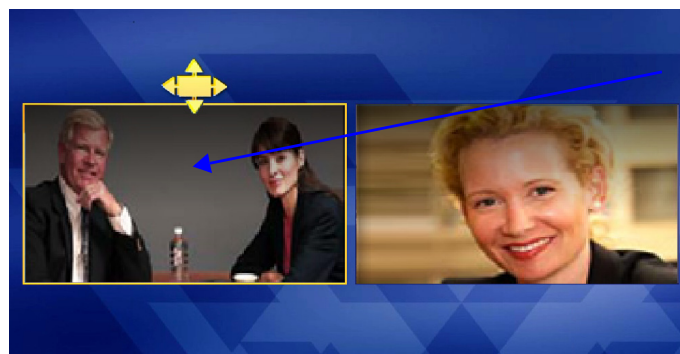

*Selected Cell for
Far End
Camera Control*

If no camera control keys are pressed on the *Remote Control Device* within a period of 5 seconds, the previous menu (*Camera Control*) menu is automatically displayed.

- 4 Use the **Up/Down/Left/Right/Zoom In/Zoom Out** arrow keys to control the remote camera.
- 5 Use the **Zoom Out** key on the remote control to return to the *PCM Main Menu*.

Video Force

This function is not available to chairpersons using *PCM* with *ISDN* endpoints.

Video Force enables the chairperson to force the video of a specific participant to a specific window of the video layout.


To Video Force a participant's video:

- 1 Use the **Up/Down** arrow keys to select **Video Force** in the *Main Menu* and then press the **Right** arrow or **#** key to confirm your selection.

or

Press the **5** key on the *Remote Device*.

The *Video Force* sub menu is displayed.

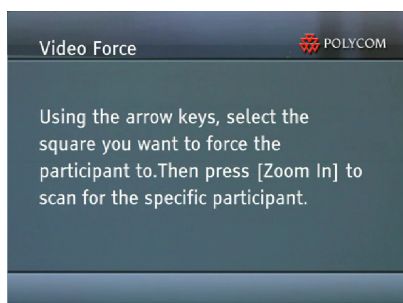

- 2 Use the **Up/Down/Left/Right** arrow keys to select the window of the video layout that you want the specific participant to be displayed in.
- 3 Press the **Zoom In** key to cycle the display of all participants in the selected video window until the participant you want to be displayed appears.
- 4 Press the **Right** arrow or **#** key to confirm your selection.

Recording

This function is not available to chairpersons using *PCM* with *ISDN* endpoints.

If a *Recording Link* has been set up in the *Conference Profile*, the conference chairperson can use the *PCM* interface to start, pause, resume and stop recording. If no *Recording Link* exists, this function appears grayed out and cannot be selected.

In *MPMx* mode a *Recording* or *Recording Paused* indication is displayed in the upper left corner of the video layout of all conference participants.

Recording Indicator



To use the recording functions:

- 1 Use the **Up/Down** arrow keys to select **Recording** in the *Main Menu* and then press the **Right arrow** or **#** key to confirm your selection.

or

Press the **6** key on the *Remote Device*.

The *Recording* sub menu is displayed.

**To start recording:**

- >> Use the **Up/Down** arrow keys to select **Start Recording** and then press the **Right arrow** or **#** key to confirm your selection.

or

Press the **1** key on the *Remote Device*.

To pause recording:

- >> While recording is in progress, use the **Up/Down** arrow keys to select **Pause** and then press the **Right arrow** or **#** key to confirm your selection.

or

Press the **2** key on the *Remote Device*.

To resume recording:

- >> While recording is paused, use the **Up/Down** arrow keys to select **Resume** and then press the **Right arrow** or **#** key to confirm your selection.

or

Press the **2** key on the *Remote Device*.

To stop recording:

- >> While recording is in progress, use the **Up/Down** arrow keys to select **Stop Recording** and then press the **Right arrow** or **#** key to confirm your selection.

or

Press the **3** key on the *Remote Device*.

PCM Main Menu - Level 2

Drop Participant

To disconnect a participant from the conference:

- 1 Use the **Up/Down** arrow keys to navigate to the second page of the *Main Menu*.
- 2 Use the **Up/Down** arrow keys to select **Drop Participant** and then press the **Right arrow** or **#** key to confirm your selection.

or

Press the **7** key on the *Remote Device*.
The *Drop Participant* sub menu is displayed.



- 3 Using the **Up/Down** arrow keys, select the participant to be disconnected and then press the **Right** arrow or **#** key to confirm your selection.
or
Press the *Numeric Key* on the *Remote Device* corresponding to the participant entry.


Terminate Conference



Although this function can be accessed and viewed by chairpersons using *PCM* with *ISDN* endpoints, conference termination cannot be executed.

To terminate a conference:

- 1 Use the **Up/Down** arrow keys to navigate to the second page of the *Main Menu*
- 2 Use the **Up/Down** arrow keys to select **Terminate Conference** and then press the **Right** arrow or **#** key to confirm your selection.
or
Press the **8** key on the *Remote Device*.
The *Terminate Conference* sub menu is displayed.

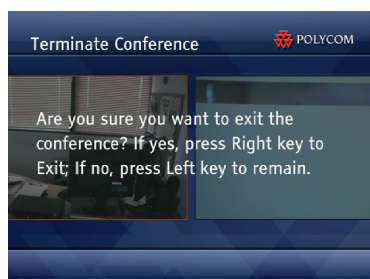

- 3 Press the **Right** arrow key to confirm termination of the conference.
or
Press the **Left** arrow key to cancel termination of the conference.

Appendix A

Glossary

This appendix lists the terms and abbreviations that are related to the Polycom RMX 1500/2000/4000, and are commonly used in the RMX documentation.

Abbreviation/ Term	Explanation
<i>AGC</i>	Auto Gain Control. A mechanism that regulates noise and audio volume by keeping the received signal of all participants balanced.
<i>Bandwidth</i>	Defines the information carrying capacity of a channel. In analog systems, it is the difference between the highest frequency that a channel can carry and the lowest, measured in hertz. In digital systems, bandwidth is measured in bits per second. The larger a connection's bandwidth, the more data can be transmitted in a given amount of time, allowing for greater video resolution and more sites in a conference. For more information, see Line Rate.
<i>Bonding</i>	Bandwidth ON Demand Interpolarity Group. A transmission protocol that aggregates two 64 Kbps B channels to function as one 128 Kbps channel. When using several BRI channels, Bonding means that only one D-channel serves all BRI channels, while the remaining D-channels are used for data transfer. See also: BRI.
<i>Bps, Kbps</i>	Bits and kilobits per second; a unit of bandwidth, which is the amount of data that can flow during one second over a communications line (using a transmission medium). 1 Kbps = 1000 Bps
<i>BRI</i>	Basic Rate Interface. A type of ISDN connection for transiting data, consisting of 3 channels: two B-channels (each of 64 Kbps) and one D-channel (16 Kbps).
<i>Carrier</i>	A telephone or other company that provides telecommunication transmission services.
<i>CIF, 4CIF, QCIF</i>	Common Intermediate Format, an optional part of the ITU-T's H.261 and H.263 standards. CIF specifies 288 non-interlaced luminance lines, that contain 176 pixels. CIF can be sent at frame rates of 7.5, 10, 15, or 30 per second. When operating with CIF, the amount of data to transmit cannot exceed 256 K bits (where K equals 1024). The CIF video format has the capacity to transmit video images of 352x288 pixels at 36.45 Mbps and 30 frames per second. A 4CIF format has four times the capacity of CIF; QCIF has quarter the capacity of CIF.
<i>Codec</i>	<u>Coder-decoder</u> . A device that converts voice and video into digital code, and vice versa. Refers to the endpoint video camera and video board that are used for videoconferencing.

Abbreviation/ Term	Explanation
<i>Conference</i>	Connection between two or more endpoints exchanging video and audio information. If only two endpoints are involved, a conference is called <i>point-to-point</i> and no MCU is required. If more than two endpoints are involved, it is called a <i>multipoint</i> conference, and an MCU (Multipoint Control Unit) is required as the management system. For more information, see MCU.
<i>CSU</i>	Channel Service Unit. Customer-provided equipment that is used as an interface between a communication network and the data terminal.
<i>DBA</i>	Dynamic Bandwidth Allocation. Used to allocate the bandwidth needed to transmit the additional packets. for LPR.
<i>DTMF</i>	Dual Tone Multi Frequency. A system of coded signals used by touch-tone telephones in which a specific sound, frequency or tone is assigned to each key so that the signal can be easily recognized by a computer. The codes enable data input and control of voice-processing systems. DTMF signals can pass through the entire connection to the destination device and therefore are used for remote control after the connection with the MCU is established.
<i>E1 Line</i>	A 2Mb digital switched line used in Europe.
<i>Endpoint</i>	A hardware device, or set of devices, that can call, and be called by an MCU or another endpoint. For example, an endpoint can be a phone, a camera and microphone connected to a PC or an integrated Room System (conferencing system).
<i>FECC</i>	Far End Camera Control. In certain video cameras, the accompanying software that enables a participant to control a remote camera. Used in Continuous Presence video conferences in conjunction with the LSD option. For more information, see LSD.
<i>Frame</i>	A group of bits that make up an elementary block of video data for transmission by certain protocols.
<i>Frame Rate</i>	The number of video frames displayed on-screen during one second, measured in fps (frames per second).
<i>G.711</i>	ITU-T audio algorithm, 64Kbps, 3.4 kHz.
<i>G.722</i>	ITU-T audio algorithm, 64Kbps, 7 kHz.
<i>G.728</i>	ITU-T audio algorithm, 16Kbps, 3.4 kHz.
<i>Gatekeeper</i>	A type of server that performs two main functions: translates LAN alias addresses of terminals and gateways to IP addresses and provides bandwidth management.
<i>H.221</i>	ITU-T standard that defines how to multiplex video, audio, control, and user data into one serial bit stream.
<i>H.230</i>	ITU-T standard that defines simple multipoint control systems procedures and describes network maintenance functions.
<i>H.231</i>	ITU-T standard that defines a set of MCU functions and operational requirements.

Abbreviation/ Term	Explanation
<i>H.242</i>	ITU-T standard that defines initiation of communications between systems and capabilities negotiation procedures.
<i>H.243</i>	ITU-T standard that defines initiation of communications between systems and capabilities negotiation procedures in multipoint conferences.
<i>H.261</i>	ITU-T standard that defines the Px64 video coding algorithm.
<i>H.263</i>	ITU-T standard that provides improved compression and quality of video images at a line rate lower than 384 Kbps. This standard is not supported by all codecs.
<i>H.264*</i>	A proprietary Polycom Video compression standard.
<i>H.264</i>	ITU-T standard that provides improved compression and quality of video images in lower line rate connections and is part of the Highest Common mechanism in Video Switching conferences.
<i>H.320</i>	ITU-T standard that defines how the H-series video conferencing recommendations work together.
<i>H.323</i>	ITU-T standard for audio, video and data communications across IP-based (LAN) networks, including the Internet.
<i>ICE</i>	Interactive Connectivity Establishment (ICE) provides a structure/protocol to unify the various NAT Traversal techniques that are used to cross firewalls. It enables SIP based endpoints to connect while traversing a variety of firewalls that may exist between the calling endpoint (local) and the MCU or called endpoint (remote).
<i>IP</i>	Internet Protocol. The working protocol that forms the basis of the internet.
<i>ISDN</i>	Integrated Services Digital Network. A set of protocol and interface standards (voice, video and data) that comprise a telephone network. There are two types of ISDN lines: BRI and PRI.
<i>ITU-T Standard</i>	International Telecommunications Union, Telecommunication Standardization Sector (formerly CCITT). An international group that produces official standards for telecommunications.
<i>LAN</i>	Local Area Network. A group of computers and other devices linked via a network's operating system.
<i>LDAP</i>	Lightweight Directory Access Protocol.
<i>Line Rate</i>	The amount of bandwidth used by a communication device, measured in Kbps (kilobits per second).
<i>LPR</i>	Lost Packet Recovery. An algorithm that creates additional packets that contain recovery information necessary to reconstruct lost packets.
<i>MCU</i>	Multipoint Control Unit. Device which allows more than two sites to be connected in a video conference.
<i>Null modem cable</i>	A serial cable designed to eliminate the need for communication equipment when two digital devices are directly connected to each other.

Abbreviation/ Term	Explanation
<i>Participant</i>	A person using an endpoint to connect to a conference. When using a Room System, several participants use a single endpoint.
<i>PRI</i>	Priority Rate Interface. An ISDN interface designed for high volume data communication. Consists of 23 B channels of 64 Kbps each and one D channel of 64 Kbps. In Europe, the PRI line provides 30 B channels + one D channel.
<i>PSTN</i>	Public Switched Telephone Network.
<i>QCIF</i>	Quarter CIF. A video format with image size of 176x144 pixels that transmits 9.115 Mbps at 30 frames per second (a quarter of the capacity of CIF). For more information, see CIF.
<i>QoS</i>	Quality of Service. QoS defines the performance of a network service, such as the average delay between packets.
<i>RS-232</i>	A standard for serial interface connection.
<i>RTV</i>	Real Time Video protocol provides high quality video conferencing capability to Microsoft OCS (Office Communicator Server) endpoints.
<i>SIP</i>	Session Initiation Protocol. An application-layer protocol designed to work over IP networks. A SIP service defines the properties and the IP addresses of the SIP network components.
<i>Span</i>	An ISDN line or leased line. A span may be of either T1 (United States) or E1 (Europe) type. Also called a circuit.
<i>SRTP</i>	Encryption of SIP Media is supported using SRTP (Secured Real-time Transport Protocol) and the AES key exchange method.
<i>T1 Line</i>	A 1.5Mb digital switched line used in the United States.
<i>ToS</i>	Type of Service. ToS defines optimization tagging for routing audio and video packets.
<i>WAN</i>	Wide Area Network. A communications network that services a geographical area larger than the LAN.
<i>Whiteboard</i>	An on-screen shared notebook for placement of shared documents.

Appendix B

Troubleshooting


RMX Web Client Installation - Troubleshooting Instructions

Close all the Internet Explorer sessions and perform the following procedure.

Procedure 1: Ending all Internet Explorer Sessions

In some cases, although all the Internet Explorer sessions were closed, the system did not end one or several IE processes. These processes must be ended manually.

- 1 Start the **Task Manager** and click the **Processes** tab.
- 2 Select an **iexplore** process and click the **End Process** button.

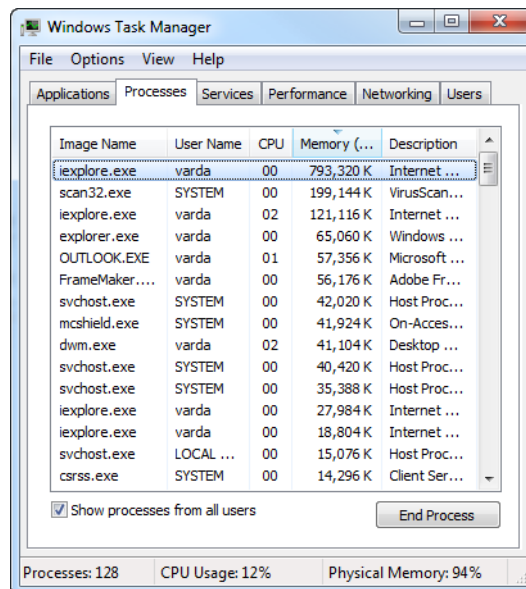


- 3 Repeat this process for all **iexplore** processes that are currently active.
- 4 Close the *Windows Task Manager* dialog box.
- 5 Open the Internet Explorer and connect to the RMX.

If the problem persists, continue with the next step.

Procedure 2: Deleting the Temporary Internet Files, RMX Cookie and RMX Object


To delete the Temporary files:

- 1 In the *Internet Explorer*, click **Tools > Internet Options**.
The *Internet Options* dialog box opens.
- 2 In the *Browsing history* pane, click the **Delete** button.

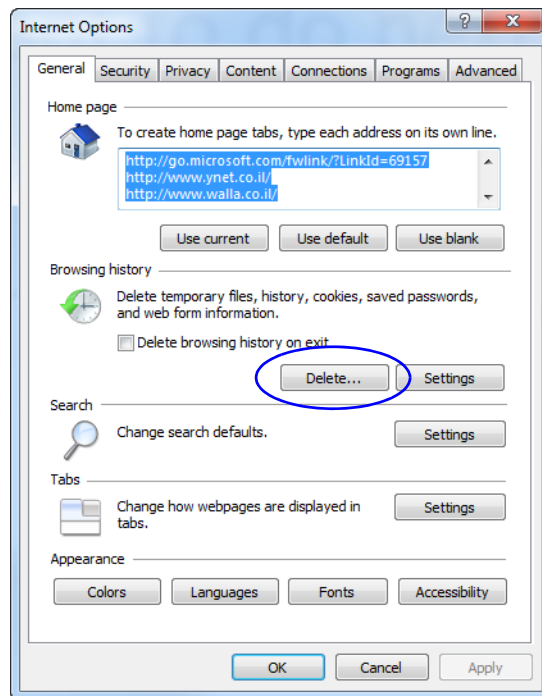


The *Delete Browsing History* dialog box opens.

- 3 It is recommended to delete only the **Temporary Internet files**. By default, the **Cookies** option is also selected. Clear it if you do not want to clear the cookies from your computer.

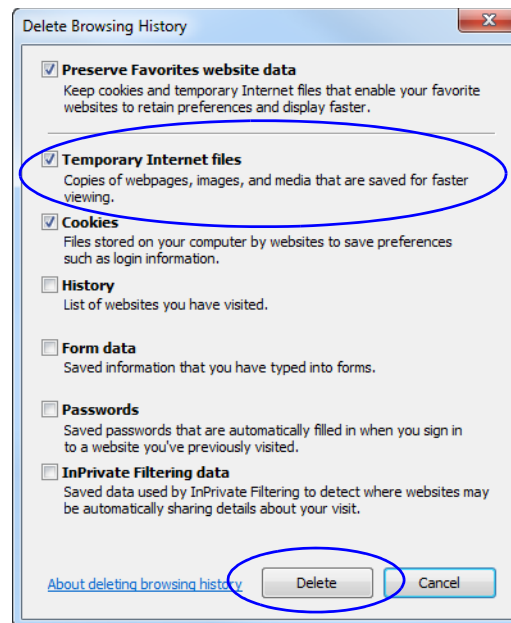


- 4 Click the **Delete** button.
- 5 When the process is complete, the system return to the *Internet Options* dialog box.
- To delete the RMX Cookie:
- 6 In the *Internet Options* dialog box - *Browsing History* pane, click the **Settings** button.

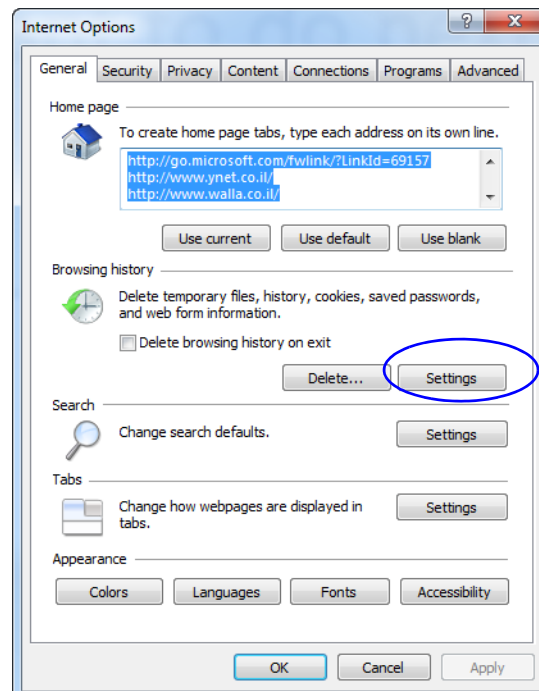


The *Temporary Internet Files and History Settings* dialog box opens.

- 7 Click the **View files** button.

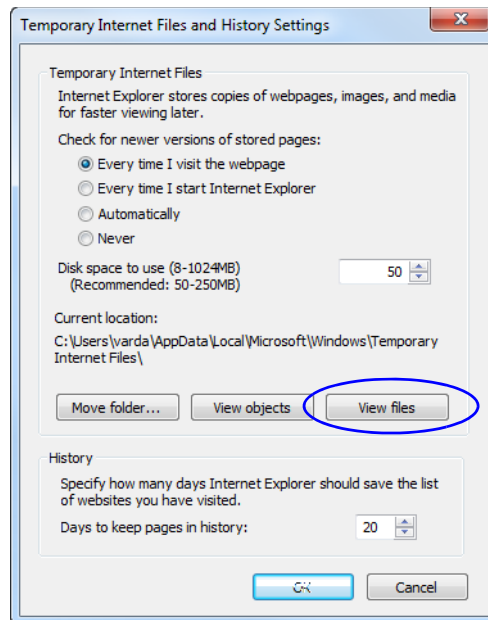

The Windows Explorer screen opens, listing Windows *Temporary Internet Files*.

- 8 Browse to the RMX cookie.
The cookie is listed in the format: **cookie:user name@RMX IP address**. For example: **cookie:valerie@172.22.189.110**.
- 9 Right-click the RMX cookie and click **Delete**.

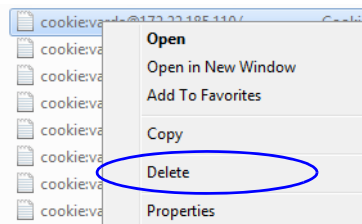


The system prompts for confirmation.

- 10 Click **Yes**.
The cookie is deleted.
- 11 Close the Windows Explorer screen.


To delete the RMX ActiveX Object:

- 12** In the *Temporary Internet Files and History Settings* dialog box, click the **View objects** button.

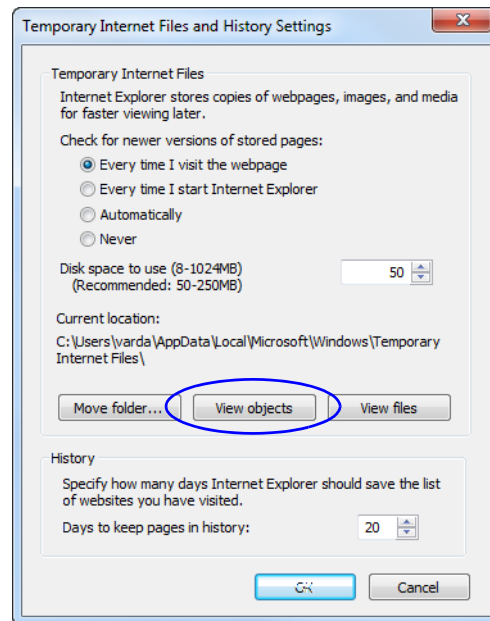

The Windows Explorer screen opens, listing the Windows *Downloaded Program Files*.

- 13** Right-click the **EMA.ClassLoader.dll** and then click **Delete**.

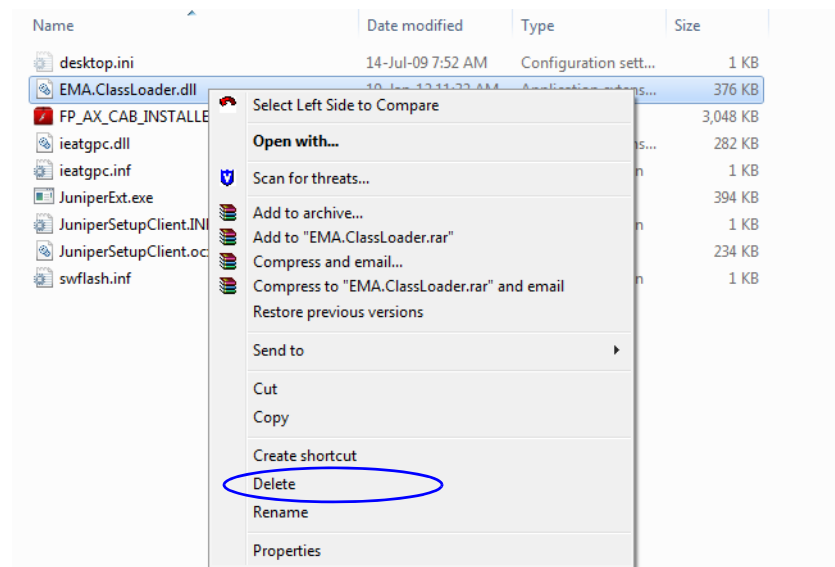

The system prompts for confirmation.

- 14** Click **Yes**.
The RMX object is deleted.
- 15** Close the Windows Explorer screen.
- 16** In the *Temporary Internet Files and History Settings* dialog box, click **OK**.
- 17** In the *Internet Options* dialog box, click **OK** to close it.

18 Close the Internet Explorer session and reopen it.

19 Connect to the RMX system.

If the problem persists, continue with the next step.


Procedure 3: Managing Add-ons Collisions

In some cases, a previously installed add-ons, such as anti virus programs can prevent the installation of a new add on. In some cases, disabling these add-ons is required in order to install the RMX Web Client.

To disable an add-on:

- 1** In the *Internet Explorer*, click **Tools > Manage Add-ons**.
The *Manage Add-ons - Toolbars and Extensions* dialog box opens.
- 2** Scroll to the add-on to disable (for example, the anti virus add-on), right-click it and then click **Disable**.

Alternatively, select the add-on and click the **Disable** button.

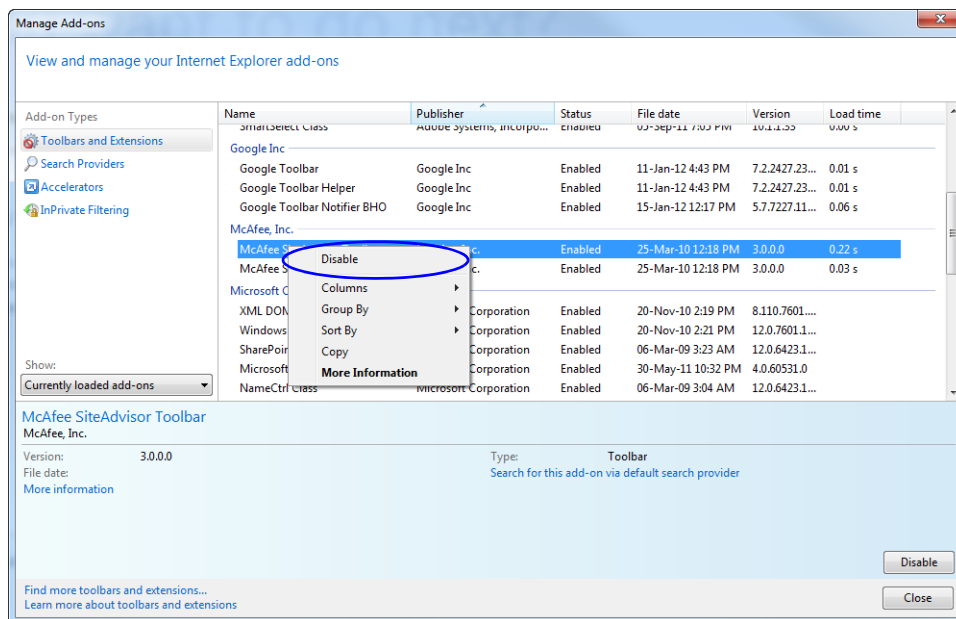

- 3** Click the **Close** button to close this dialog box.

- 4** Connect to the RMX system.